

# Genuine Spare Parts

www.stiga.com

## VILLA HST Model Year 2011

includes:

 
 
 
 
 
 
 
 
 
- 13-2729-15 Villa 12 HST
- 13-2729-35 Villa 12 HST (FR)
- 13-2718-14 Villa 14 HST
- 13-2718-34 Villa 14 HST (FR)
- 13-2728-14 Villa Silent
- 13-2728-34 Villa Silent (FR)

- Use GLOBAL GARDEN PRODUCT Genuine Spare Parts specified in the parts list for repair and/or replacement.
- The contents described in the parts list may change due to improvement.
- The drawings of the spare parts are only indicative and might not represent the part in question exactly.
- The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair and/or replacement, make sure that the illustrated parts list is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.









COPYRIGHT by GLOBAL GARDEN PRODUCTS

All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from GLOBAL GARDEN PRODUCTS.




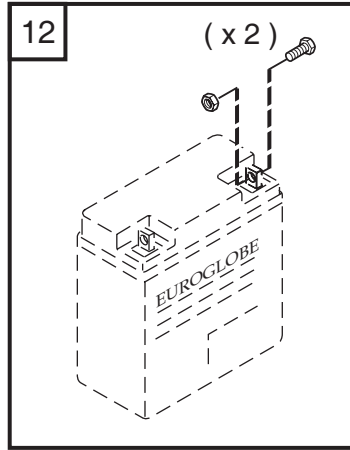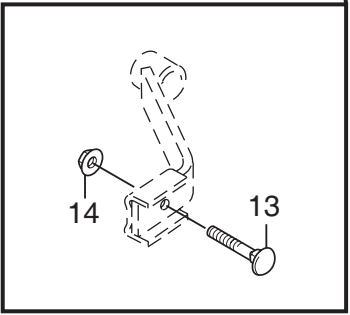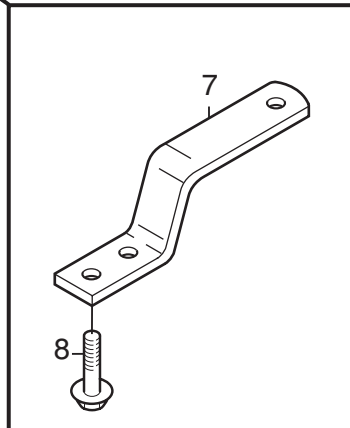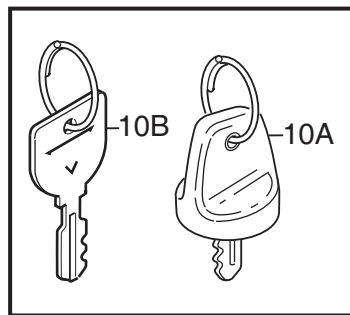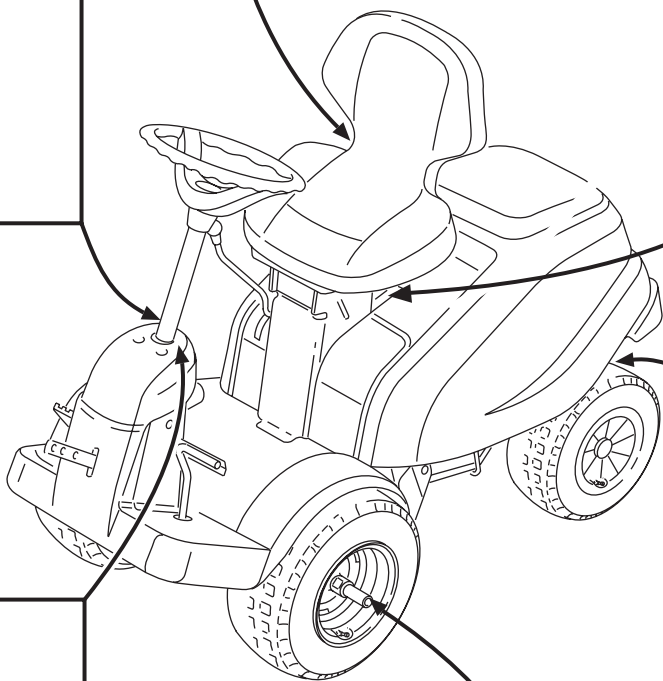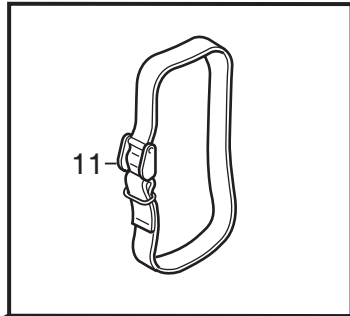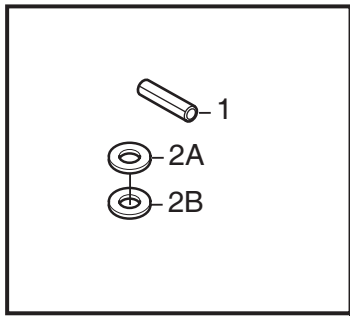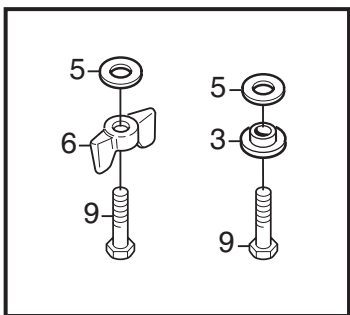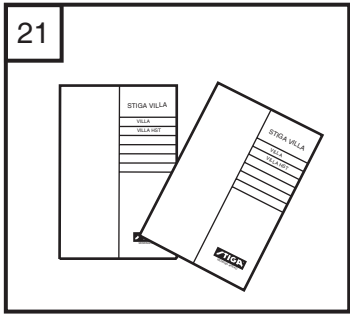


Utgåva Issue		Bildnr Picture No		VILLA HST MONTERINGSDETALJER		VILLA HST ASSEMBLY PARTS		Sida Page	
2011-11		2196A						288	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2718 2728 2729	2718 2728 FR							
1	1	1		9595-0262-00	Spännstift .....	Locating pin .....			
2A	1	1		9699-0103-02	Shims .....	Flat washer .....		0.5 mm	
2B	1	1		9699-0114-02	Shims .....	Flat washer .....		1.0 mm	
3	2	2		1134-4185-01	Ansatsbricka .....	Flange washer .....			
5	4	4		9699-0056-02	Planbricka .....	Flat washer .....			
6	2	2		1134-4481-01	Vingmutter .....	Wing nut .....			
7	1	1		1134-4627-01	Dragögla .....	Tow bar .....			
8	2	2		9959-0820-16	Skruv .....	Screw .....			
9	4	4		9997-0820-16	Skruv .....	Screw .....			
10A	1	1		1134-4734-01	Tändningsnyckel .....	Ignition key .....			
10B	1	1		1134-6125-01	Tändningsnyckel .....	Ignition key .....			
11	1	1		1134-5245-01	Batterirem .....	Battery strap .....			
12	1	1		1134-6113-01	Batteriskruvar .....	Battery screws .....			
13	2	2		9898-1035-16	Skruv .....	Screw .....			
14	2	2		9739-1031-22	Mutter .....	Nut .....			
X X X X X X	21	1		8211-0011-10	Bruksanvisning .....	Owner's manual .....			
	21	1		8211-0049-10	Bruksanvisning .....	Owner's manual .....		France	
	21	1		8211-0603-10	Monteringsanvisning .....	Assy instructions .....			
	21	1		8211-0701-10	Säkerhetsföreskrifter .....	Safety regulations .....			
	21	1	1	8211-0960-10	Garantikort .....	Warranty card .....			

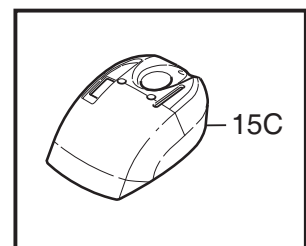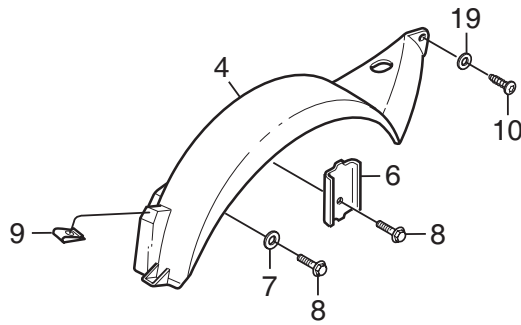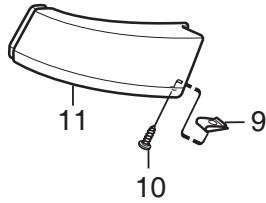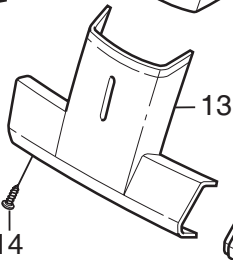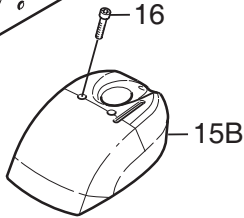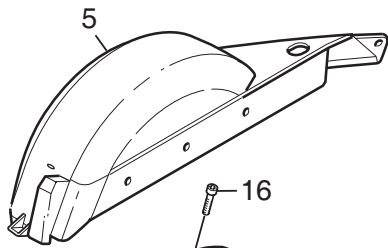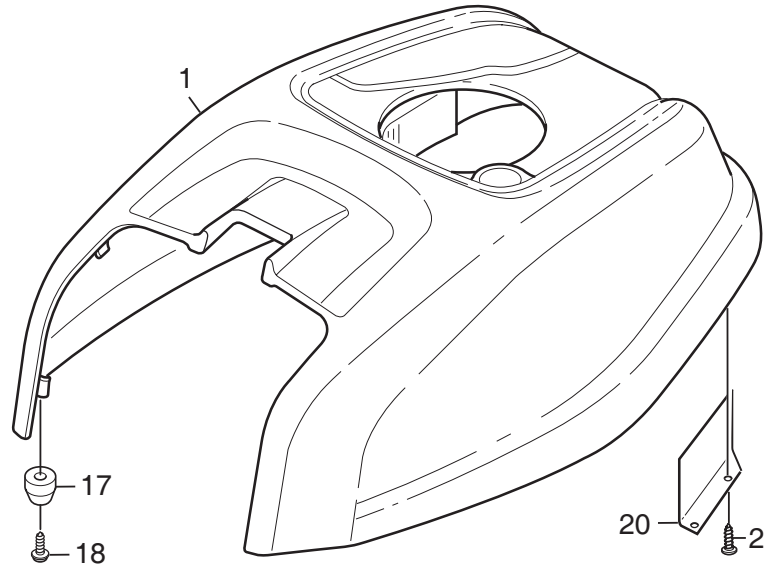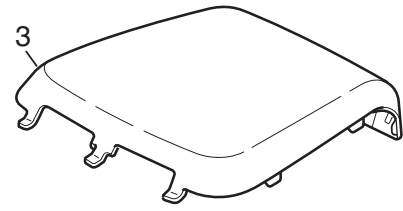        

Utgåva Issue		Bildnr Picture No		VILLA HST KAROSS		VILLA HST BODY WORK		Sida Page	
2011- 11		2197A						290	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2729	2718	2728						
1	1	1	1	1134-5283-02	Motorhuv- gul .....	Engine hood- yellow .....			
2	7	7	7	9838-9530-12	Skruv .....	Screw .....			
3	1	1	1	1134-5284-02	Motorlucka- grå .....	Engine cover- grey .....			
4	1	1	1	1134-5307-01	Stänkskärm- vä, grå .....	Mud guard- LH, grey .....			
5	1	1	1	1134-5307-02	Stänkskärm- hö, grå .....	Mud guard- RH, grey .....			
6	2	2	2	1137-0088-01	Stödplåt .....	Support plate .....			
7	4	4	4	9699-0056-02	Planbricka .....	Flat washer .....			
8	6	6	6	9945-0816-16	Skruv .....	Screw .....			
9	4	4	4	1134-4176-01	Clips .....	Clips .....			
10	4	4	4	9893-0616-16	Skruv .....	Screw .....			
11	1	1	1	1134-5306-01	Stötfångare, front- vä .....	Bumper, front- LH .....			
12	1	1	1	1134-5306-02	Stötfångare, front- hö .....	Bumper, front- RH .....			
13	1	1	1	1134-5305-01	Front- nedre .....	Front plate- lower .....			
14	6	6	6	9893-0616-16	Skruv .....	Screw .....			
15B	1	1		1134-5320-02	Front- övre .....	Front- upper .....			
15C			1	1134-5320-05	Front- övre .....	Front- upper .....			
16	2	2	2	9946-0525-16	Skruv .....	Screw .....			
17	2	2	2	1134-4790-02	Styrning .....	Hood guide .....			
18	2	2	2	9838-9530-12	Skruv .....	Screw .....			
19	2	2	2	9699-0060-02	Planbricka .....	Flat washer .....			
20			1	1134-6199-01	Deflektor .....	Deflector .....			
99	1			1134-6426-01	Dekalsats .....	Label kit .....		Villa 12	
99		1		1134-6426-02	Dekalsats .....	Label kit .....		Villa 14 HST	


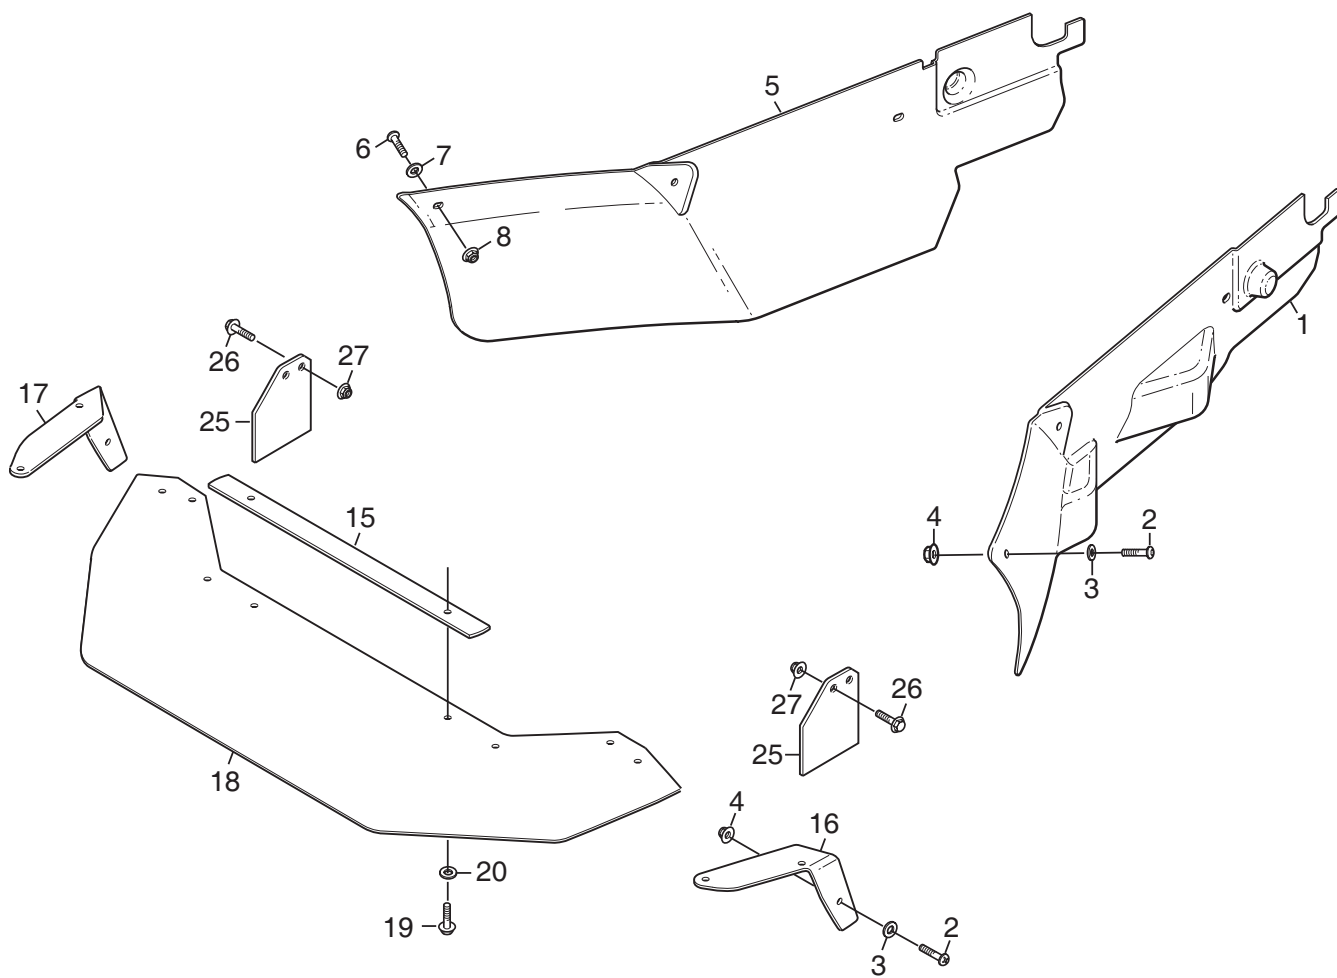 


Utgåva Issue 2011-11		Bildnr Picture No 2819		VILLA HST KAROSS (Frankrike)		VILLA HST BODY WORK (France)		Sida Page 292	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2718	2728	2729	FR					
X	1	1			1137-0226-02	Sidoskydd-vä .....	Side guard- LH .....		
	2	2			9893-0616-16	Skruv .....	Screw .....		
	3	2			9699-0060-02	Planbricka .....	Flat washer .....		
	4	2			9739-0631-22	Mutter .....	Nut .....		
X	5	1			1137-0248-02	Sidoskydd-hö .....	Side guard- RH .....		
	6	2			9893-0616-16	Skruv .....	Screw .....		
	7	2			9699-0060-02	Planbricka .....	Flat washer .....		
	8	2			9739-0631-22	Mutter .....	Nut .....		
X	15	1			1137-0229-01	Fäste .....	Bracket .....		
X	16	1			1137-0230-01	Fäste-vä .....	Bracket- LH .....		
X	17	1			1137-0230-02	Fäste-hö .....	Bracket- RH .....		
X	18	1			1137-0228-02	Gummiduk .....	Rubber sheet .....		
	19	2			9959-0620-16	Skruv .....	Screw .....		
	20	2			9699-0060-02	Planbricka .....	Flat washer .....		
X	25	2			1137-0231-01	Skydd .....	Guard .....		
	26	2			9959-0820-16	Skruv .....	Screw .....		
	27	2			9739-0831-22	Mutter .....	Nut .....		


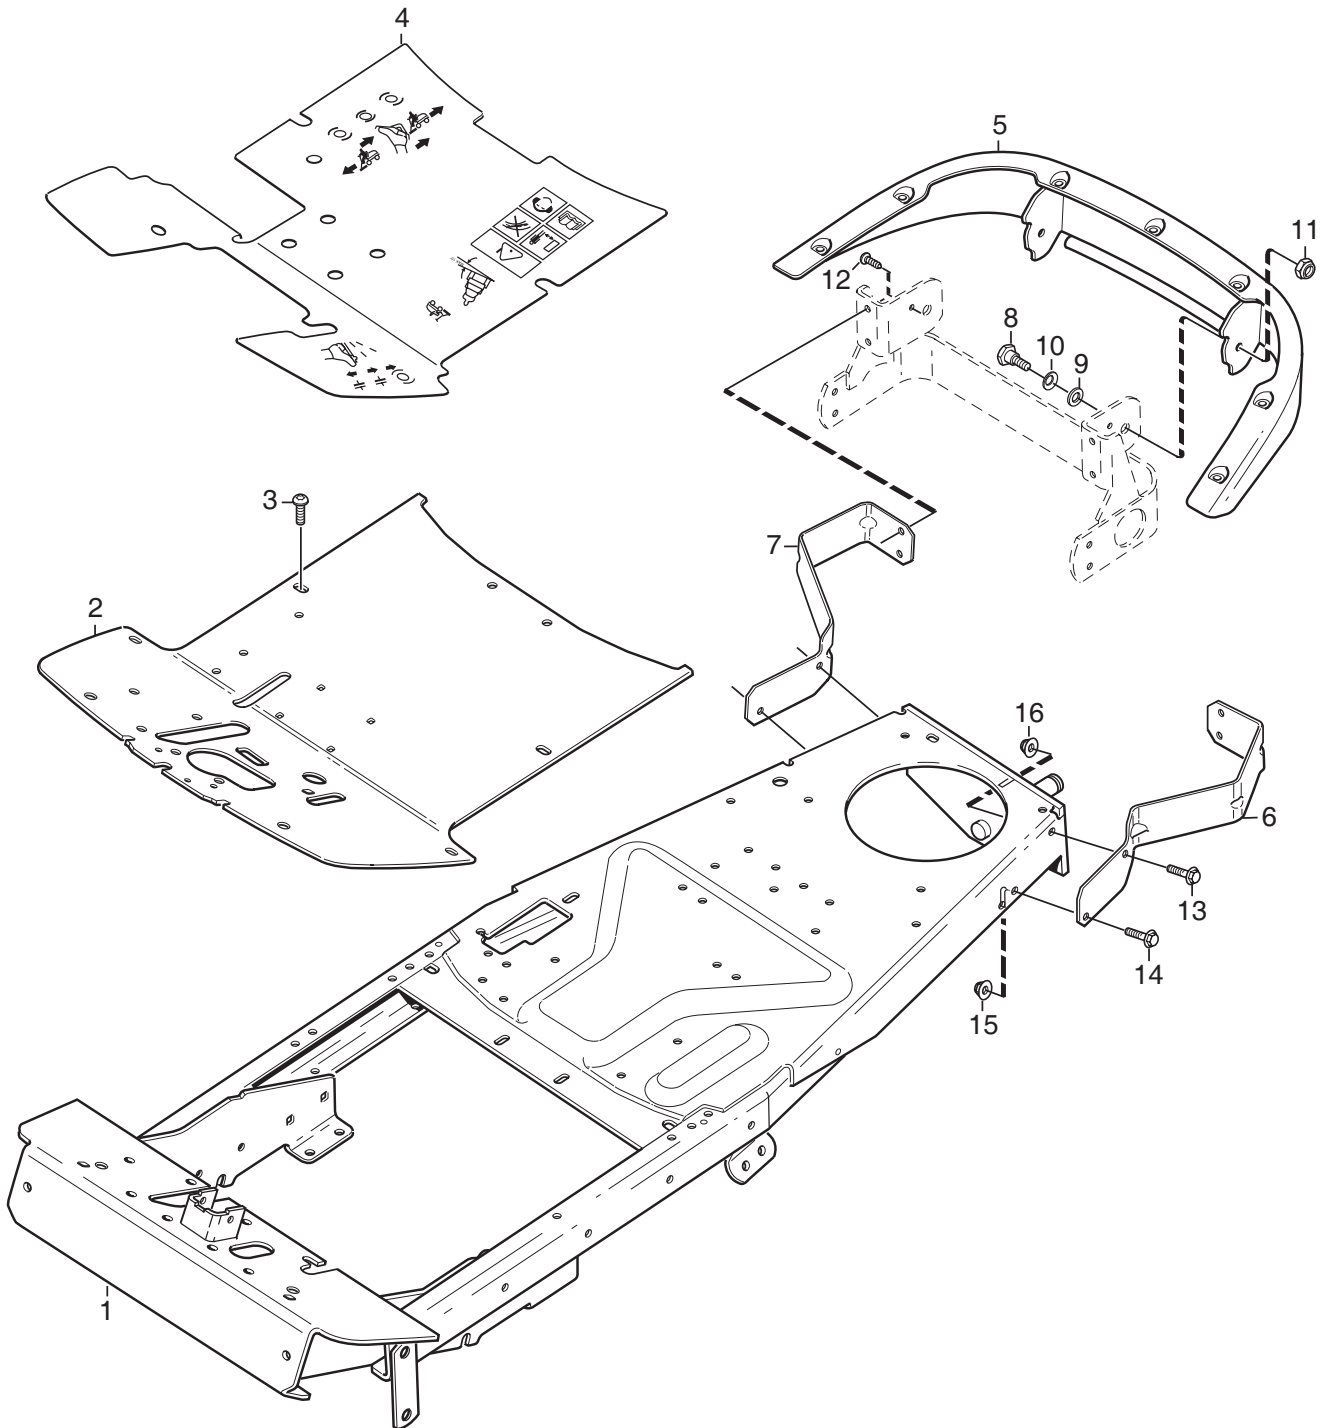 







Utgåva Issue		Bildnr Picture No		VILLA HST RAM		VILLA HST FRAME		Sida Page	
2011-11		1642B						294	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2718	2728	2729						
1	1				1134-6635-01 Ram.....	Frame.....			
2	1				1134-5293-01 Durk.....	Floor plate.....			
3	2				9893-0616-16 Skruv.....	Screw.....			
4	1				1134-5339-03 Durkmatta.....	Floor mat.....			
5	1				1134-5453-03 Stötfångare- bak, grå.....	Bumper- rear, grey.....			
6	1				1134-6630-01 Stag- vä.....	Attachment- LH.....			
7	1				1134-6630-02 Stag- hö.....	Attachment- RH.....			
8	2				1134-0240-00 Ansatsskruv.....	Shoulder screw.....			
9	2				1134-4242-01 Distansbricka.....	Spacer washer.....			
10	2				9694-0001-00 Fjäderbricka.....	Washer.....			
11	2				9747-0831-02 Mutter.....	Lock nut.....			
12	2				9943-0516-16 Skruv.....	Screw.....			
13	2				9959-0820-16 Skruv.....	Screw.....			L = 20 mm
14	2				9959-0825-16 Skruv.....	Screw.....			L = 25 mm
15	1				9739-0831-22 Mutter.....	Nut.....			
16	3				9739-0831-22 Mutter.....	Nut.....			

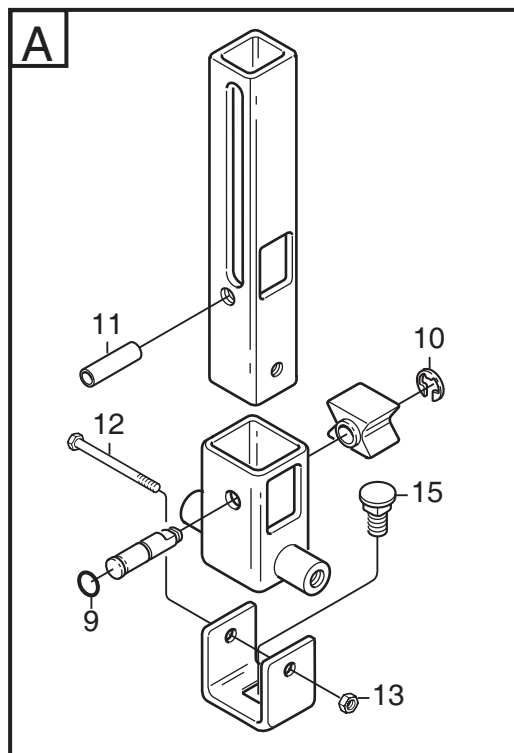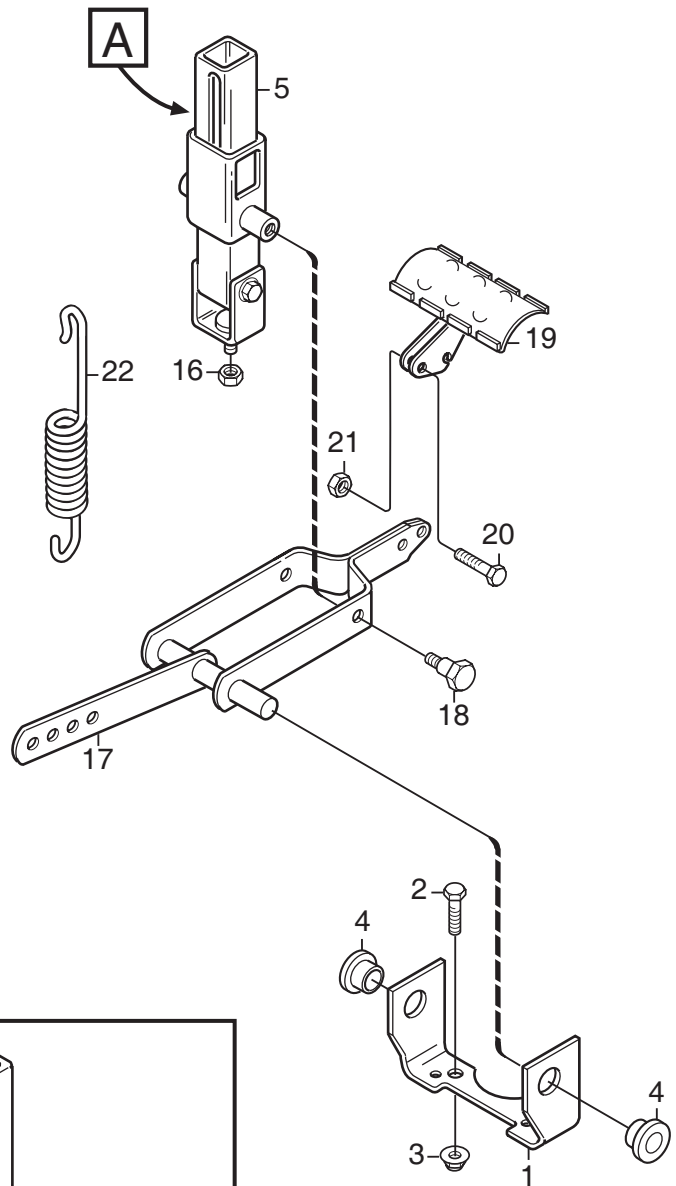  


Utgåva Issue		Bildnr Picture No		VILLA HST REDSKAPSLYFT		VILLA HST LIFTING DEVICE		Sida Page	
2011-11		1151C						296	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2718	2728	2729						
1	1				1134-4117-01 Fäste .....	Bracket .....			
2	2				9959-1025-16 Skruv .....	Screw .....			
3	2				9739-1031-22 Mutter .....	Nut .....			
4	2				1134-2684-01 Lager .....	Bearing .....			
5	1				1134-4945-01 Lyftspärr kpl .....	Lift catch assy .....			
9	1				9404-0027-01 • O-ring .....	• O-ring .....			
10	1				9650-0039-04 • Seegersäkring .....	• Lock ring .....			
11	1				9595-0276-01 • Spännstift .....	• Locating pin .....			
12	1				9997-0640-12 • Skruv .....	• Screw .....			
13	1				9747-0631-02 • Låsmutter .....	• Lock nut .....			
15	1				9897-0820-16 • Skruv .....	• Screw .....			
16	1				9747-0831-02 Mutter .....	Lock nut .....			
17	1				1134-4860-01 Lyftgaffel .....	Lift fork .....			
18	2				1134-0240-00 Ansätsskruv .....	Shoulder screw .....			
19	1				1134-4938-01 Lyftpedal .....	Lift pedal .....			
20	2				9997-0625-16 Skruv .....	Screw .....			
21	2				9739-0631-22 Mutter .....	Nut .....			
22	1				4231-0013-00 Fjäder .....	Spring .....			

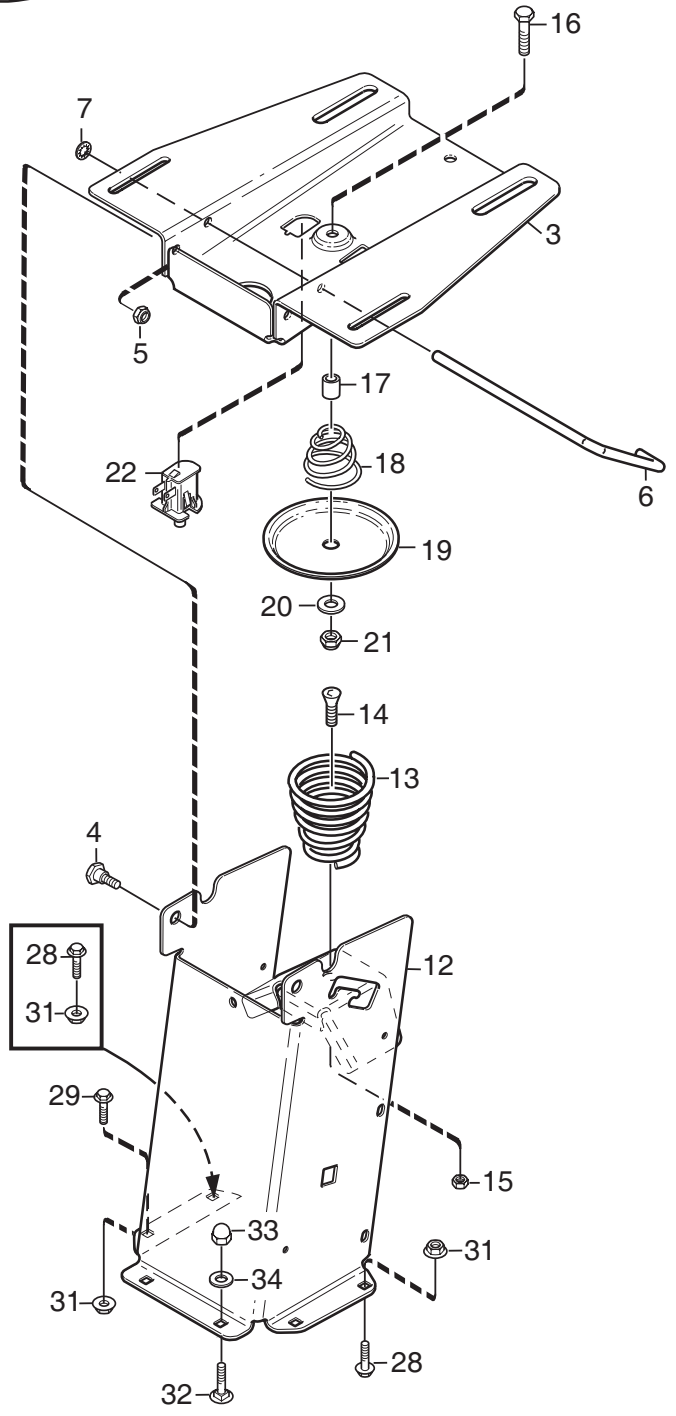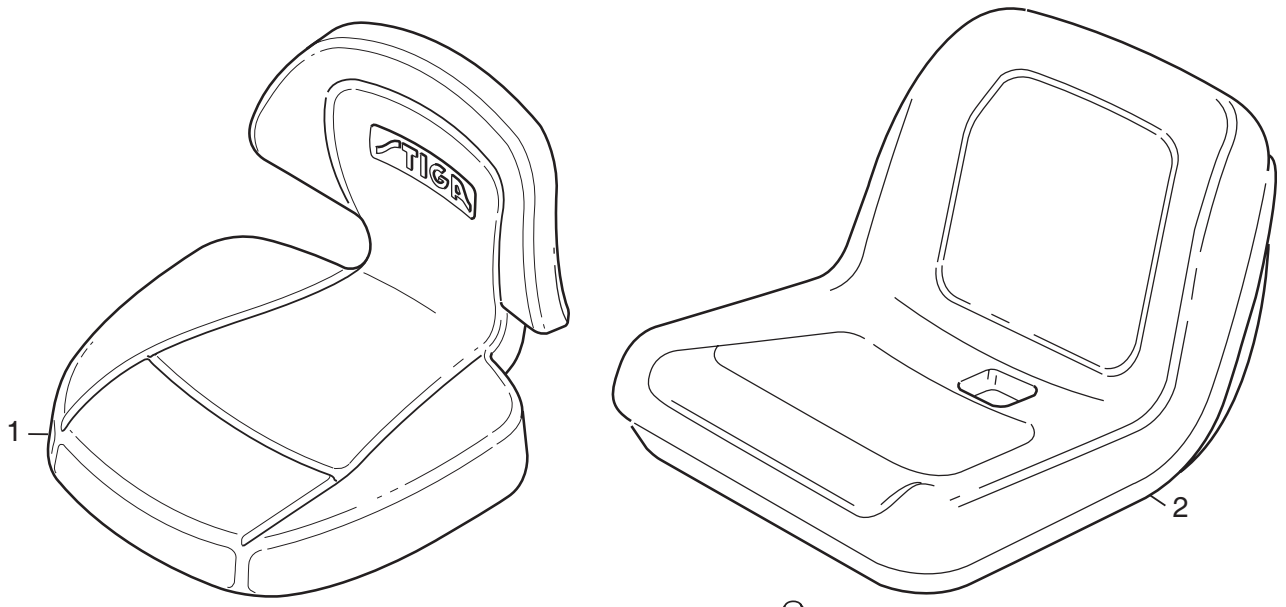  

Utgåva Issue		Bildnr Picture No		VILLA HST SITS		VILLA HST SEAT		Sida Page	
2011-11		2198A						298	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2729	2718 2728							
1	1			1134-5506-01	Sits .....	Seat .....			
2		1		1134-6444-01	Sits .....	Seat .....			
3	1	1		1134-5301-01	Sitsplatta .....	Seat plate .....			
4	2	2		1134-0240-00	Ansatssskruv .....	Shoulder screw .....			
5	2	2		9747-0831-02	Mutter .....	Lock nut .....			
6	1	1		1134-5454-01	Spärr .....	Catch .....			
7	1	1		9675-0012-02	Starlock .....	Locking washer .....			
12	1	1		1134-5296-04	Sitskonsol- gul .....	Seat bracket- yellow .....			
13	1	1		1134-4256-01	Sitsfjäder .....	Seat spring .....			
14	1	1		9924-1235-19	Skruv .....	Screw .....			
15	1	1		9747-1231-02	Låsmutter .....	Lock nut .....			
16	1	1		9997-0840-12	Skruv .....	Screw .....			
17	1	1		1134-1565-06	Distans .....	Spacer .....			
18	1	1		1134-5302-01	Fjäder .....	Spring .....			
19	1	1		1134-5299-01	Tryckplatta .....	Push plate .....			
20	1	1		9699-0090-02	Planbricka .....	Flat washer .....			
21	1	1		9747-0831-02	Mutter .....	Lock nut .....			
22	1	1		1134-3156-02	Brytare (grå) .....	Switch (grey) .....			
28	3	3		9959-0820-16	Skruv .....	Screw .....		L = 20 mm	
29	1	1		9959-0825-16	Skruv .....	Screw .....		L = 25 mm	
31	4	4		9739-0831-22	Mutter .....	Nut .....			
32	2	2		9897-0820-16	Skruv .....	Screw .....			
33	2	2		9757-0821-02	Hattmutter .....	Cap nut .....			
34	2	2		9699-0090-02	Planbricka .....	Flat washer .....			

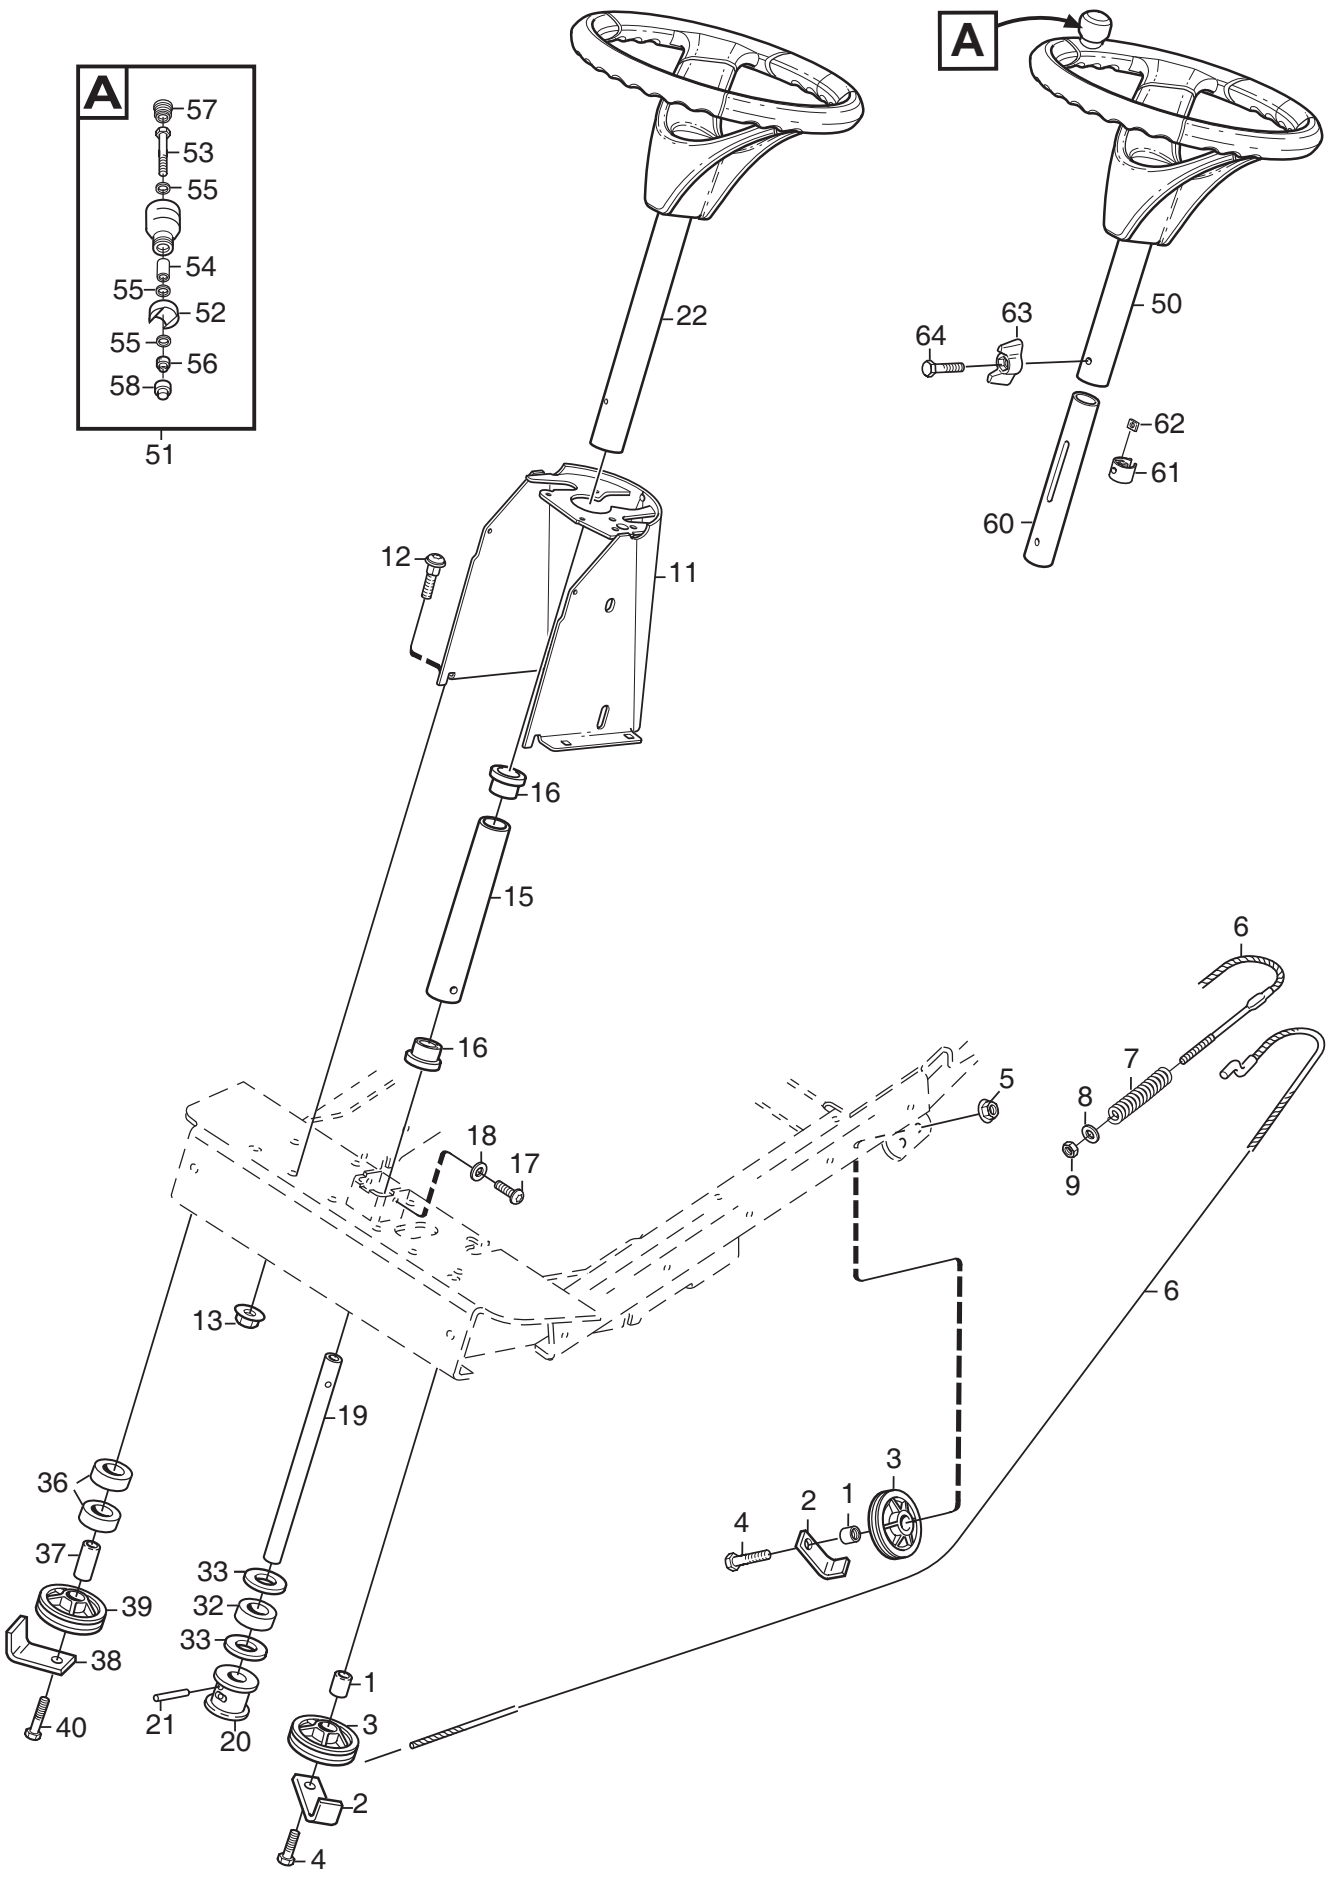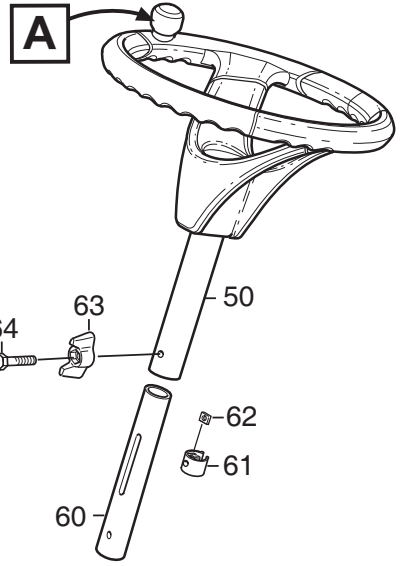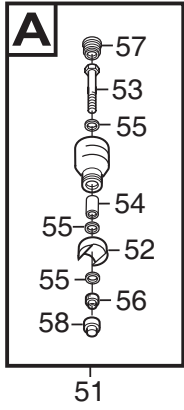   


Utgåva Issue		Bildnr Picture No		VILLA HST STYRNING		VILLA HST STEERING		Sida Page	
2011-11		2199B						300	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2729	2718 2728							
1	3	3		1134-0041-01	Linhjulshylsa .....	Bushing .....		Sats 2 st/kit of 2 L = 40 mm	
2	3	3		1134-0046-00	Linhållare .....	Wire clamp .....			
3	1	1		1134-9025-01	Linhjul- sats .....	Steering pulley- kit .....			
4	3	3		9997-1040-16	Skruv .....	Screw .....			
5	2	2		9739-1031-22	Mutter .....	Nut .....			
6	1	1		1134-9154-01	Styrwire .....	Steering cable .....			
7	1	1		1134-1310-01	Tryckfjäder .....	Compression spring .....			
8	1	1		9699-0056-02	Planbricka .....	Flat washer .....			
9	1	1		9747-0831-02	Mutter .....	Lock nut .....			
11	1	1		1134-5349-03	Styrkonsol- grå .....	Steering console- grey .....			
12	4	4		9897-0820-16	Skruv .....	Screw .....			
13	4	4		9739-0831-22	Mutter .....	Nut .....			
15	1	1		1134-1305-05	Rattrör- nedre .....	Steering column- lower .....			
16	2	2		1134-1901-01	Lager .....	Bearing .....			
17	2	2		9893-0616-16	Skruv .....	Screw .....			
18	2	2		9699-0060-02	Planbricka .....	Flat washer .....			
19	1	1		1134-5495-01	Rattstång .....	Steering rod .....			
20	1	1		1134-1933-01	Styrrulle .....	Steering pulley .....			
21	1	1		9595-0262-00	Spännstift .....	Locating pin .....			
22	1	1		1134-5496-01	Ratt .....	Steering wheel .....			
32	1	1		1134-3047-01	Distans .....	Spacer .....			
33	2	2		9699-0104-02	Bricka .....	Washer .....			
36	2	2		1134-3047-01	Distans .....	Spacer .....			
37	1	1		1134-0041-05	Hylsa .....	Bushing .....			
38	1	1		1134-0046-00	Linhållare .....	Wire clamp .....			
39	1	1		1134-9025-01	Linhjul- sats .....	Steering pulley- kit .....			
40	1	1		9997-1060-12	Skruv .....	Screw .....			
50		1		1134-6330-02	Ratt .....	Steering wheel .....			
51		1		1134-3769-01	• Styrknopp kpl .....	• Steering wheel button .....			
52		1		1134-3752-01	•• Knoppfäste .....	•• Knob holder .....			
53		1		9997-0870-16	•• Skruv .....	•• Screw .....			
54		1		1134-1565-06	•• Distans .....	•• Spacer .....			
55		3		9699-0090-02	•• Planbricka .....	•• Flat washer .....			
56		1		9747-0831-02	•• Mutter .....	•• Lock nut .....			
57		1		9403-0043-70	•• Plugg .....	•• Plug .....			
58		1		9403-0113-00	•• Mutterhatt .....	•• Nut cap .....			
60		1		1134-5216-02	Rattrör- inre .....	Steering tube- inner .....			
61		1		1134-5177-01	• Slid .....	• Slide .....			
62		1		9710-0631-12	• Fyrkantmutter .....	• Square nut .....			
63		1		1134-4481-02	Vingmutter .....	Wing nut .....			
64		1		9997-0630-12	Skruv .....	Screw .....			
								Sats 2 st/kit of 2 L = 60 mm	




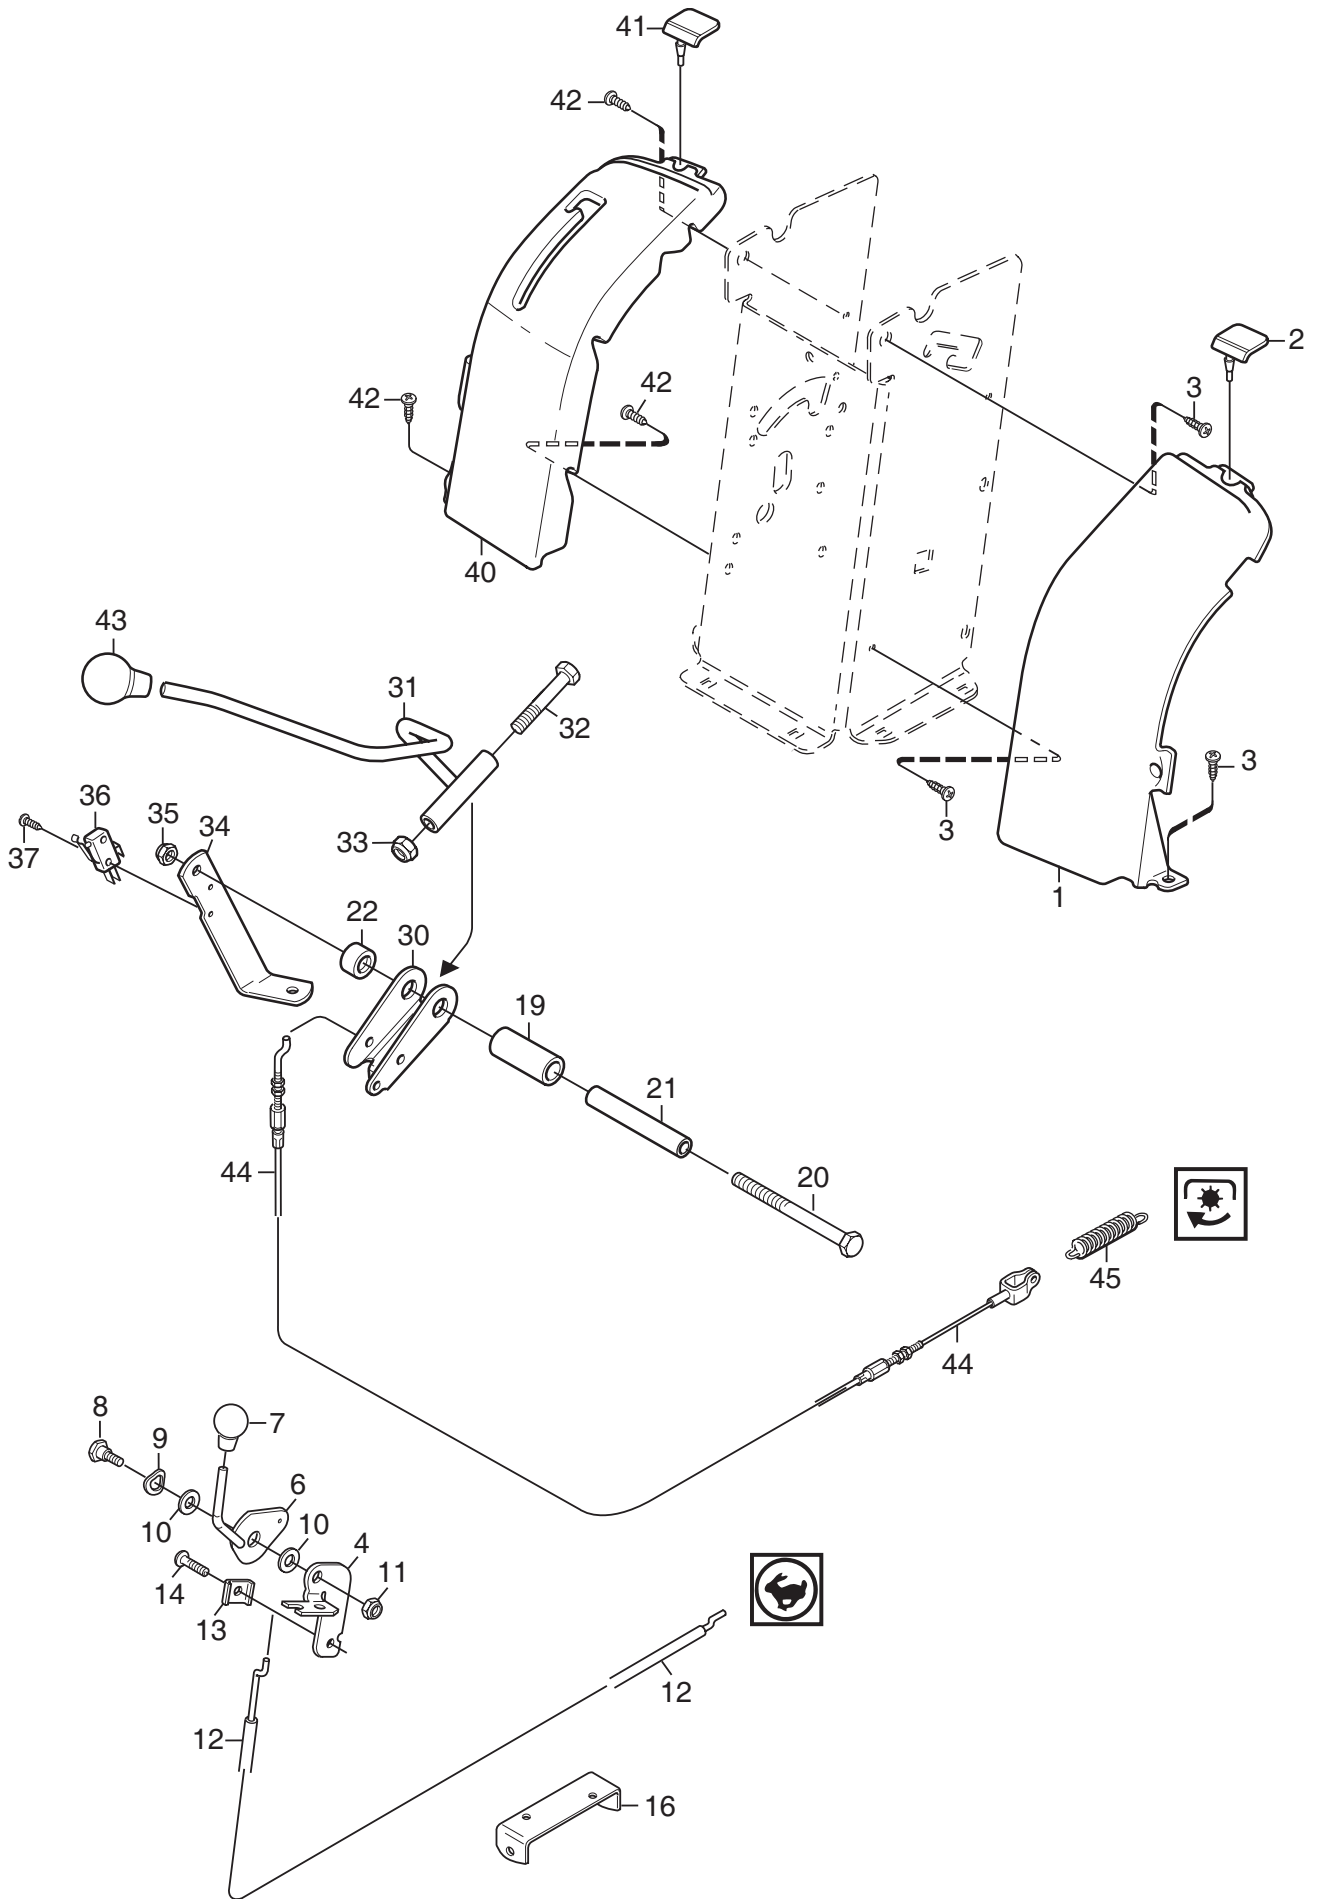 






Utgåva Issue		Bildnr Picture No		VILLA HST HANDREGLAGE		VILLA HST HAND CONTROLS		Sida Page	
2011- 11		2201						302	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2718 2729	2728							
1	1	1		1134-5286-04	Reglagepanel- vä .....	Control panel- LH .....			
2	2	2		1134-5531-01	Dämpare .....	Absorber .....			
3	3	3		9893-0616-16	Skruv .....	Screw .....			
4	1	1		1134-5464-01	Fäste .....	Bracket .....			
6	1	1		1134-5465-01	Gasreglage .....	Throttle lever .....			
7	1	1		1134-4078-01	Knopp .....	Knob .....			
8	1	1		1134-0240-00	Ansatssskruv .....	Shoulder screw .....			
9	1	1		9694-0001-00	Fjäderbricka .....	Washer .....			
10	2	2		1134-4242-01	Distansbricka .....	Spacer washer .....			
11	1	1		9747-0831-02	Mutter .....	Lock nut .....			
12	1			1134-4197-03	Gaswire .....	Throttle cable .....			
12		1		1134-4197-05	Gaswire .....	Throttle cable .....			
13	1	1		9500-9991-00	Wireklämma .....	Cable clamp .....			
14	1	1		9943-0516-16	Skruv .....	Screw .....			
16	1	1		1134-6370-01	Wirestyrning .....	Wire guide .....			
19	1	1		1134-5508-01	Reglagehylsa .....	Control sleeve .....			
20	1	1		9997-0812-02	Skruv .....	Screw .....			
21	1	1		1134-5274-02	Distans .....	Spacer .....			
22	1	1		1134-3047-01	Distans .....	Spacer .....			
30	1	1		1134-5271-01	Reglagefäste .....	Control bracket .....			
31	1	1		1134-5276-01	Reglagespak .....	Control lever .....			
32	1	1		9997-0890-12	Skruv .....	Screw .....			
33	1	1		9747-0831-02	Mutter .....	Lock nut .....			
34	1	1		1134-5356-01	Stag .....	Strut .....			
35	1	1		9747-0831-02	Mutter .....	Lock nut .....			
36	1	1		9400-0360-01	Mikrobrytare .....	Micro switch .....			
37	2	2		9840-7716-16	Skruv .....	Screw .....			
40	1	1		1134-5285-02	Reglagepanel- hö .....	Control panel- RH .....			
41	2	2		1134-5531-01	Dämpare .....	Absorber .....			
42	4	4		9893-0616-16	Skruv .....	Screw .....			
43	1	1		1134-2551-01	Reglageknopp .....	Knob .....			
44	1	1		1134-3573-06	Kraftuttagswire .....	PTO cable .....			
45	1	1		1134-1242-02	Fjäder .....	Spring .....			

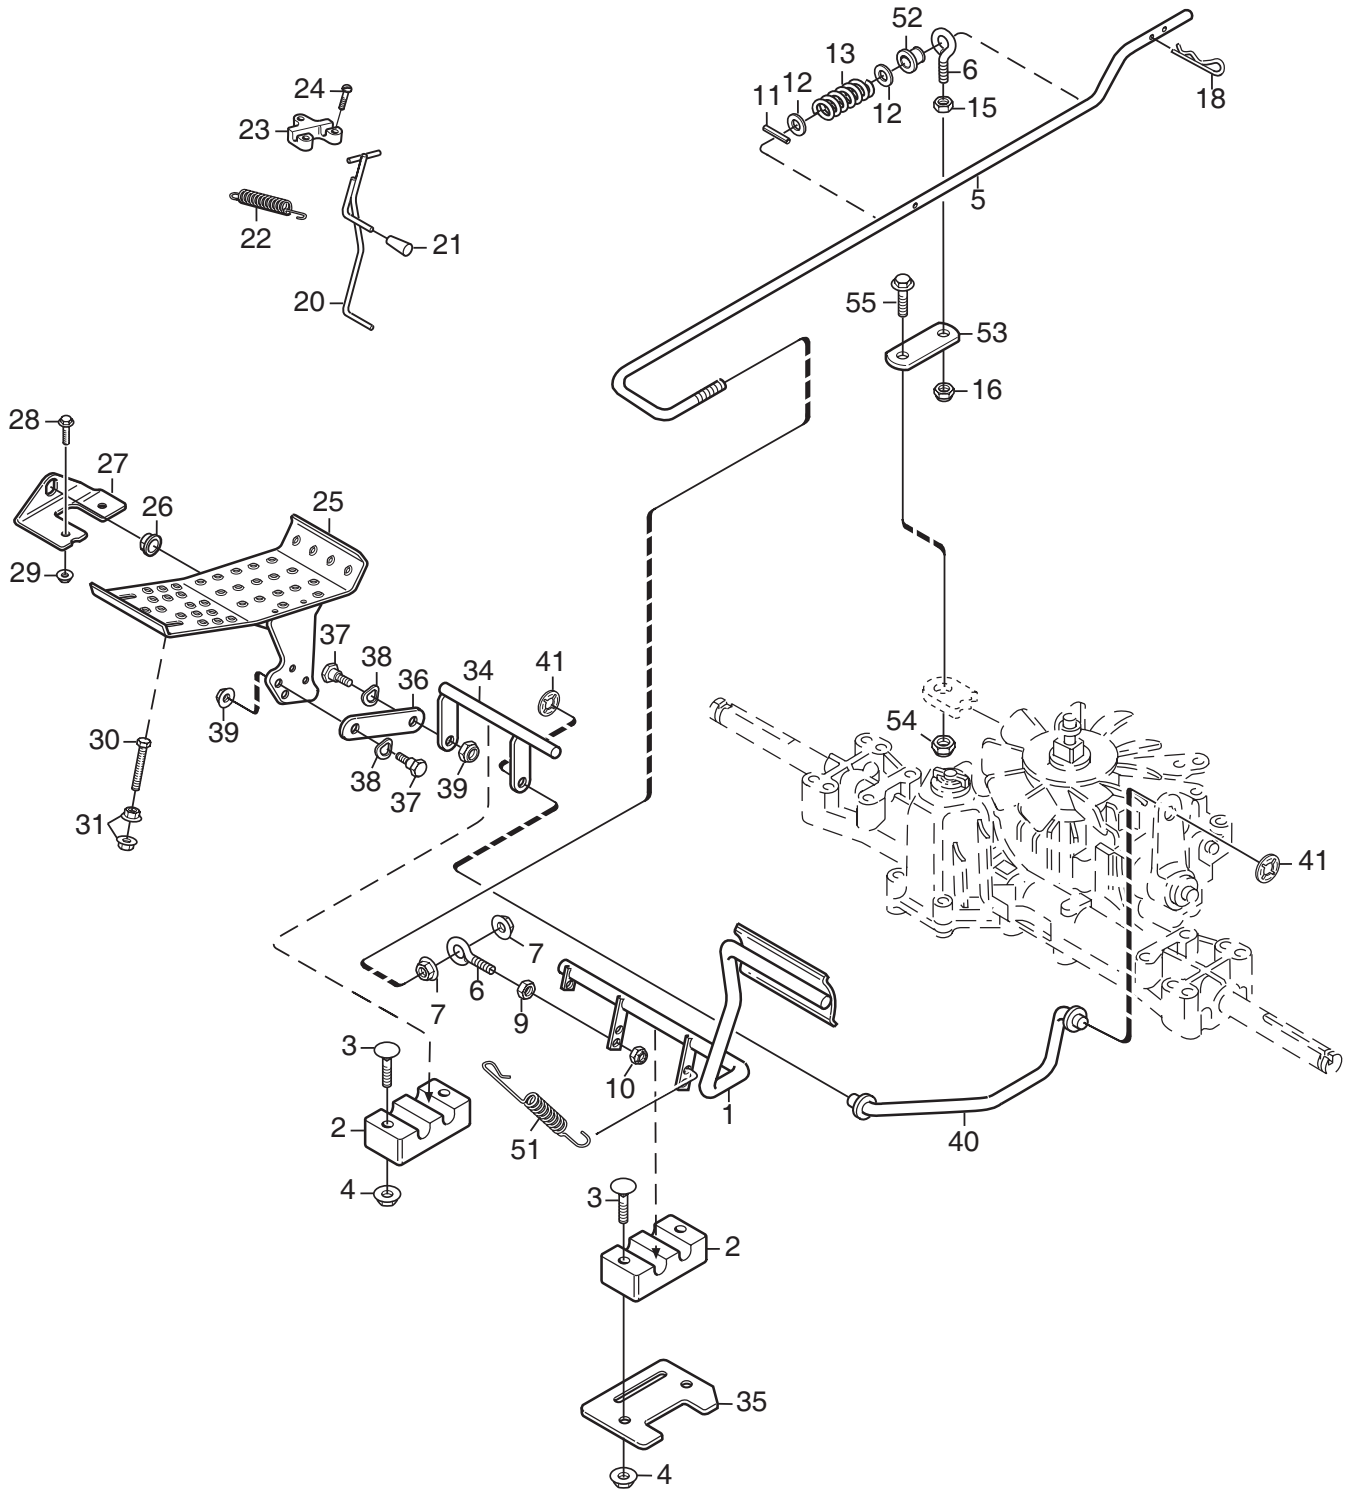 

Utgåva Issue		Bildnr Picture No		VILLA HST FOTREGLAGE		VILLA HST FOOT CONTROLS		Sida Page	
2011-11		1645B						304	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2718	2728	2729						
1	1				1134-4802-01	Pedal .....	Pedal .....		
2	2				1134-4624-01	Lager .....	Bearing .....		
3	4				9897-0640-12	Skruv .....	Screw .....		
4	4				9739-0631-22	Mutter .....	Nut .....		
5	1				1134-4949-01	Kopplingsstång .....	Clutch rod .....		
6	2				1134-2138-01	Skruvögla .....	Eye bolt .....		
7	2				9739-1031-22	Mutter .....	Nut .....		
9	1				9739-0831-22	Mutter .....	Nut .....		
10	1				9747-0831-02	Mutter .....	Lock nut .....		
11	1				9595-0208-00	Spännstift .....	Locating pin .....		
12	2				9699-0035-02	Planbricka .....	Flat washer .....		
13	1				1134-4617-01	Fjäder .....	Spring .....		
15	1				9739-0831-22	Mutter .....	Nut .....		
16	1				9747-0831-02	Mutter .....	Lock nut .....		
18	1				9598-0002-02	Låsnål .....	Pin lock .....		
20	1				1134-5353-01	Bromstång .....	Brake rod .....		
21	1				1134-2786-01	Plastknopp .....	Plastic knob .....		
22	1				1131-1497-01	Fjäder .....	Spring .....		
23	1				1134-4002-01	Fäste .....	Brake rod attachment .....		
24	3				9838-9516-12	Skruv .....	Screw .....		
25	1				1134-6353-01	Drivpedal .....	Drive pedal .....		
26	2				1134-6313-01	Lager .....	Bearing .....		
27	2				1134-2700-01	Fäste .....	Bracket .....		
28	2				9959-0820-16	Skruv .....	Screw .....		
29	2				9739-0831-22	Mutter .....	Nut .....		
30	1				9997-0860-16	Skruv .....	Screw .....		
31	2				9739-0831-22	Mutter .....	Nut .....		
34	1				1134-4440-01	Axel .....	Shaft .....		
35	1				1134-4793-01	Stopplåt .....	Stop plate .....		
36	1				1134-4441-01	Stag .....	Link .....		
37	2				1134-0240-00	Ansatsskruv .....	Shoulder screw .....		
38	2				9694-0001-00	Fjäderbricka .....	Washer .....		
39	2				9747-0831-02	Mutter .....	Lock nut .....		
40	1				1134-5288-01	Reglagestång .....	Control rod .....		
41	2				9675-0012-02	Starlock .....	Locking washer .....		
51	1				4231-0013-00	Fjäder .....	Spring .....		
52	1				1134-4779-01	Plastbusning .....	Plastic bushing .....		
53	1				1134-4972-01	Bromslänk .....	Brake link .....		
54	1				9747-0831-02	Mutter .....	Lock nut .....		
55	1				9997-0820-16	Skruv .....	Screw .....		

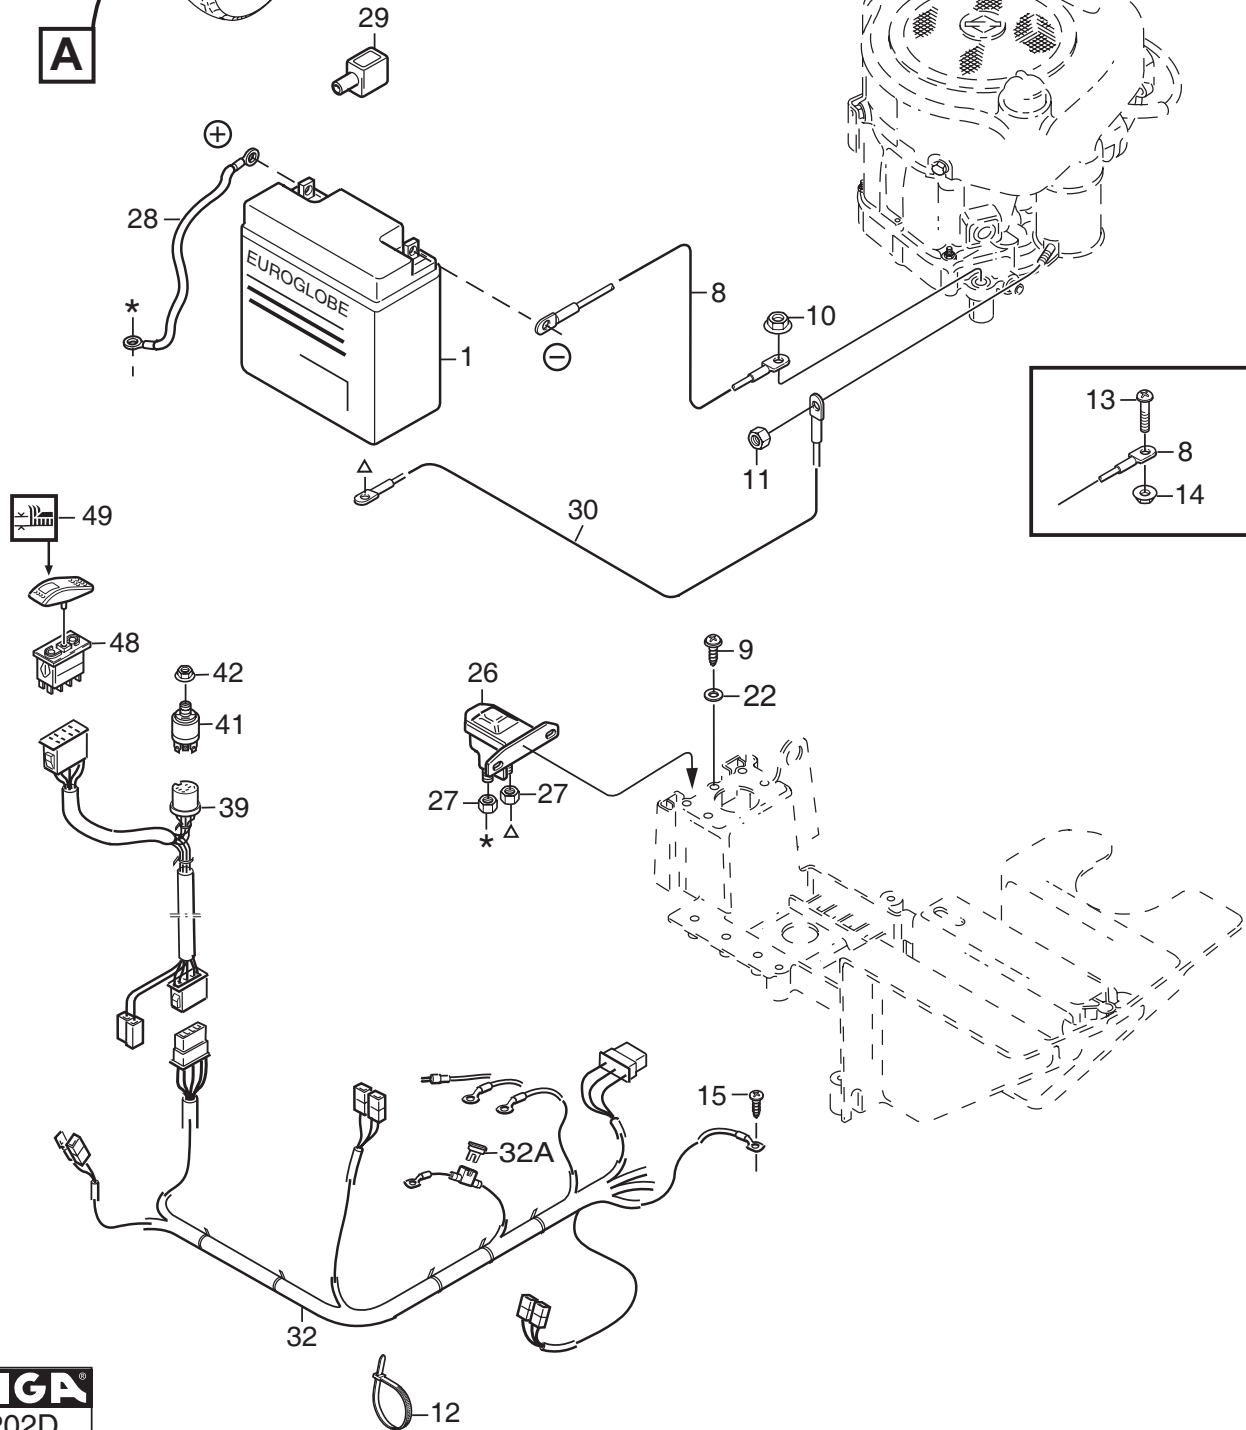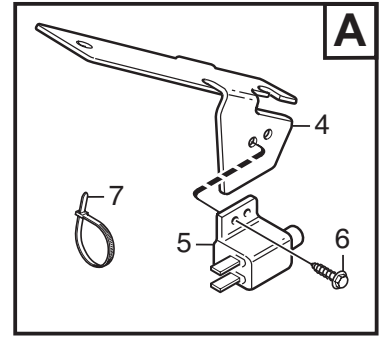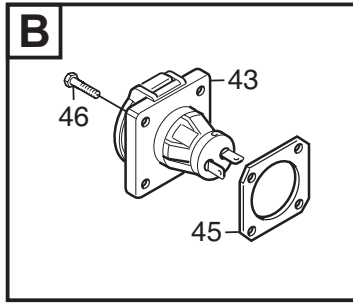   
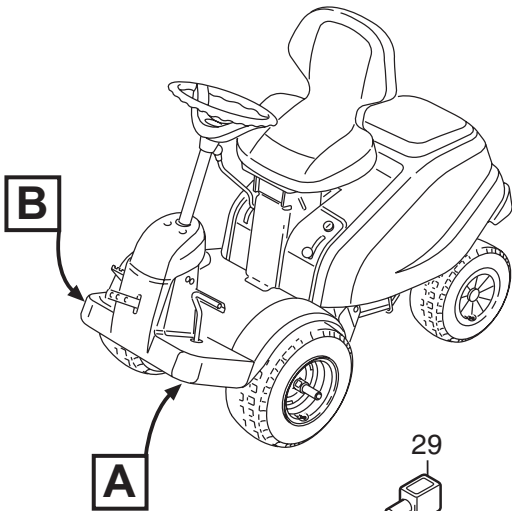 


Utgåva Issue 2011-11		Bildnr Picture No 2202D		VILLA HST ELUTRUSTNING		VILLA HST EL. EQUIPMENT		Sida Page 306	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2729	2718	2728						
1	1	1	1	1134-4804-01	Batteri.....	Battery .....		18 Ah	
4	1	1	1	1134-4610-01	Fäste.....	Switch bracket .....			
5	1	1	1	1134-3399-02	Brytare.....	Switch.....			
6	2	2	2	9852-8013-16	Skruv.....	Screw.....			
7	3	3	3	9579-0003-00	Buntband.....	Cable holder .....			
8	1	1	1	1134-2042-02	Kabel- svart.....	Cable- black.....		L = 350 mm	
9	1	1	1	9838-9516-12	Skruv.....	Screw .....			
10	1	1	1	9747-0831-02	Mutter.....	Lock nut.....			
11	1	1	1	9795-3531-02	Mutter.....	Nut.....		1/4 UNC	
12	3	3	3	9579-0003-00	Buntband.....	Cable holder .....			
13			1	9948-0630-16	Skruv.....	Screw.....			
14			1	9739-0631-22	Mutter.....	Nut.....			
15			1	9943-0516-16	Skruv.....	Screw.....			
22	1	1	1	9699-0060-02	Planbricka.....	Flat washer.....			
26	1	1	1	1134-2962-01	Solenoid kpl.....	Solenoid assy.....			
27	2	2	2	9794-5131-02	• Mutter.....	• Nut.....			
28	1	1	1	1134-0234-02	Batterikabel ( + ).....	Battery cable ( + ).....		L = 395 mm	
29	1	1	1	1134-2310-01	Batteriskydd.....	Guard cap .....			
30	1	1		1134-4702-02	Kabel- röd.....	Cable- red.....		L = 480 mm	
32	1	1		1134-6308-01	Kablage.....	Harness.....			
32			1	1137-0104-01	Kablage.....	Harness.....			
32A	1	1	1	1134-3496-06	• Säkring.....	• Fuse.....		20A	
39	1	1		1134-6348-01	Kablage.....	Harness.....			
39			1	1134-6442-01	Kablage.....	Harness.....			
41	1	1	1	1134-4093-01	Tändningslås.....	Ignition switch .....			
42	1	1	1	1134-4749-01	Mutter.....	Nut.....			
43			1	1134-7535-01	Honkontakt.....	Female terminal.....			
45			1	1134-4052-01	Stödbricka.....	Support washer.....			
46			2	9840-7716-16	Skruv.....	Screw.....			
48			1	9400-0282-01	Brytare m.diod.....	Switch w.diode.....			
49			1	9400-0280-03	Vippa- höjinställning.....	Cover- height adjust .....			

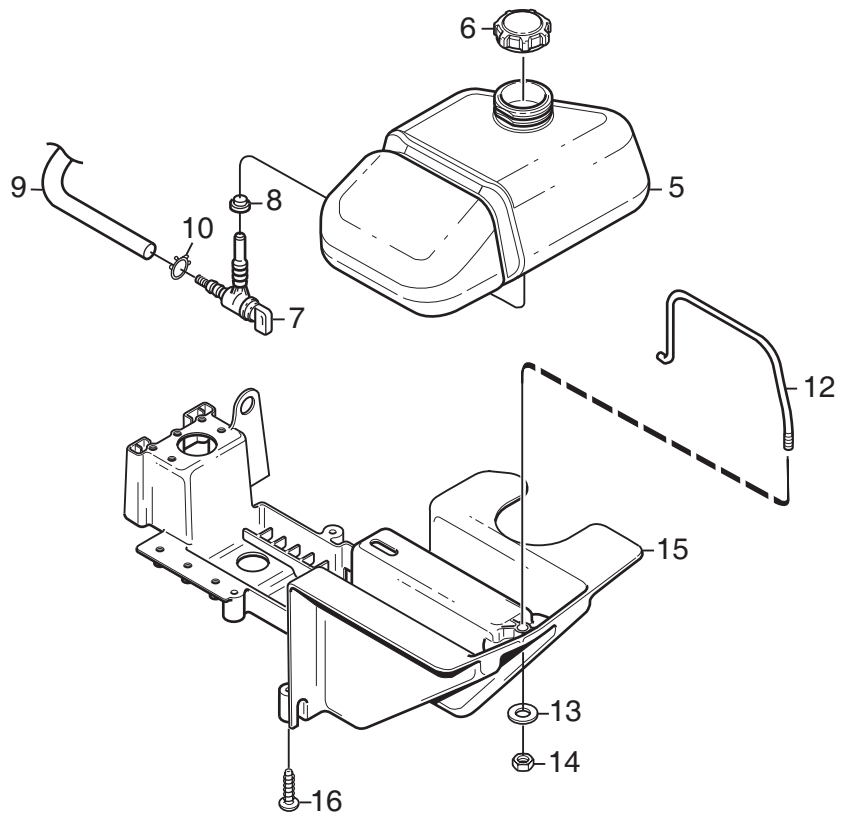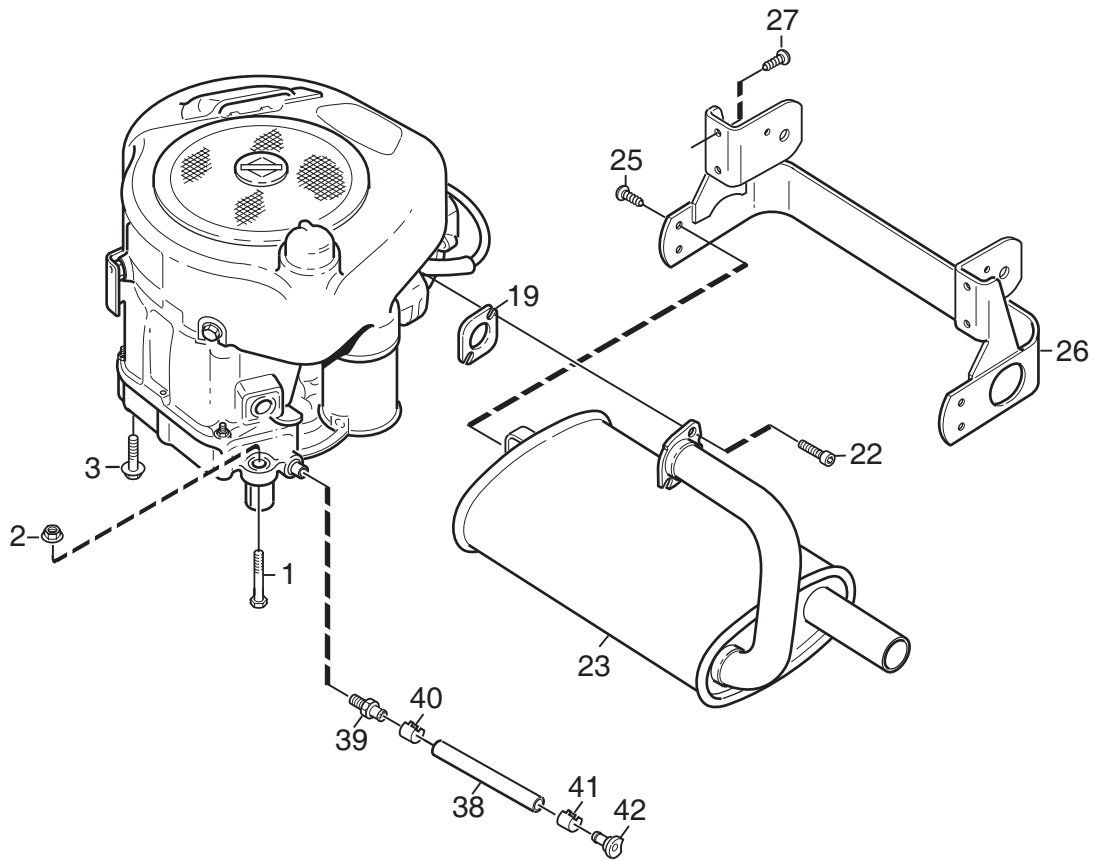  



Utgåva Issue		Bildnr Picture No		VILLA HST MOTOR (B&S)		VILLA HST ENGINE (B&S)		Sida Page	
2011-11		1651C						308	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2718 -14	2718 -34							
1	1	1		9997-0840-12	Skruv.....	Screw.....		M8 x 40	
2	1	1		9747-0831-02	Mutter.....	Lock nut.....			
3	3	3		9955-3725-16	Skruv.....	Screw.....		3/8" x 25	
5	1	1		1134-6626-01	Bränsletank.....	Fuel tank.....			
6	1	1		1134-5532-01	Tanklock.....	Fuel tank cap.....			
7	1	1		1134-3224-01	Bensinkran.....	Fuel shut-off valve.....			
8	1	1		1134-3225-01	Gummibussning.....	Grommet.....			
9	0,46	0,46		9505-0001-01	Bensinslang (meter).....	Fuel line (metre).....		Per meter	
10	2	2		9578-0023-02	Slangklämma.....	Hose clamp.....			
12	1	1		1134-4808-01	Tankbygel.....	Tank clamp.....			
13	1	1		9699-0060-02	Planbricka.....	Flat washer.....			
14	1	1		9747-0631-02	Låsmutter.....	Lock nut.....			
15	1	1		1134-4807-02	Tank/batterihylla.....	Tank/battery shelf.....			
16	4	4		9838-8822-19	Skruv.....	Screw.....			
19	1	1		1134-0433-00	Ljuddämparpackning.....	Muffler gasket.....			
22	2	2		1134-4930-01	Skruv.....	Screw.....			
23	1	1		1134-7781-01	Ljuddämpare.....	Muffler.....			
25	2	2		9893-0616-16	Skruv.....	Screw.....			
26	1	1		1134-6699-01	Värmskydd.....	Heat guard.....			
27	4	4		9893-0616-16	Skruv.....	Screw.....			
38		1		1134-5827-05	Oljeavtappning kpl.....	Oil drain assy.....		Inkl. pos 39-42	
39		1		1134-5825-01	• Nippel.....	• Nipple.....			
40		1		9578-0023-04	• Slangklämma.....	• Hose clamp.....			
41		1		1134-3499-02	• Slangklämma.....	• Hose clamp.....			
42		1		1134-5826-01	• Plugg.....	• Plug.....			

  X

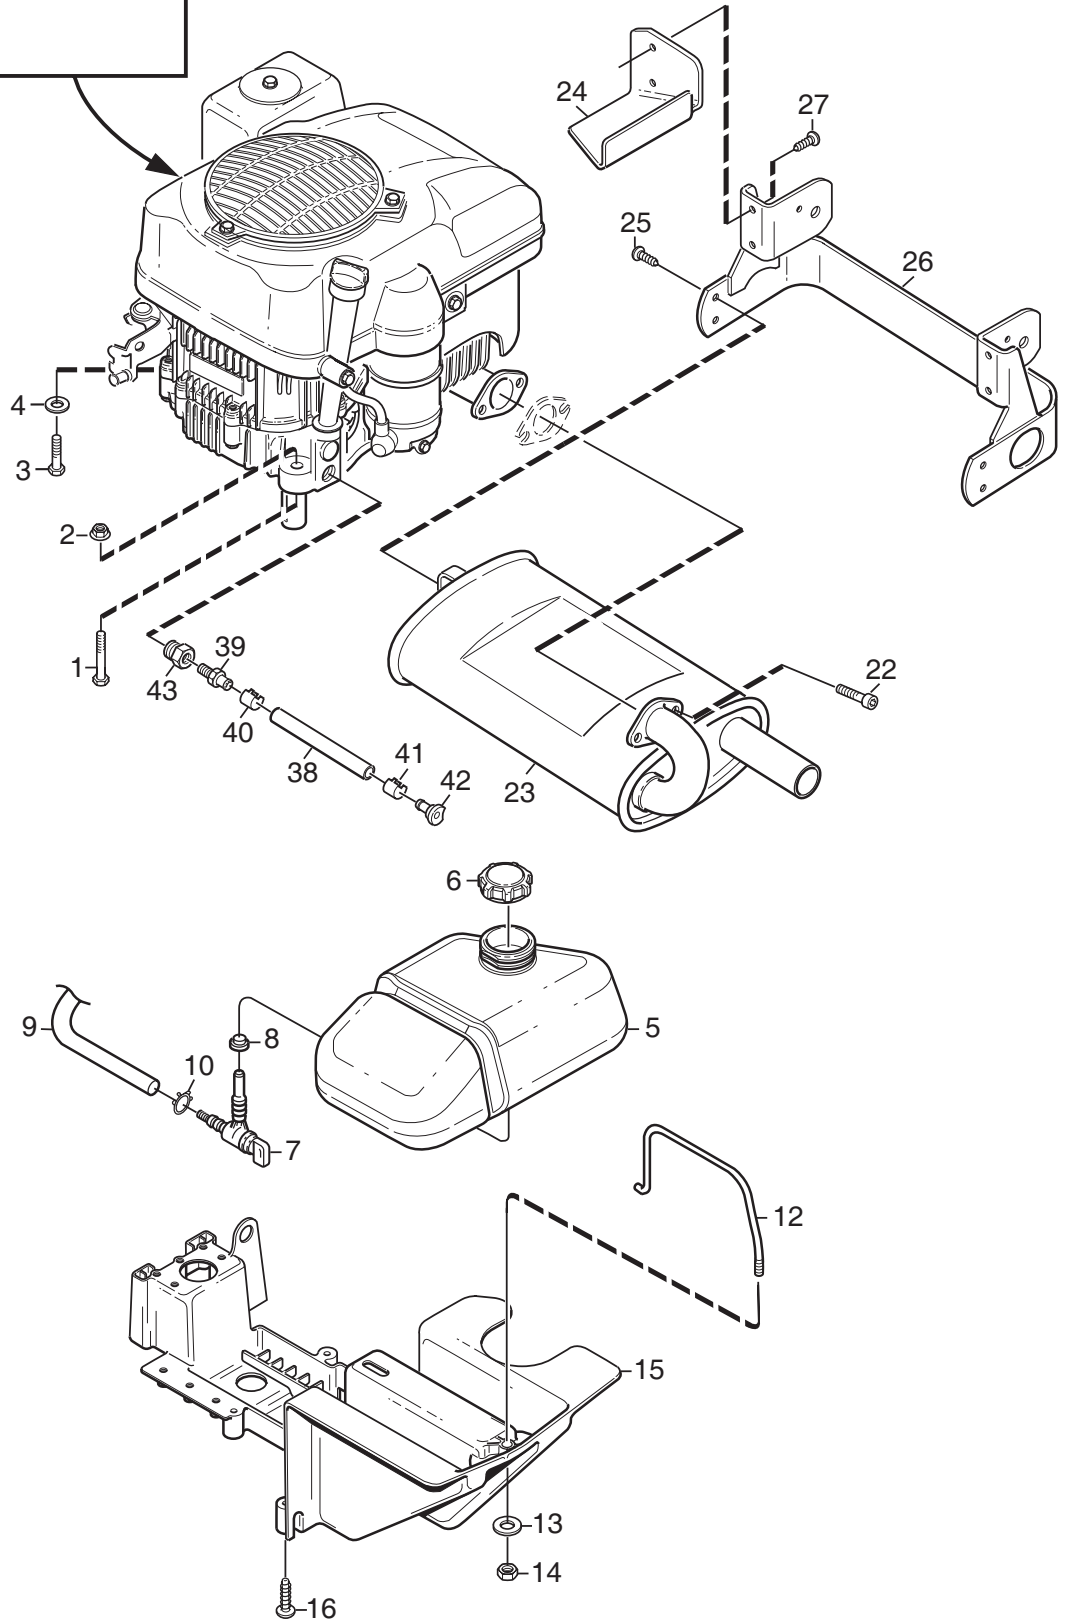
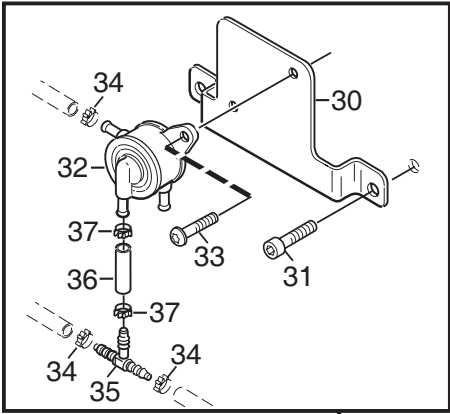








Utgåva Issue 2011-11		Bildnr Picture No 2751A		VILLA HST MOTOR (Honda)		VILLA HST ENGINE (Honda)		Sida Page 310	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2728 -14	2728 -34							
1	2	2		9997-0840-12	Skruv.....	Screw.....		M8 x 40	
2	2	2		9747-0831-02	Mutter.....	Lock nut.....			
3	2	2		9987-5132-12	Skruv.....	Screw.....		5/16" x 32	
4	3	3		9699-0056-02	Planbricka.....	Flat washer.....			
5	1	1		1134-6626-01	Bränsletank.....	Fuel tank.....			
6	1	1		1134-5532-01	Tanklock.....	Fuel tank cap.....			
7	1	1		1134-3224-01	Bensinkran.....	Fuel shut-off valve.....			
8	1	1		1134-3225-01	Gummibussning.....	Grommet.....			
9	0,40	0,40		9505-0001-01	Bensinslang (meter).....	Fuel line (metre).....		Per meter	
10	2	2		9578-0023-02	Slangklämna.....	Hose clamp.....			
12	1	1		1134-4808-01	Tankbygel.....	Tank clamp.....			
13	1	1		9699-0060-02	Planbricka.....	Flat washer.....			
14	1	1		9747-0631-02	Låsmutter.....	Lock nut.....			
15	1	1		1134-4807-02	Tank/batterihylla.....	Tank/battery shelf.....			
16	4	4		9838-8822-19	Skruv.....	Screw.....			
22	2	2		9935-0820-16	Skruv.....	Screw.....			
23	1	1		1137-0101-01	Ljuddämpare.....	Muffler.....			
24	1	1		1137-0094-01	Värmesköld.....	Heat shield.....			
25	2	2		9893-0616-16	Skruv.....	Screw.....			
26	1	1		1134-6699-01	Värmeskydd.....	Heat guard.....			
27	4	4		9893-0616-16	Skruv.....	Screw.....			
30	1	1		1137-0095-01	Fäste-bränslepump.....	Bracket-fuel pump.....			
31	2	2		9939-0820-16	Skruv.....	Screw.....			
32	1	1		1137-0114-01	Bränslepump.....	Fuel pump.....			
33	2	2		9893-0616-16	Skruv.....	Screw.....			
34	4	4		9578-0023-07	Slangklämna.....	Hose clamp.....		Ø 10.5 mm	
35	1	1		1137-0103-01	T-rör.....	Joint pipe.....			
36	0,04	0,04		9505-0001-01	Bensinslang (meter).....	Fuel line (metre).....		Per meter	
37	2	2		9578-0023-02	Slangklämna.....	Hose clamp.....		Ø 12 mm	
X 38		1		1134-5827-05	Oljeavtappning kpl.....	Oil drain assy.....		Inkl. pos 39-42	
39		1		1134-5825-01	• Nippel.....	• Nipple.....		3/8" NPTF	
40		1		9578-0023-04	• Slangklämna.....	• Hose clamp.....			
41		1		1134-3499-02	• Slangklämna.....	• Hose clamp.....			
42		1		1134-5826-01	• Plugg.....	• Plug.....			
X 43		1		1137-0415-01	Adapter.....	Adapter.....		M20 - 3/8" NPTF	

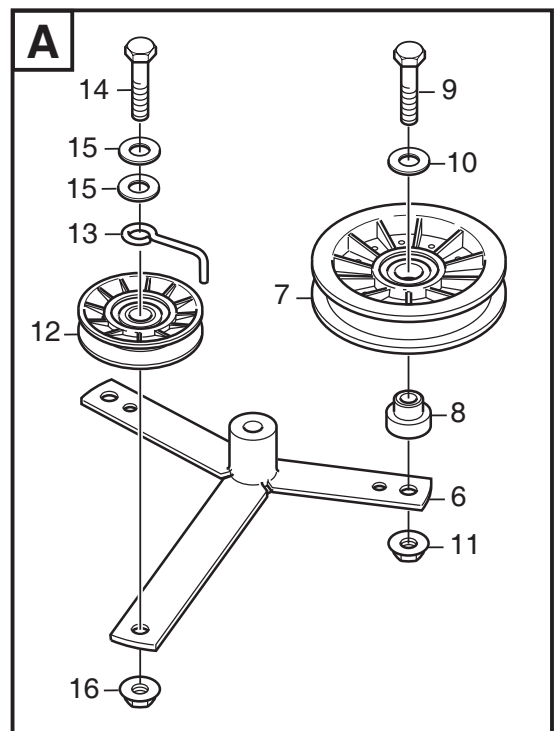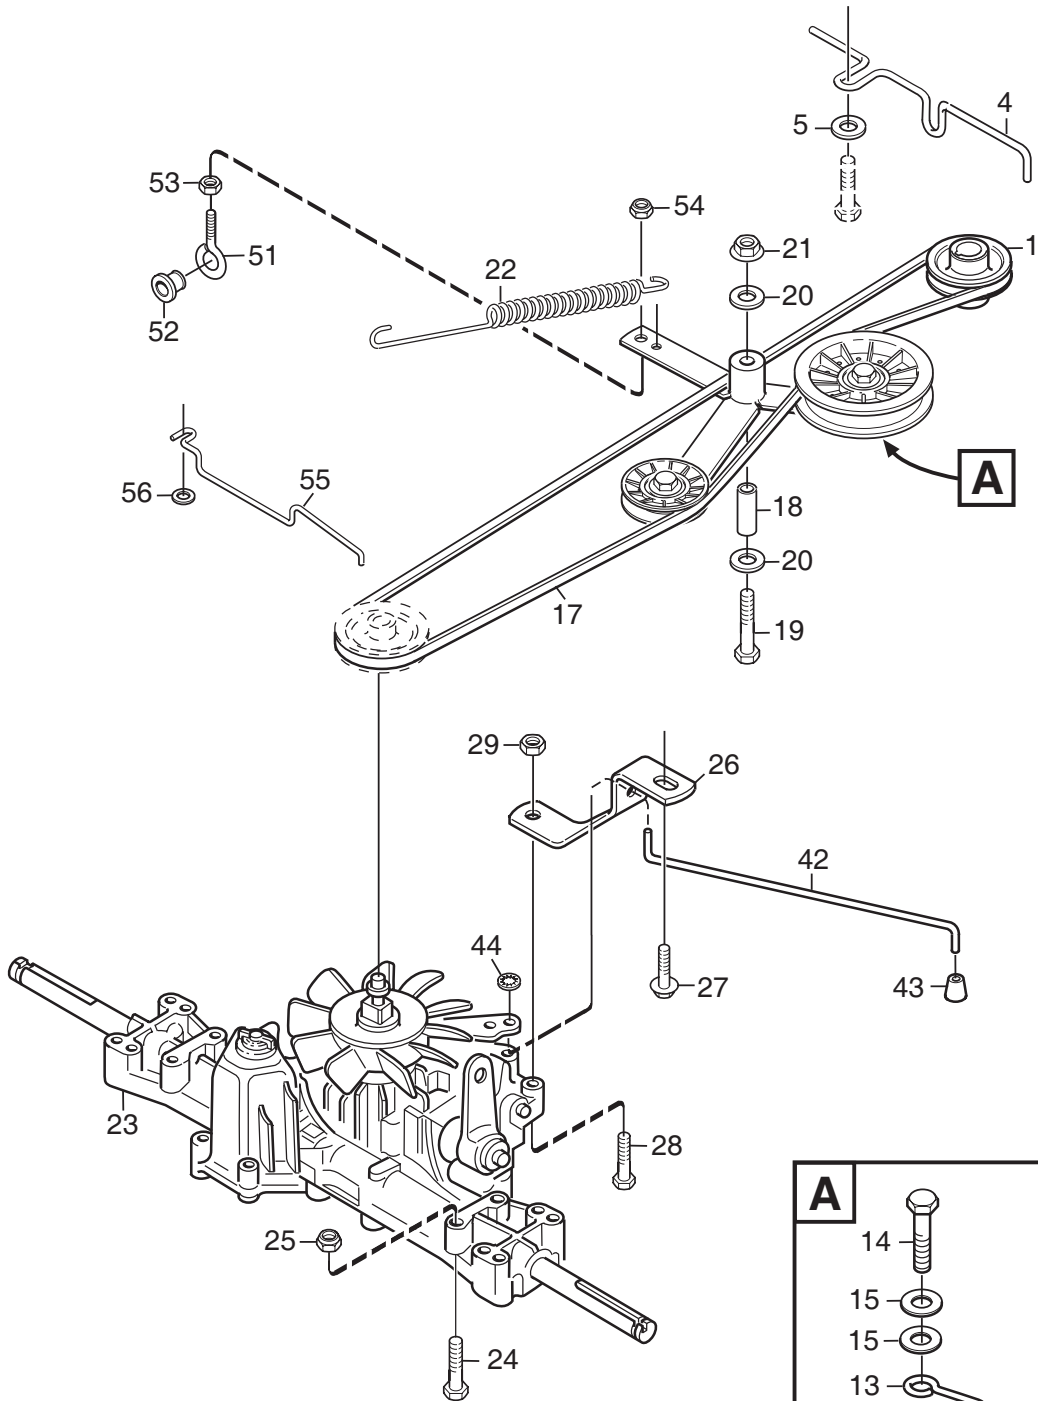  

Utgåva Issue		Bildnr Picture No		VILLA HST TRANSMISSION		VILLA HST TRANSMISSION		Sida Page	
2011-11		1157G						312	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2718	2728	2729						
X	1	1			1137-0002-01	Motorremskiva .....	Engine belt pulley .....		
	4	1			1134-6637-01	Remstyrning .....	Belt guide .....		
	5	1			9699-0056-02	Planbricka .....	Flat washer .....		
	6	1			1134-4519-01	Spännarm .....	Tension arm .....		
	7	1			1134-9091-01	Spännrulle .....	Tension roller .....		
	8	1			1134-4614-01	Ansats .....	Shoulder spacer .....		
	9	1			9997-1040-16	Skruv .....	Screw .....		
	10	1			9699-0035-02	Planbricka .....	Flat washer .....		
	11	1			9739-1031-22	Mutter .....	Nut .....		
	12	1			1134-9027-02	Spännrulle- grå .....	Tension roller- grey .....		
	13	1			1134-1795-01	Rembygel .....	Belt stirrup .....		
	14	1			9997-1040-16	Skruv .....	Screw .....		
	15	2			9699-0035-02	Planbricka .....	Flat washer .....		
	16	1			9739-1031-22	Mutter .....	Nut .....		
	17	1			1134-9064-01	Drivrem .....	Drive belt .....		= 9585-0099-01
	18	1			1134-1565-08	Distans .....	Spacer .....		
	19	1			9997-0870-16	Skruv .....	Screw .....		
	20	2			9699-0056-02	Planbricka .....	Flat washer .....		
	21	1			9739-0831-22	Mutter .....	Nut .....		
	22	1			1134-5214-01	Fjäder .....	Spring .....		
	23	1			1134-7766-01	Transaxel kpl. ....	Transaxle assy .....		Kanzaki K46CJ
	24	4			9960-0860-12	Skruv .....	Screw .....		
	25	4			9747-0831-02	Mutter .....	Lock nut .....		
	26	1			1134-6290-01	Momentstag .....	Strut .....		
	27	1			9945-0816-16	Skruv .....	Screw .....		
	28	1			9997-0840-12	Skruv .....	Screw .....		
	29	1			9747-0831-02	Mutter .....	Lock nut .....		
	42	1			1134-5156-01	Dragstång .....	Pull rod .....		
	43	1			1134-4014-01	Plastknopp .....	Plastic button .....		
	44	1			9675-0009-02	Starlock .....	Starlock .....		
	51	1			1134-2138-01	Skruvögla .....	Eye bolt .....		
	52	1			1134-4779-01	Plastbussning .....	Plastic bushing .....		
	53	1			9739-0831-22	Mutter .....	Nut .....		
	54	1			9747-0831-02	Mutter .....	Lock nut .....		
	55	1			1134-5319-01	Remstyrning .....	Belt guide .....		
	56	1			9699-0056-02	Planbricka .....	Flat washer .....		

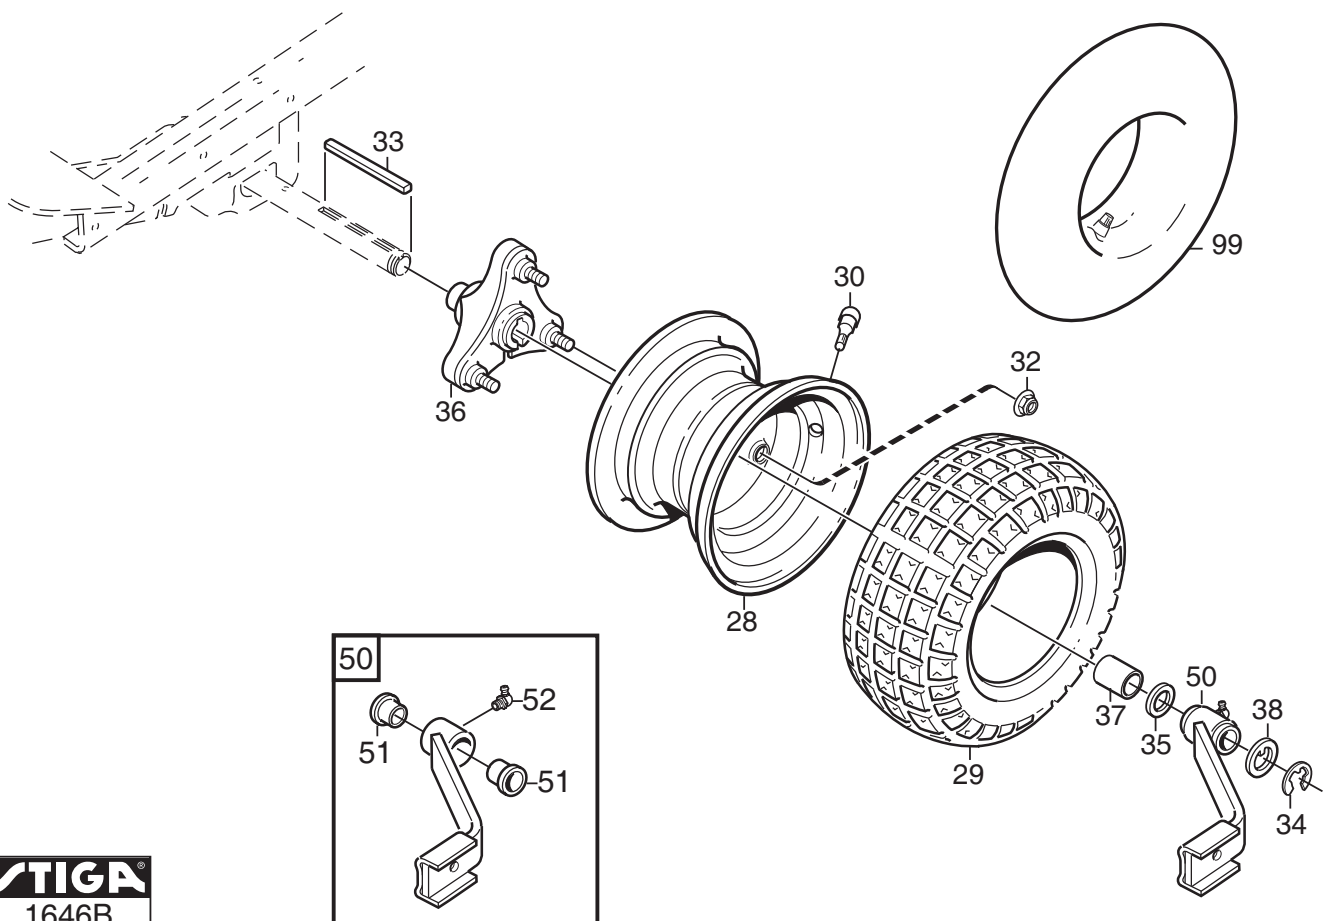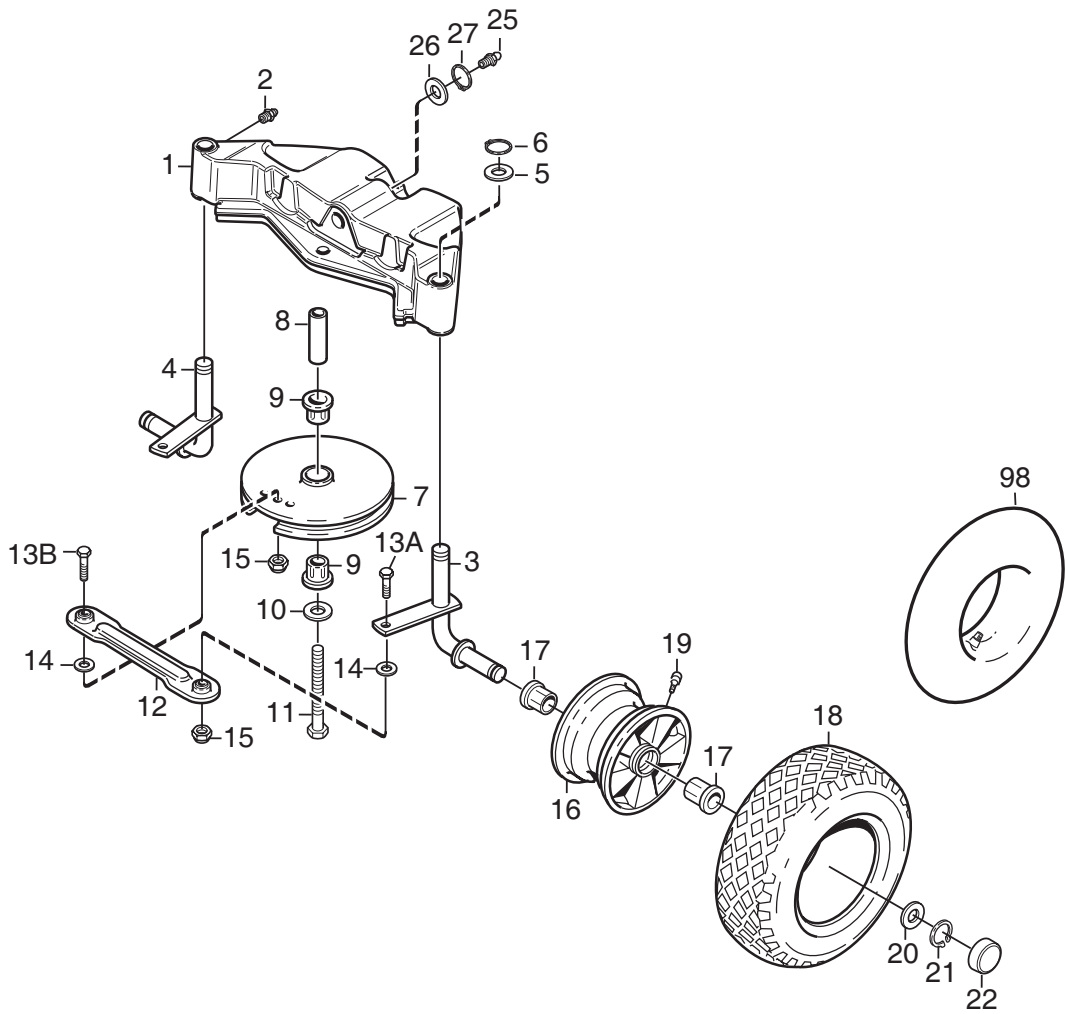  

Utgåva Issue		Bildnr Picture No		VILLA HST HJUL		VILLA HST WHEELS		Sida Page	
2011-11		1646B						314	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2718	2728	2729						
1	1				1134-6703-01	Bakaxel .....	Rear axle .....		
2	2				9501-0500-00	Smörjnippel .....	Grease joint .....		
3	1				1134-5009-02	Spindel- vä .....	Spindle- LH .....		
4	1				1134-5009-01	Spindel- hö .....	Spindle- RH .....		
5	2				9699-0088-02	Planbricka .....	Flat washer .....		
6	2				9650-0020-04	Spårring .....	Circlip .....		
7	1				1137-0090-01	Styrskiva .....	Steering pulley .....		
8	1				1134-5575-01	Distans .....	Spacer .....		
9	1				1134-9024-01	Lager .....	Bearing .....	Sats 4 st/kit of 4	
10	1				9699-0104-02	Bricka .....	Washer .....		
11	1				9997-1680-12	Skruv .....	Screw .....		
12	2				1134-3247-05	Styrstag .....	Tie rod .....		
13A	2				9997-0825-16	Skruv .....	Screw .....	L = 25 mm	
13B	1				9997-0835-12	Skruv .....	Screw .....	L = 35 mm	
14	2				9699-0090-02	Planbricka .....	Flat washer .....		
15	3				9747-0831-02	Mutter .....	Lock nut .....		
16	2				1134-4706-01	Fälg .....	Rim .....		
17	1				1134-9026-01	Lagerbussning .....	Bearing bush kit .....	Sats 4 st/kit of 4	
18	2				9545-0117-00	Däck .....	Tyre .....	13 x 5.00 - 6	
19	2				9545-0500-00	Ventil .....	Valve .....		
20	2				1134-0341-01	Bricka .....	Washer .....		
21	2				9650-0020-04	Spårring .....	Circlip .....		
22	2				1134-4344-01	Navkapsel .....	Hub cap .....		
25	1				9501-0500-00	Smörjnippel .....	Grease joint .....		
26	1				9699-0088-02	Planbricka .....	Flat washer .....		
27	1				9650-0020-04	Spårring .....	Circlip .....		
28	2				1134-5255-01	Fälg .....	Rim .....		
29	2				9545-0126-01	Däck .....	Tyre .....	16 x 6.00 - 8	
30	2				9545-0500-00	Ventil .....	Valve .....		
32	6				9731-1031-22	Mutter .....	Nut .....		
33	2				1134-2471-03	Kil .....	Key .....		
34	2				9653-0001-04	Spårryttare .....	Lock ring .....		
35	2				1134-0341-01	Bricka .....	Washer .....		
36	2				1134-4844-02	Hjulnav .....	Wheel hub .....		
37	2				1134-4845-02	Navhylsa .....	Hub sleeve .....		
38	2				1134-4981-01	Bricka .....	Washer .....		
50	2				1134-6274-01	Redskapsfäste kpl. ....	Attachment assy .....		
51	1				1134-9026-01	• Lagerbussning .....	• Bearing bush kit .....	Sats 4 st/kit of 4	
52	1				9501-0502-00	• Smörjnippel .....	• Grease joint .....		
98					9545-0204-00	Innerslang .....	Inner tube .....	Reservdel/spare part	
99					9545-0203-00	Innerslang .....	Inner tube .....	Reservdel/spare part	

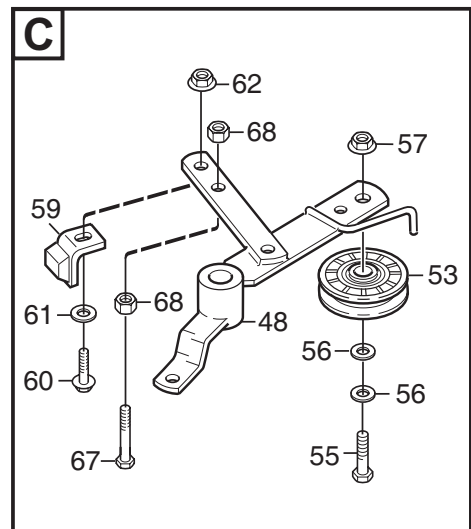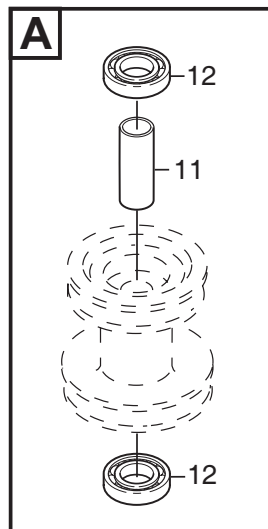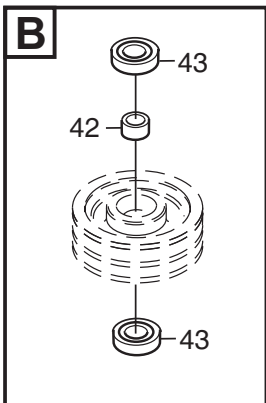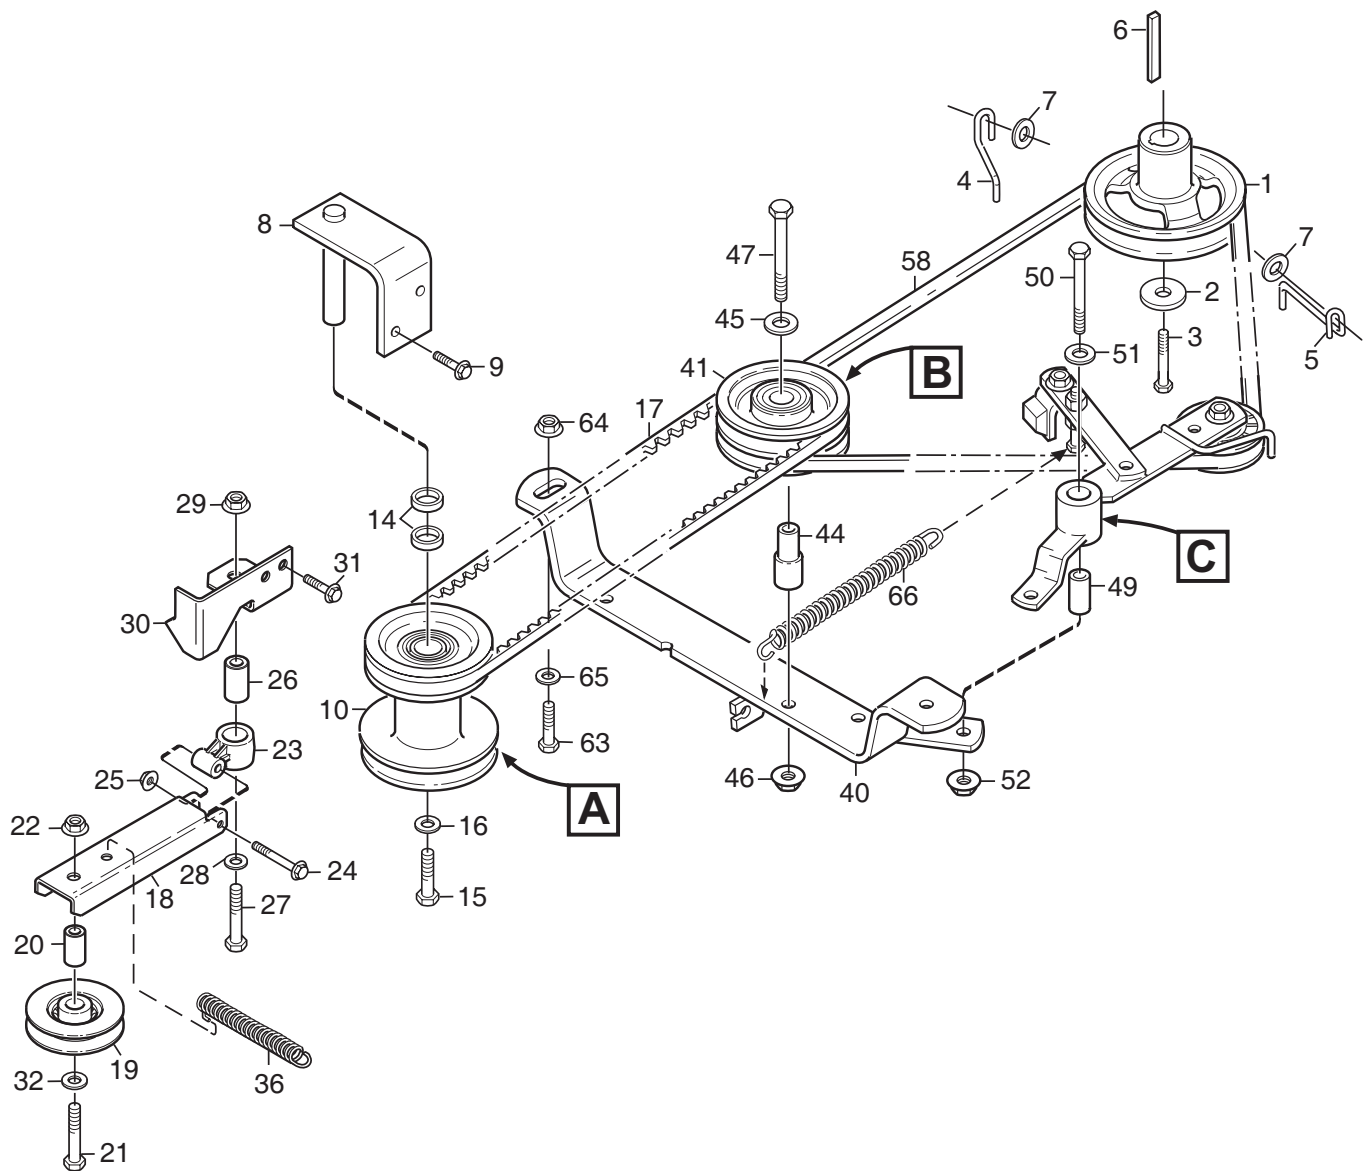    

Utgåva Issue		Bildnr Picture No		VILLA HST KRAFTUTTAG		VILLA HST POWER TAKE- OFF		Sida Page		
2011- 11		1512F						316		
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2718	2728	2729							
X	1	1			1137-0081-01	Motorremskiva .....	Engine belt pulley .....		L = 2 1/2"	
	2	1			1134-5017-01	Bricka .....	Washer .....			
	3	1			9987-5332-16	Skruv .....	Screw .....			
	4	1			1134-5058-01	Remstyrning .....	Belt guide .....			
	5	1			1134-5057-01	Remstyrning .....	Belt guide .....			
	6	1			9600-0251-01	Kil .....	Key .....			
	7	2			9699-0056-02	Planbricka .....	Flat washer .....			
	8	1			1134-4650-01	Monteringsbygel .....	Pulley bracket .....			
	9	2			9945-0816-16	Skruv .....	Screw .....			
X	10	1			1137-0003-01	Mellanremskiva kpl. ....	Intermediate pulley .....		Inkl. pos 11- 12	
	11	1			1134-0051-12	• Distans .....	• Spacer .....			
	12	2			9549-0019-00	• Kullager .....	• Ball bearing .....			
	14	2			1134-0052-00	Lagerdistans .....	Bearing spacer .....			
	15	1			9997-1040-16	Skruv .....	Screw .....			
	16	1			9699-0035-02	Planbricka .....	Flat washer .....			
	17	1			1134-9079-01	Drivrem .....	Drive belt .....	= 9585- 0139- 01		
	18	1			1134-5231-01	Spännarm .....	Tension arm .....			
	19	1			1134-6329-01	Spännrulle .....	Tension roller .....			
	20	1			1134-4619-01	Distans .....	Spacer .....			
	21	1			9997-1060-12	Skruv .....	Screw .....			
	22	1			9747-1031-02	Låsmutter .....	Lock nut .....			
	23	1			1134-6314-01	Spännarmsfäste .....	Attachment .....			
	24	1			9997-0640-12	Skruv .....	Screw .....			
	25	1			9747-0631-02	Låsmutter .....	Lock nut .....			
	26	1			1134-4619-01	Distans .....	Spacer .....			
	27	1			9930-1050-12	Skruv .....	Screw .....			
	28	1			9699-0035-02	Planbricka .....	Flat washer .....			
	29	1			9747-1031-02	Låsmutter .....	Lock nut .....			
	30	1			1134-4708-02	Fäste .....	Bracket .....			
	31	2			9945-0816-16	Skruv .....	Screw .....			
	32	1			9699-0035-02	Planbricka .....	Flat washer .....			
	36	1			1131-1507-00	Fjäder .....	Spring .....			
	40	1			1134-5037-01	Bygel .....	Bracket .....			
	41	1			1137-0004-01	Centrumremskiva kpl. ....	Centre pulley assy .....	Inkl. pos 42- 43		
	42	1			1134-0051-09	• Distans .....	• Spacer .....			
	43	2			9549-0019-00	• Kullager .....	• Ball bearing .....			
	44	1			1134-1839-02	Mellanaxel .....	Shaft .....			
	45	1			9699-0035-02	Planbricka .....	Flat washer .....			
	46	1			9739-1031-22	Mutter .....	Nut .....			
	47	1			9997-1070-12	Skruv .....	Screw .....			
X	48	1			1137-0144-01	Kopplingsarm .....	Clutch lever .....			
	49	1			1134-1565-10	Distans .....	Spacer .....			
	50	1			9997-0860-12	Skruv .....	Screw .....			
	51	1			9699-0056-02	Planbricka .....	Flat washer .....			
	52	1			9739-0831-22	Mutter .....	Nut .....			
	53	1			1134-9027-02	Spännrulle- grå .....	Tension roller- grey .....			
	55	1			9997-1035-16	Skruv .....	Screw .....			
	56	2			9699-0035-02	Planbricka .....	Flat washer .....			
	57	1			9739-1031-22	Mutter .....	Nut .....			
	58	1			1134-9146-01	Drivrem .....	Drive belt .....	= 9585- 0204- 01		
	59	1			1134-4164-03	Bromsklots .....	Brake pad .....			
	60	1			9959-0820-16	Skruv .....	Screw .....			
	61	1			9699-0090-02	Planbricka .....	Flat washer .....			
	62	1			9747-0831-02	Mutter .....	Lock nut .....			
	63	2			9959-0820-16	Skruv .....	Screw .....			
	64	2			9739-0831-22	Mutter .....	Nut .....			
	65	1			9699-0056-02	Planbricka .....	Flat washer .....			
	66	1			1131-1506-00	Fjäder .....	Spring .....			
	67	1			9997-0860-12	Skruv .....	Screw .....			
	68	2			9739-0831-22	Mutter .....	Nut .....			