

# **Genuine Spare Parts**





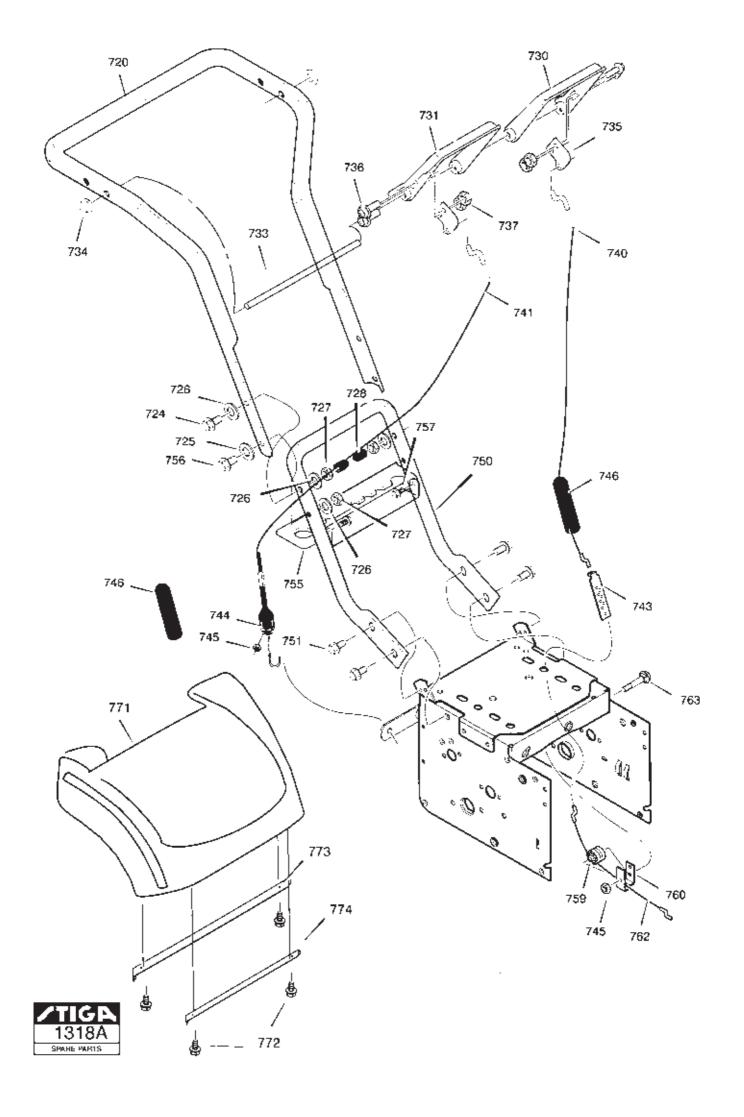


Utgå Issue 2004	e Picture No		No	SNOW STORI SNOW BLIZZ SNOW COMF STYRE	IZZARD SNOW BLIZZARD Page				Page	
Pos. Fig.	Аг	itat/Q	uantity	r	Art nr Part No	Benämning		Description	Sats Kit	Anmärkning Notes
720 724 725 726 727 728 730 731 733 734 735 736 737 740 741 743 744 745 746 750 751 755 756	2827 1 2 2 6 4 2 1 1 1 2 2 2 4 4 1 1 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 4 4 1 1 2 2 2 1 1 4 4 1 1 2 2 2 1 1 4 4 1 1 2 2 2 1 1 4 4 1 1 2 2 2 1 1 4 4 1 1 2 2 2 1 1 4 4 1 1 1 2 2 2 1 1 4 4 1 1 1 1	2830 1 2 2 6 4 2 1 1 1 2 2 4 4 1 1 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 2 2 1 1 4 1 1 1 2 2 1 1 4 1 1 1 2 2 1 1 4 1 1 1 2 2 1 1 4 1 1 1 2 2 1 1 4 1 1 1 1	2893 1 2 2 6 4 2 1 1 1 2 2 4 4 1 1 1 1 2 2 1 4 4 1 2 2 1 4		Part No  1812-1395-01 9988-3670-12 9699-0029-02 9683-0030-02 1812-1759-01 1812-0932-01 1812-0933-01 1812-0934-01 1812-0513-01 1812-0513-01 1812-1728-01 1812-1728-01 1812-1728-01 1812-1728-01 1812-1728-01 1812-1728-01 1812-1728-01 1812-1728-01 1812-17398-01 1812-1323-01 1812-1398-01 1812-1398-01 1812-1398-01	Styre-överdel Skruv Planbricka Låsbricka Mutter Plastknopp Kopplingshandtag-v Kopplingshandtag-v Kopplingshandtag-h Handtagsaxel Låsning Wirefäste Skruv Läsmutter Kopplingswire Reglagewire Wireläste Fjäder Mutter Wirehylsa Styre-underdel Skruv Växelväljarplåt Växelväljarplåt	ä	Handle-upper Screw Flat washer Lock washer Nut Plastic stop Clutch handle- LH Clutch handle- RH Clutch handle rod Retainer Cable pivot plate Screw Locking nut Clutch cable Control wire Cable adjust bracket Spring Nut Clutch spring bool Handle-lower Screw Gear selector plate Gear selector plate Gear selector plate Screw	Kil	
757 759 760 762 763 771 772 773 774 998 999	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		9988-3516-16 1812-1205-01 1812-1702-01 1812-1727-01 1812-1772-01 1812-1870-01 1812-1869-01 1812-1868-01 8218-2201-12 1812-1873-01	Skruv Spole Fäste Reglagewire- nedre Skruv Panel Skruv Fäste- övre Fäste- undre Bruksanvisning		Screw Spool Bracket Drive cable-lower Screw Panel Screw Bracket-top Bracket-top Bracket-bottom Owner's manual Parts bag Parts bag		Ej ill/not ill. Ej ill/not ill. Ej ill/not ill.

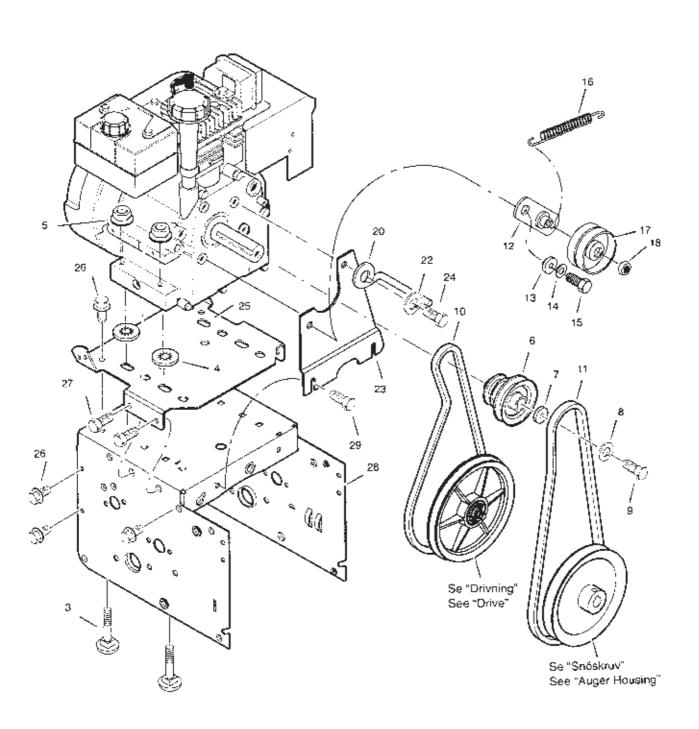






Parts Catal	ogue			SNC	)W THROWER:	
Utgáva Bildnir Issue Picture No 2004-14 1314B		SNOW STORM SNOW BLIZZARD MOTOR	SNOW STORM SNOW BLIZZARD ENGINE		Sida Page 40	
Fig.	ntal/Quantity	Art ar Benämni Part No	ing Description	Sats Kit	Anmärkning Notes	
2827 3	2830	1812-1678-01 1812-1681-01 9795-3631-02 1812-1719-01 1812-1691-01 1812-9016-01 1812-9016-01 1812-9020-01 1812-1705-01 9987-5119-16 9987-5125-16 1812-0305-01 1812-1742-01 9743-3721-32 1812-1742-01 9883-0030-02 1812-1824-01 9987-5119-16 9987-5125-16 1812-1703-01 9988-3516-16 1812-1703-01 9988-3516-16 1812-1768-01 1812-1768-01 1812-1768-01  Vagnsbull Hållare Mutter Skruv Spännrull 8ussning 1.	Retainer   Nut		L = 19 mm L = 25 mm L = 25 mm	

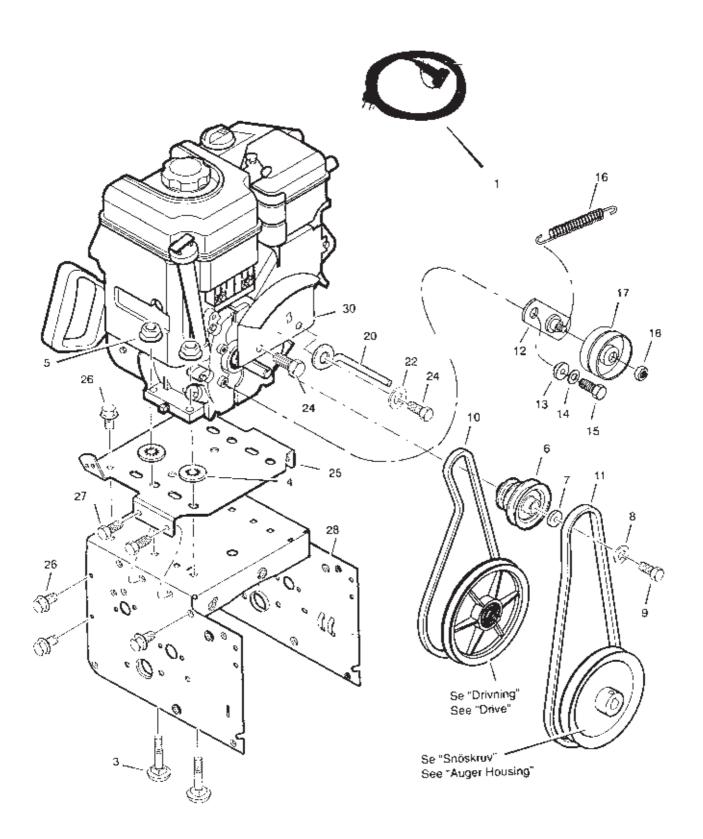






Parts Catalo	900		211	OW THROWER
Utgáva Issue 2004-14	Bildnr SNOW COMP Picture No MOTOR	ORT SNO ENG	Sida Page 42	
Pos. Ant	tal/Quantity Art nr Part No	<b>S</b> enämn <b>in</b> g	Description Sat Kit	s Anmärkning Notes
2833  1	1812-1678-01 1812-1681-01 9795-3631-02 1812-1719-01 1812-1691-01 9683-0035-02 1133-0762-01 1812-9016-01 1812-9020-01 1812-1705-01 9683-0030-02 9987-5119-16 1812-1742-01 9683-0030-02 9743-3721-32 1812-1742-01 9883-0030-02	Förlängningssladd Vagnsbult Hållare Mutter Molorremskiva Bricka Låsbricka Skruv Drivrem Drivrem Spännrullsfäste Bussning Låsbricka Skruv Fjäder Spännrulle Mutter Remstyrning Låsbricka Skruv Motorplatta Skruv Skruv Skruv Motorchassi Skydd	Carriage bolt Retainer Nut Engine pulley Washer Lock washer Screw Drive belt Idler bracket Bushing Lock washer Screw Spring Tension roller Nut Belt guide Lock washer Screw Engine mount plate Screw Screw Screw Engine box frame	L = 19 mm  L = 19 mm

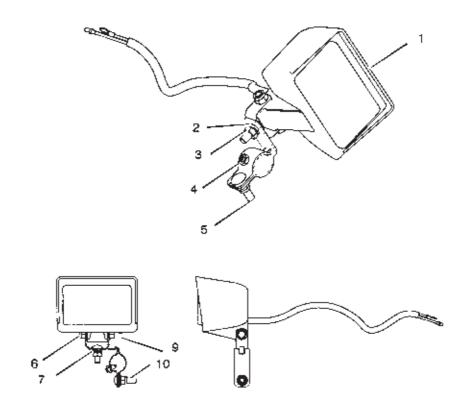

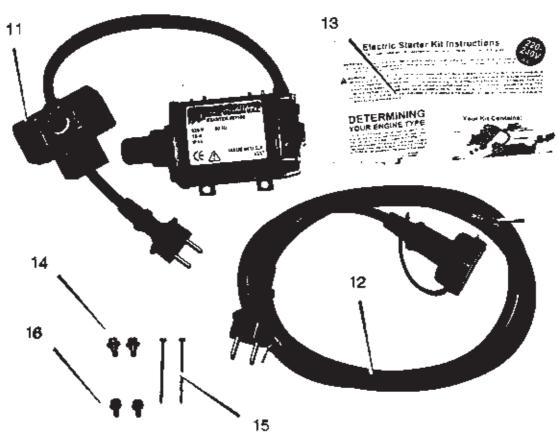







ans (	Jatai	ogue							PIAC	W IUWOWER
Utgå Issue 2004	3	Bildnr Picture No 1634			SNOW BLIZZA SNOW COMF STRÅLKASTA EL. START	ORT	SNO! HEAD	W BLIZZARD W COMFORT DLIGHT STARTER		Sida Page 44
Pos. Fig.		nlal/Or	uantily	f	Art nr Part No	Benämning	:	Description	Şats Kit	Anmärkning Notes
1 A 2 3 4 5 6 7 9 10 11 22	1 1 1 1 1 1 1 1 1	2833 1 1 1 1 1 1 1 1 1 1			1812-1245-01 9683-0030-02 9795-3631-02 9795-3531-02 9899-3632-12 9743-3621-32 9899-3625-16 9988-3651-12 9743-3621-32 37102 1812-1615-01	Strálkastare kpi		Headlight assy		Ej ill/not ill. Tecumseh
13 14 15 16	1 2 2 2				1812-1356-01   1812-1357-01	Mont. anvisning Skruv Skruv Ansatsskruv		Assy instruction		

## Snow Storm

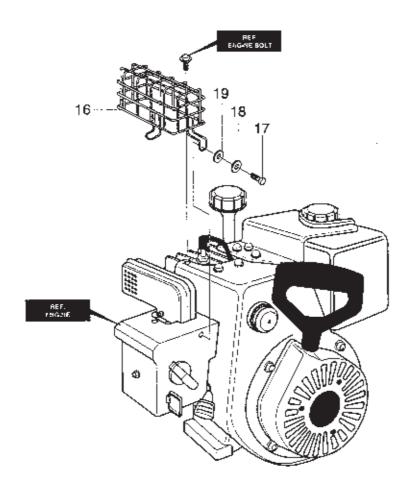

## Snow Blizzard

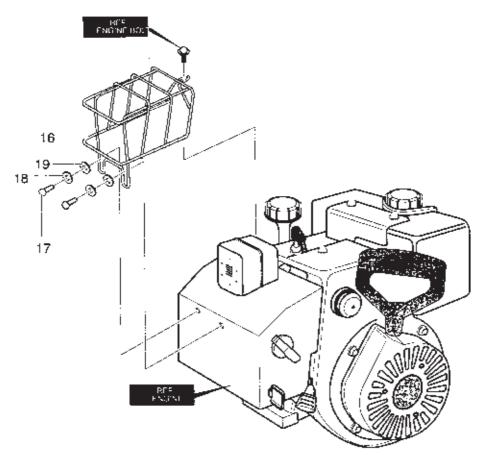






## SNÖSLUNGOR SNOW THROWERS

SNOW STORM Ulgáva Bildnr SNOW STORM Sida SNOW BLIZZARD Issue Picture No SNOW BLIZZARD Page LJUDDÄMPARSKYDD MUFFLER GUARD 2004-14 1321B 46 Antal/Quantity Pos Art nr Benämning Description Sals Anmärkning Fig. Part No. Kit Notes 2827 2830 16 1 1812- 1385- 01 Ljuddämparskydd..... Muffler guard ..... 16 1812-1415-01 Ljuddämparskydd..... Muffler guard ..... 2 2 1812- 1386- 01 | Skruv ..... 17 Screw.... 2 2 2 18 1812-1388-01 Bricka ..... Washer..... 1812-1387-01 Planbricka..... 19 Flat washer.....

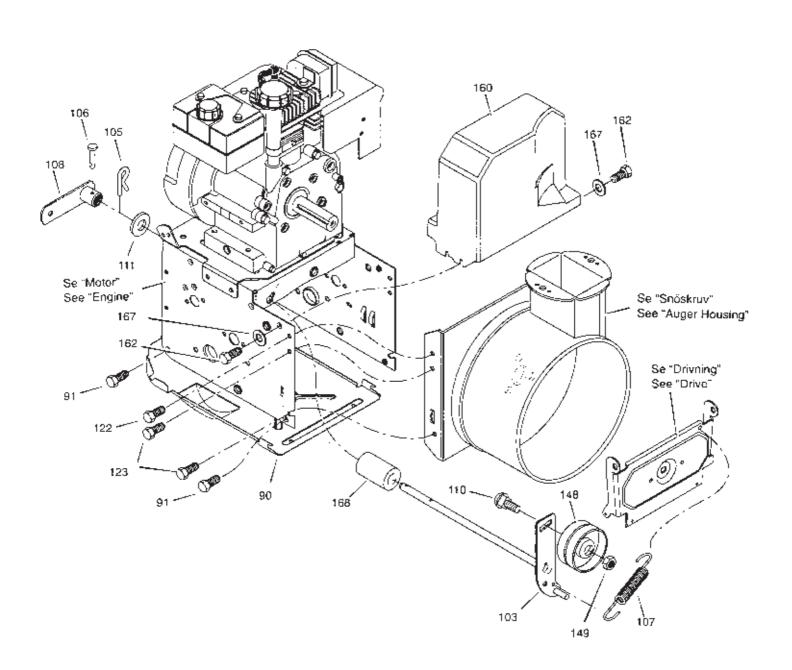




Х



## SNÖSLUNGOR SNOW THROWERS


SNOW STORM SNOW STORM Utgáva Bilder Sida SNOW BLIZZARD Issue Picture No SNOW BLIZZARD Page SNOW COMFORT SNOW COMFORT 2004-14 1315B 48 RAM FRAME Antal/Quantity Pos Art or Benämning Description Sats Anmärkning Fig. Part No Kit Notes 2830 2833 2827 90 1812-1700-01 Bottom cover ..... Bottenplåt ..... 91 4 4 4 9988-3516-16 Skruv ..... Screw..... 103 1 1 1812-1747-01 Spännarm..... Idler ..... 103 1812-1937-01 Spännarm ..... Idler ..... 105 1812-1511-01 Låsstift...... Hair pin ..... Pinne ..... Klik pin..... 106 1 1812-1533-01 107 1 1 1 1812- 1676- 01 Fjäder..... Tension spring ..... 1812-1693-01 Fjäderfäste..... Spring attachment..... 108 1 1 1 110 1 1 9899-3732-16] Skruv ...... Screw..... 1812-1509-01 Planbricka..... Flat washer..... 111 1 1 1 2 2 2 122 1812-1832-01 | Skruv ..... Screw..... 123 4 4 4 1812-1833-01 Skruv..... Screw..... 148 1 1 1 1812-0305-01 Spännrulle ..... Tension roller ..... 149 1 1 1 9743-3721-32 Mutter..... Nut..... 160 1 1 1 1812-1698-01 Remskydd ...... Belt cover..... 4 4 4 162 1812-1680-01 Skruv..... Screw ..... Planbricka..... Flat washer..... 167 4 4 4 9699-0028-02 1812-1741-01 Distans ..... 168 Spacer.....

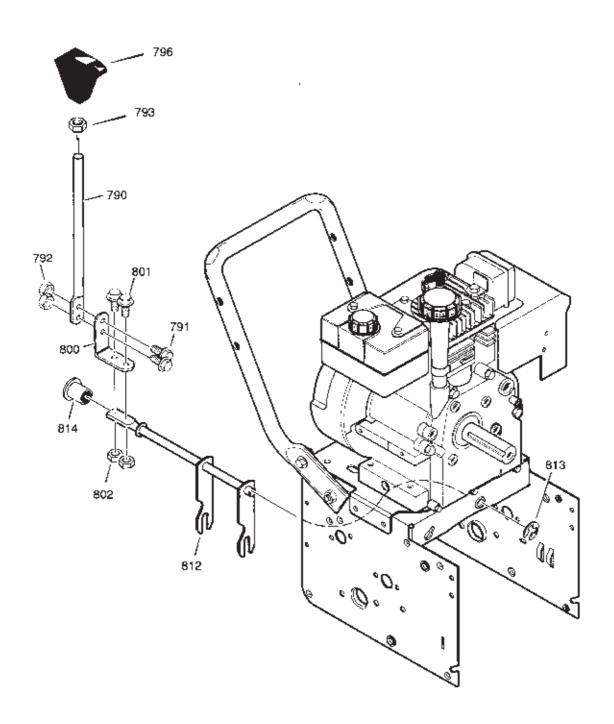






Parts Catalogue									SNO	W THROWERS
Issue	Utgåva Bildnr ssue Picture No 2004-14 1319			No	SNOW STORI SNOW BLIZZ SNOW COMF VÄXELSPAK	ARD	SNO <sup>1</sup> SNO <sup>1</sup>	W STORM W BLIZZARD W COMFORT T YOKE		Sida Page 50
Pos Fig.			uantity	1	Art nr Part No	Benāmning		Description	Sats Kit	Anmärkning Notes
790 791 792 793 796 800 801 802 812 813 814	1 2 2 1 1 1 2 2 1 1 1 1	1 2 2 1 1 1 2 2 1 1 1 1 1 1 1 1 1 1 1 1	2833		9988-3519-16 1812-0812-01 9795-3931-00 1812-1308-01 1812-1444-01 9988-3519-16 1812-0812-01 1812-1710-01 1812-1672-01	Växelspak		Shift rod		

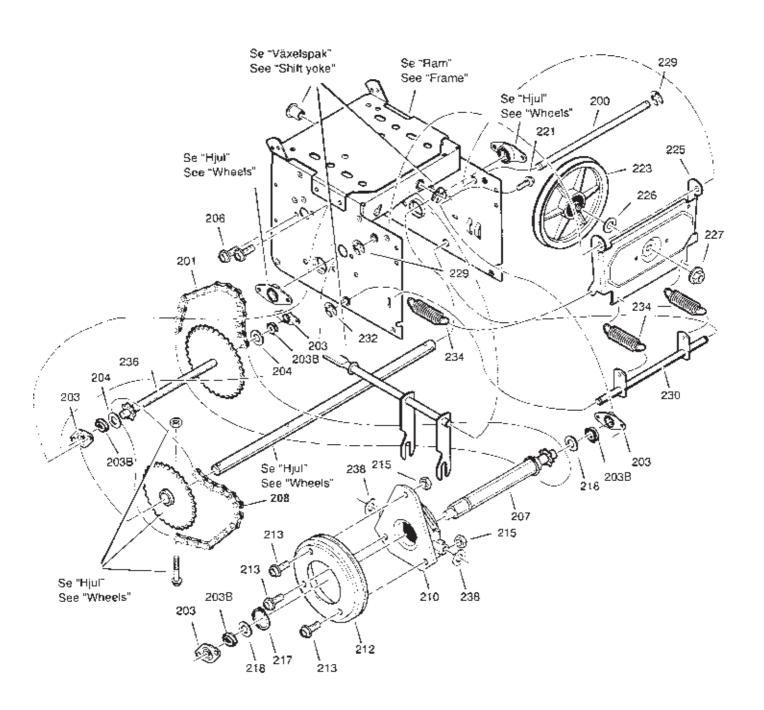






SNOW STORM SNOW STORM Utgáva Bildnr Sida SNOW BLIZZARD Issue Picture No SNOW BLIZZARD Page DRIVNING DRIVE 2004-14 1316A 52 Antal/Quantity Pos Art nr Benāmning Description Sats Anmärkning Fig. Part No. Kit Notes 2827 2830 200 1812-1713-01 Axel-svängplatta ..... Axle- swing plate ..... 201 1 1 1812-1686-01 Kedja ..... Chain..... 4 4 1812-1200-01 Lagerhälfare 203 Bearing retainer..... 203 B 1812-1207-01 Kullager ..... Ball bearing ..... 2 204 2 1812-1204-01 Bricka ..... Washer.... 206 4 1812-1832-01 Skruv ...... Screw..... 207 1 1 1812-1714-01 Sexkantsaxel..... Hex shaft ..... 208 1 1 1812-1688-01 Kedja ..... Chain..... 210 1 1 1812-1313-01 Lager ..... Trunion bearing..... Friktionshjul..... 212 1 1 1812-9028-01 Friction disc wheel ..... 213 3 9988-3516-16 3 \$kruv ...... Screw..... 215 3 3 9795-3531-02 Mutter..... Nut ..... 1 217 Relext ring ..... 1812-1687-01 Läsring .... 218 2 4 2 1812-1204-01 Bricka ..... Washer..... 221 4 1812-1832-01 Skruv ...... Screw..... 223 1 1812-1725-01 1 Friktionsremskiva ..... Friction pulley ...... 225 1 1 1812-1701-01 Svängplatta..... Swing plate ..... 226 1 1 1812-1739-01 Distans ..... Spacer..... Flänslåsmutter..... 227 1 1 1812-1674-01 Flange lock nut..... 2 229 2 1812-1672-01 Läsning ..... Retainer ring ..... 1 230 1812-1718-01 Fjäderlänkarm..... Spring link..... 23 23 232 1812-1672-01 Låsring ..... Retainer ring ..... 234 1812-1675-01 Fjäder-.... Spring ...... 236 1 Intermed. sprocket..... 1812-1751-01 Mellanaxel m.drev ..... 33T/7T 238 2 9699-0038-02 Planbricka..... Flat washer.....

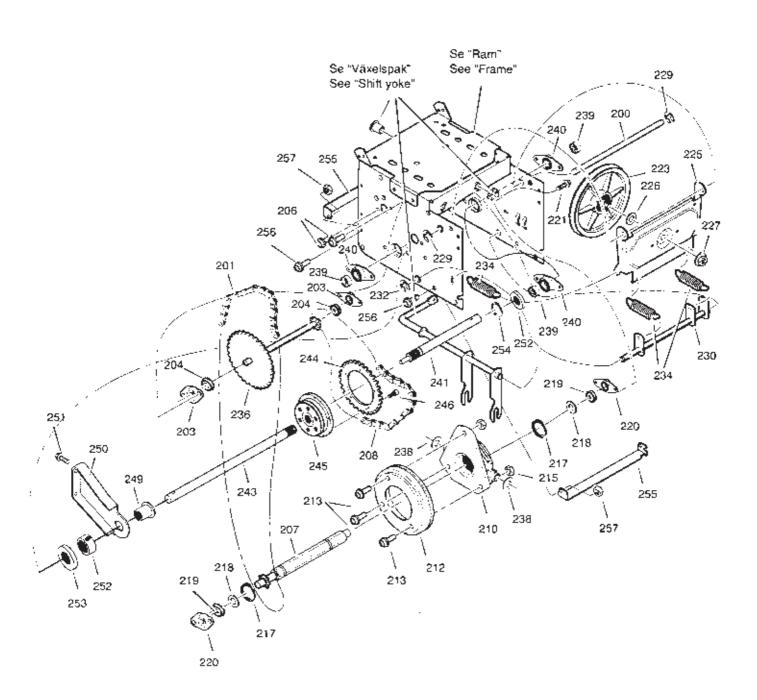






Side	1 6113	is Calalo	<del>200</del>				H	W INKUWERS
Pos.   Antal/Quantity	, ,	· 1		1				
Park No	200	004-14	1777					54
200	1 -	98.	al/Quantity	1	Benāmning	Description		Anmärkning Notes
201		2833						
	X 201 203 204 206 X 207 208 210 X 212 213 215 217 218 219 220 221 223 225 226 227 229 X 230 234 236 238 X 240 X 241 X 243 X 244 X 245 X 255 X 255 X 255 X 255 X 255	1		1812-1686-01 1812-1200-01 1812-1200-01 1812-1832-01 1812-1688-01 1812-1688-01 1812-1313-01 1812-9028-01 9988-3516-16 9795-3531-02 1812-1687-01 1812-1200-01 1812-1200-01 1812-1200-01 1812-1200-01 1812-1725-01 1812-1725-01 1812-1739-01 1812-1739-01 1812-1751-01 1812-1672-01 1812-1672-01 1812-1575-01 1812-1936-01 1812-1936-01 1812-1936-01 1812-1936-01 1812-1936-01 1812-1936-01 1812-1936-01 1812-1950-01 1812-1950-01 1812-1950-01 1812-1950-01 1812-1950-01 1812-1950-01 1812-1950-01 1812-1933-01 1812-1933-01 1812-1933-01 1812-1933-01 1812-1933-01 1812-1933-01 1812-1933-01 1812-1933-01 1812-1933-01 1812-1933-01 1812-1933-01 1812-1933-01	Kedja Lagerhållare Kullager Skruv Sexkantsaxel Kedja Lager Friktionshjul Skruv Mutter Läsring Bricka Kullager Lagerhållare Skruv Friktionsremskiva Svängplatta Distans Flänsfåsmutter Låsring Fjäderlänkarm Låsring Fjäderlänkarm Låsring Fjäderlänkarm Låsring Kullager Lagerhållare Kullager Lagerhållare Skruv Planbricka Kullager Lagerhållare Axel Axel Kedjedrev Dufferential Skruv Lager Fäste Skruv Låshylsa Bricka Låsring Stödstag Skruv	Chain Bearing retainer Ball bearing Screw Hex shaft Chain Trunion bearing Friction disc wheel Screw Nut Retext ring Washer Ball bearing Bearing retainer Screw Friction pulley Swing plate Spacer Flange lock nut Retainer ring Spring link Retainer ring Spring Intermed sprocket Flat washer Ball bearing Bearing retainer Axle and pin assy Axle and bushing Sprocket Auto lock clutch Screw Axle bearing Axle support bracket Screw Locking collar Washer Ring retainer Support bracket Screw Locking collar Washer Ring retainer Support bracket Screw Locking collar		33T/7T

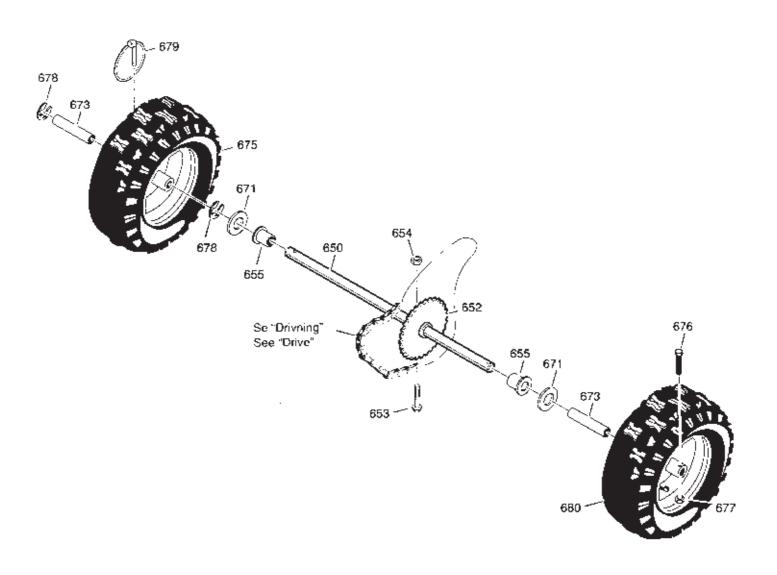






Paris Catalogue									SINC	WINKOWERS
	Utgåva Sildnr Issue Picture No		No	SNOW STORI HJUL		DW STORM EELS		Sida Page		
	2004	- 14	13	17A						56
	Pos. Fig.	An	tal/Qt	antity	/	Art nr Part No	Benämning	Description	Şals Kil	Anmärkning Notes
Ì		2827								
Х	650 652 653 654 655 671 673 675 676 677	1 1 1 2 2 2 1 1 1 2 1				1812-1712-01 1812-1755-01 1812-1760-01 1812-1724-01 1812-0407-01 1812-1734-01 1812-1949-01 1812-1114-01 1812-1760-01 1812-0567-01	Hjulaxel Kedjedrev Skruv Mutter Lager Bricka Hjulbussning Hjul kpl-hö Bult Mutter Läsring Lässning	Sprocket		13 x 5.00-6
×	679 680	1 1				1812-0408-01	Låssprint	.   Clik pin		13 x 5.00-6
		į								

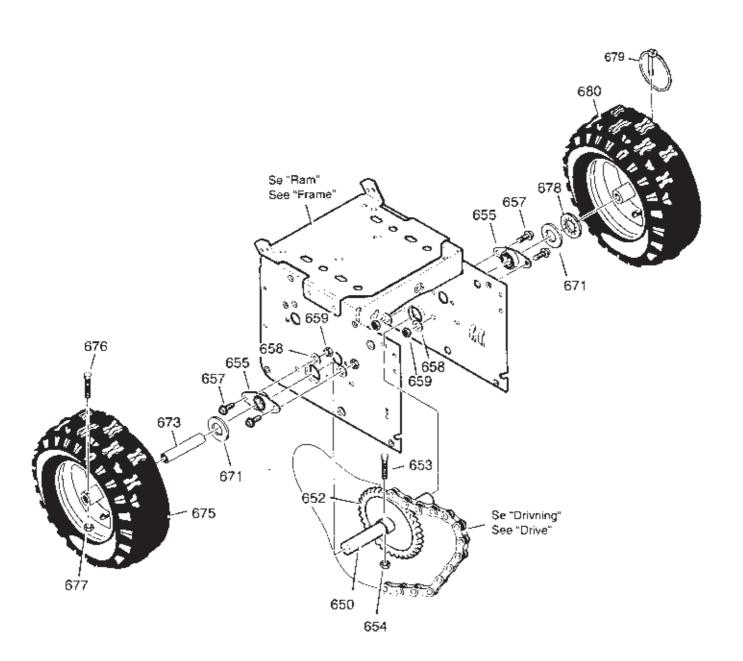






									· .		W INKOMENS
	Utgå Issue	9	Pic	dnr sture f	No	SNOW BLIZZA HJUL	ARD	SNOV	N BLIZZARD ELS		Sida Page
]	2004	- 14	17	/ B							58
	Pos.	Ant	al/Qu	antity		Art nr	Benämning		Description	Sals	Anmärkning
	Fig.					Part No				Kil	Notes
		2830									
	650 652 653 654 655 657 658 659 671 673	1 1 1 2 4 4 4 2 2				1812-1712-01 1812-1755-01 1812-1760-01 1812-0820-01 9988-3719-16 9683-0035-02 9795-3731-02 1812-0407-01 1812-1734-01	Hjulbussning		Wheel axle		
Х	675 676 677 678	1 1 1 2				1812-1114-01 1812-1760-01	Hjul kpl- hö Bult Mutter Läsring		Wheel assy- RH		4.00/4.80-8 (16x4")
Х	679 680	1 1				1812-0408-01	Låssprint Hjul kpl- vä		Clik pin Wheel assy- LH		4.00/4.80-8 (16x4*)

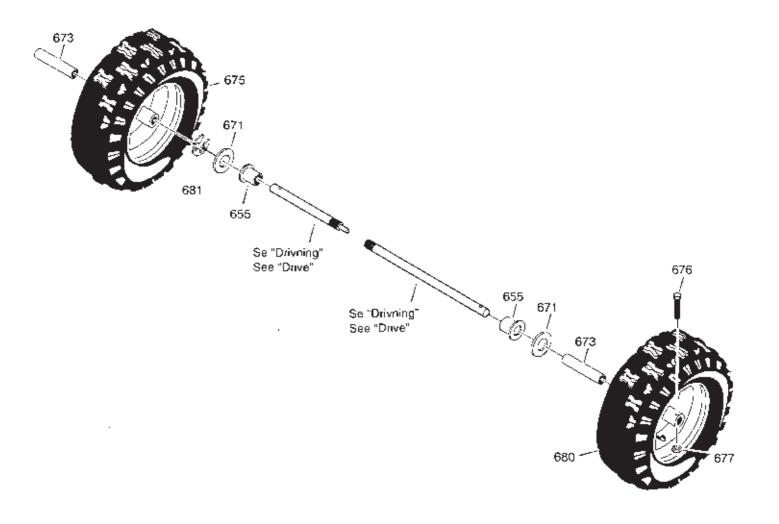






Parts Catalogue							SNC	W THROWERS			
Utgåva Bildnr Issue Piclure No 2004-14 1779			ю	SNOW COMFO				Sida Page 60			
Pos. Fig.	Ant	tal/Qu	al/Quantity			Benämning	Description	Sats Kit	Anmärkning Notes		
655 671	2833 2 2 2				1812-D407-D1	Bricka	l Washer				
673 675 676 677 680	2 2 1				1812-1733-01 1812-1952-01 1812-1114-01 1812-1760-01 1812-1951-01	Hjulbussning Hjul kpl- vä Bult Mutter Hjul kpl- hö	Wheel bushing		4.00/4.80- 8 (16x4*) 4.00/4.80- 8 (16x4*)		
681	1				1812-0567-01	Lästing	. Retaining ring				
								!			
			:					:			
			i								
						:					
	Utgå lssud 2004 Pos. Fig. 655 671 673 675 676 677	Utgåva Issue 2004-14  Pos. An Fig. 2833  655 2 671 2 673 2 675 1 676 2 677 2 680 1	Utgåva Bill Pic 2004-14 17  Pos. Antal/Qu Fig. 2833  655	Utgåva Bildnr Picture N 2004-14 1779  Pos. Antal/Quantity Fig. 2833  655 2 671 2 673 2 675 1 676 2 677 2 680 1	Utgåva   Bildnr   Picture No   2004-14   1779   Pos.   Fig.   2833   655   2   671   2   673   2   675   1   676   2   677   2   680   1	Utgåva Bildnr Picture No HJUL  2004-14 1779  Pos. Antal/Quantity Part No  2833  655 2 1812-1724-01 671 2 1812-1733-01 675 1 1812-1952-01 676 2 1812-1114-01 677 2 1812-1760-01 680 1 1812-1951-01	Utgåva   Bildnr   Picture No   HJUL   WH  2004-14   1779   Art nr   Part No   Benämning    Fig.   2833   E812-1724-01   Lager    671   2   1812-1724-01   Bricka    673   2   1812-1733-01   Hjulbussning    675   1   1812-1952-01   Hjul kpl- vä    676   2   1812-1760-01   Mutter    680   1   1812-1951-01   Hjul kpl- hō    680   1   Hjul kpl- hō    680   1   Hjul kpl- hō    680   1   Hjul kpl- hō    680   Hjul kpl- hō	Utgåva Issue         Bildnr Picture No Picture No         SNOW COMFORT HJUL         SNOW COMFORT WHEELS           2004-14         1779         Art nr Part No         Benämning         Description           Fig.         2833         Issue Part No         Art nr Part No         Benämning         Description           655         2         1812-1724-01 Lager Axle bearing Washer Wheel bushing Wheel bushing Wheel bushing Wheel bushing Wheel sasy-LH Bill kpl- vä         Wheel assy-LH Bolt Bolt Bolt Wheel assy-LH Bolt Wheel assy-RH Wheel assy-RH Wheel assy-RH	Utgåva   Bildnr   Picture No   HJUL   WHEELS		

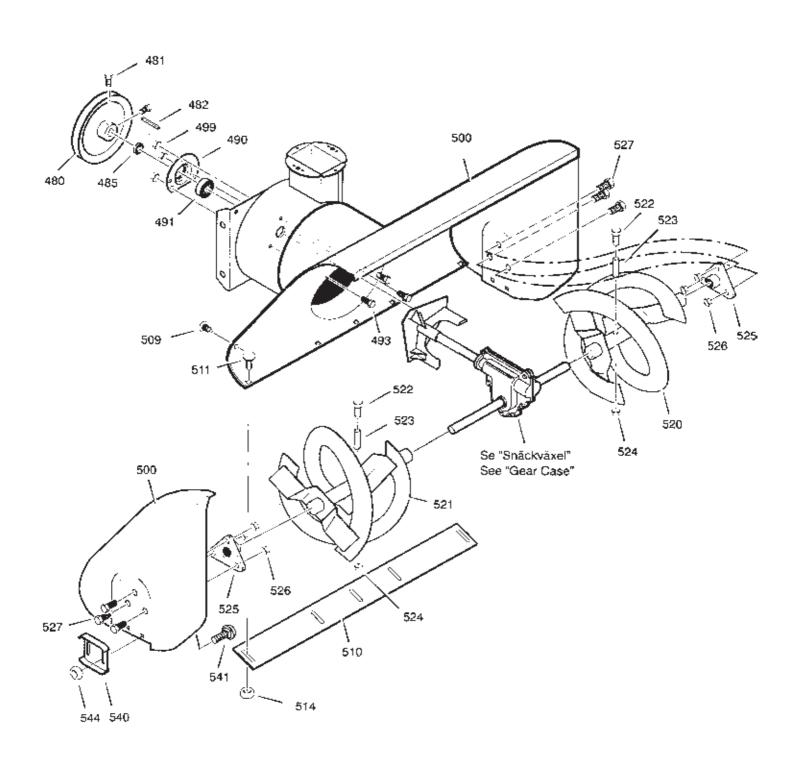






Parts Catak	ogue		4.6.		NU	W THROWERS			
Utgåva Issue 2004-14	Bildnr Picture No 1325A	SNOW STORI SNÖSKRUV		W STORM ER HOUSING					
Pos. Ar	L ntal/Quantity	Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes			
2827  480		1812-1854-01 1812-1119-01 1812-1609-01 1812-1690-01 1812-1858-01 9988-3613-16 9795-3631-02 1812-1843-01 1812-1843-01 1812-1860-01 1812-1860-01 1812-1860-01 1812-0631-01 1812-0631-01 1812-0812-01 1812-0878-01 9743-3621-32 9988-3619-16 1812-1391-01 9899-3622-16	Skruv Kil Distans Kullagerhållare Kullager Skruv Mutter Snöskruvhus Plugg Skrapskär Skruv Mutter Snöskruv-vä Snöskruv-hö Brylbultsats Läsmutter Lager Mutter Skruv Skruv	Auger pulley Bott Key Spacer Ball bearing retainer Ball bearing Screw Nut Auger housing Plug Scraper blade Screw Nut Auger-LH Auger-RH Shear bolt kit - Spacer - Locking nut Bearing Nut Screw Height adjustor skid Screw Nut		INOTES			

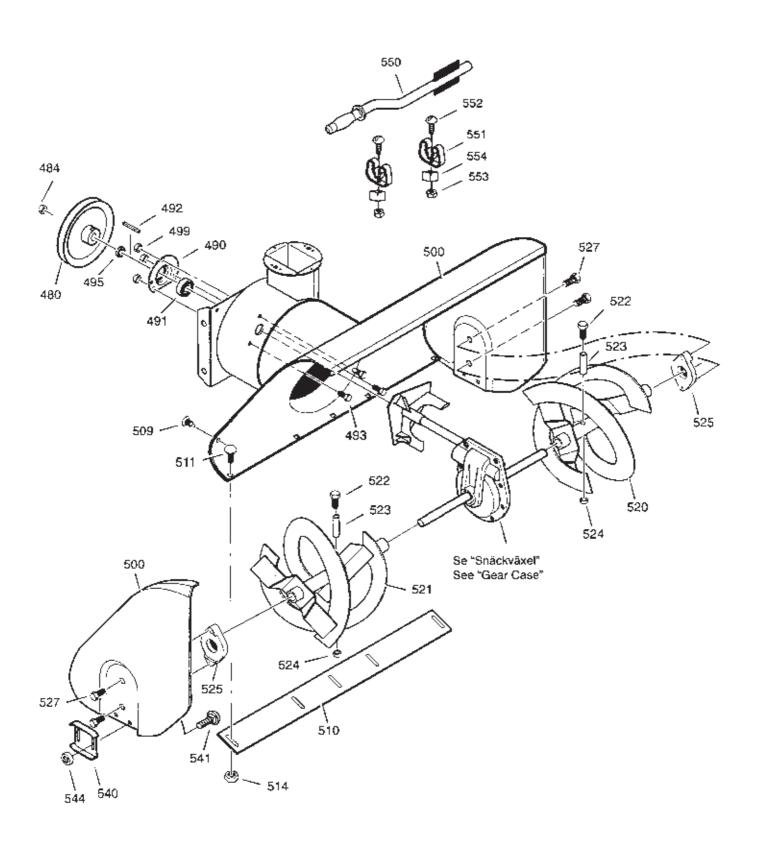






			ogaç							SINC	W INNOWERS
	Utgå Issue 2004			SNOW BLIZZ/ SNOW COMF SNÖSKRUV		SNO'	W BLIZZARD W COMFORT ER HOUSING		Sida Page 64		
	Pos. Fig.	Ar	ntal/Qu	uantity	ſ	Art nr Part No	Benämning		Description	Sats Kit	Anmärkning Notes
		2830	2833								
XXXX	480 484 490 491 492 493 495 509 510 521 522 523 524 525 541 544 550 551 554 555 553 554	11111313121551112224244122222	111131312155111222424412222			1812-1673-01 1812-1690-01 1812-1858-01 1812-1609-01 9988-3613-16 1812-1739-01 9795-3631-02 1812-1450-01 1812-1450-01 1812-1450-01 9899-3622-16 9795-3631-02 1812-1842-01 1812-9005-01 1812-0531-01 1812-0531-01 1812-1833-01 1812-1391-01 9899-3622-16 9795-3631-02 1812-1930-01 1812-1930-01 1812-1939-01 1812-1939-01 1812-1917-01	Kullagerhållare Kullager Kil Skruv Distans Mutter		Auger pulley Nut Ball bearing retainer Ball bearing Key Screw Spacer Nut Auger housing Plug Scraper blade Screw Nut Auger-LH Auger-RH Shear bolt kit Spacer Locking nut Bearing Screw Nut Clean- out brush Clips Screw Nut Universal pivot block		
		<u> </u>	<u> </u>				L				

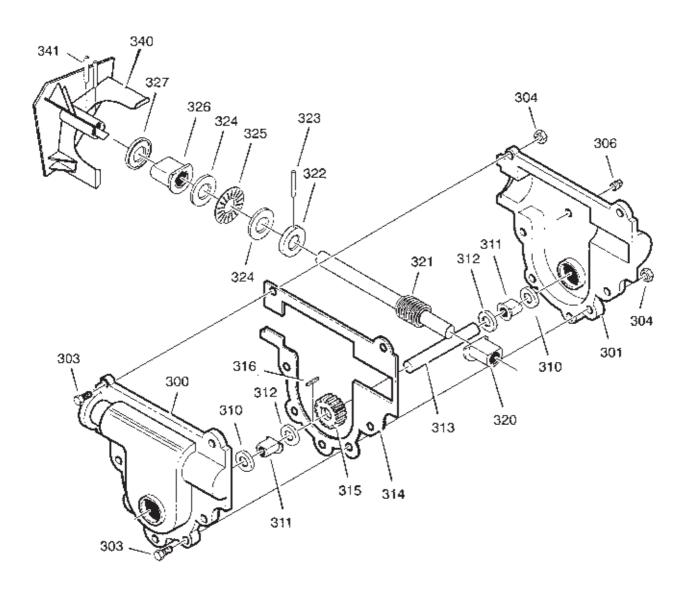






Parts Catalogue			214	OW THROWERS
Utgåva Bildnr Issue Pictur			W STORM R CASE	Sida Page
2004-14 13238				66
Pos. Antal/Quan	Art nr Part No	Benämning	Description Sat Kit	s Anmärkning Notes
300	1812-0908-01 9988-3519-18 1812-1758-01 1812-0856-01 1812-0857-01 1812-1360-01 1812-1361-01 1812-1361-01 1812-1371-01 1812-1359-01 1812-1359-01 1812-1359-01 1812-1359-01 1812-1359-01 1812-1360-01 1812-0857-01 1812-1360-01	S Skruv  Mutter Skruv Tätningsring Flänslager Bricka Snöskruvaxel Packning Snäckdrev Kil Bussning Ingående axel Distans Stift Bricka Nållager	Worm gear Woodruff key Bushing Input shaft Thrust collar Roll pin Thrust washer Needle bearing Flange bearing	

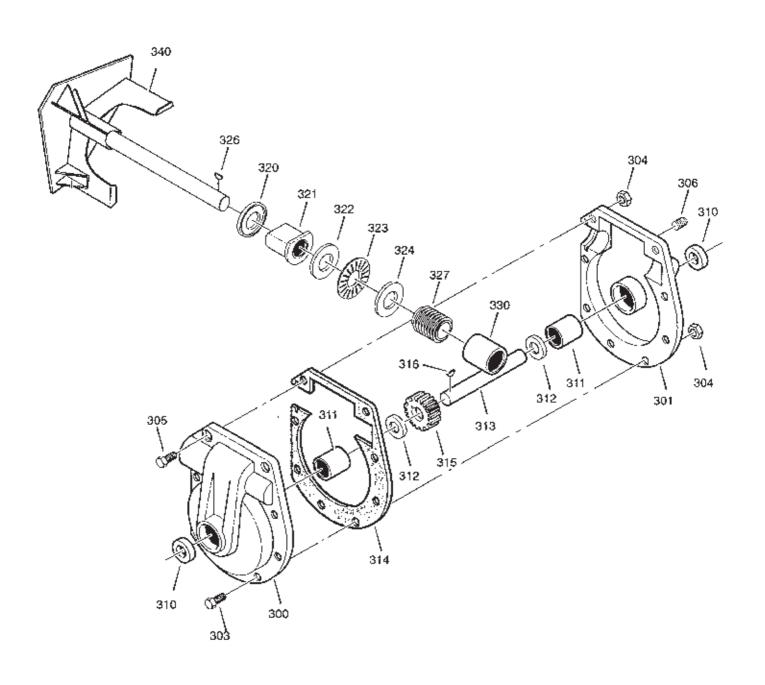






r ans calalogue						W INNOWERS				
Ulgāva Bildnr Issue Picture No 2004-14 1324			No	SNOW COMFORT			V BLIZZARD V COMFORT I CASE		Sida Page 68	
Pos. Fig.	Ar	ntat/Quantity		y	Art nr Parl No	8enämning		Description	Sats Kit	Anmärkning Notes
	2830	2833			i					
300 301 303 304 305 310 311 312 313 314 315 320 321 322 323 324 326 327 330 340	11671122211111111111	116711222111111111111111111111111111111			1812-0227-01 9987-5125-16 9743-5121-02 9987-5145-12 1812-0346-01 1812-0344-01 1812-0345-01 1812-1443-01 1812-0226-01 1812-0335-01 1812-0335-01 1812-025-01 1812-025-01 1812-025-01 1812-0285-01 1812-0285-01 1812-0307-01 1812-0336-01 1812-0397-01	Snāckväxelhus- hō		Gear case- R.H. Gear case- L.H. Screw Oil plug Ring Bearing Washer Auger shaft Gasket Worm gear Woodruffkey Ring Flange bearing Thrust washer Key Gear Bearing Impelfer assy		

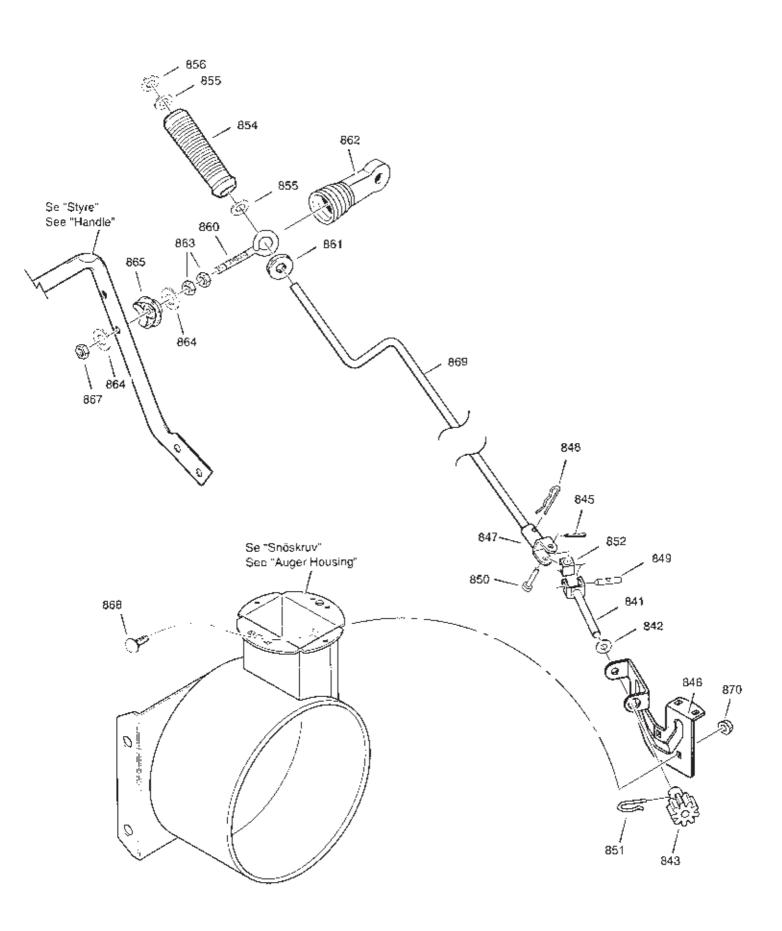






Faits Catalogue						SNOW THROWERS						
	Utgå Issue 2004	9	Picture No			SNOW STORI SNOW BLIZZ INSTÄLLNING	ARD	SNOW STORM SNOW BLIZZARD CHUTE ROD			Sida Page 70	
	Pos., Fig.	An	tal/Qu	Jantity	r	Art nr Part No	Benämning		Description	Sats Kit	Anmärkning Notes	
		2827	2830									
x	841 842 843 845 846 847 848 850 851 852 854 863 864 865 867 868 869 870	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2830 1 1 1 1 1 1 1 1 1 1 1 1 2 1 1 1 1 1 1			1812-1914-01 1812-1706-01 9599-0033-00 1812-1793-01 1812-1708-01 1812-1316-01 1812-1318-01 1812-1317-01 1812-1171-01 1812-1171-01 1812-1170-01 1812-1170-01 1812-1170-01 1812-1170-01 9743-3721-32 9699-0035-02 1812-1172-01 9743-3721-32 1812-1679-01 1812-1707-01	Gaffeistäng Kupad fjäderbricka Drèv Saxsprint Fäste Galfel Låsstift Axel Sprint Ledknut Handtag Bricka Låsning Öglebult Hylsa Hylsa-öglebult Mutter Planbricka Adapler Mutter Vagnsbult Inställningsvev Mutter		Yoke and rod Curved spring washer Gear Split pin Bracket Yoke adapter Hair pin Universal pin Clevis pin Hair pin Universal pivof block Handle Washer Retainer Eyebolt Grommet Boot- eye bolt Nut Flat washer Boot adaptor Nut Carriage bolt Chute crank Nut		9T	
	1	1		1	1		1			1	1	

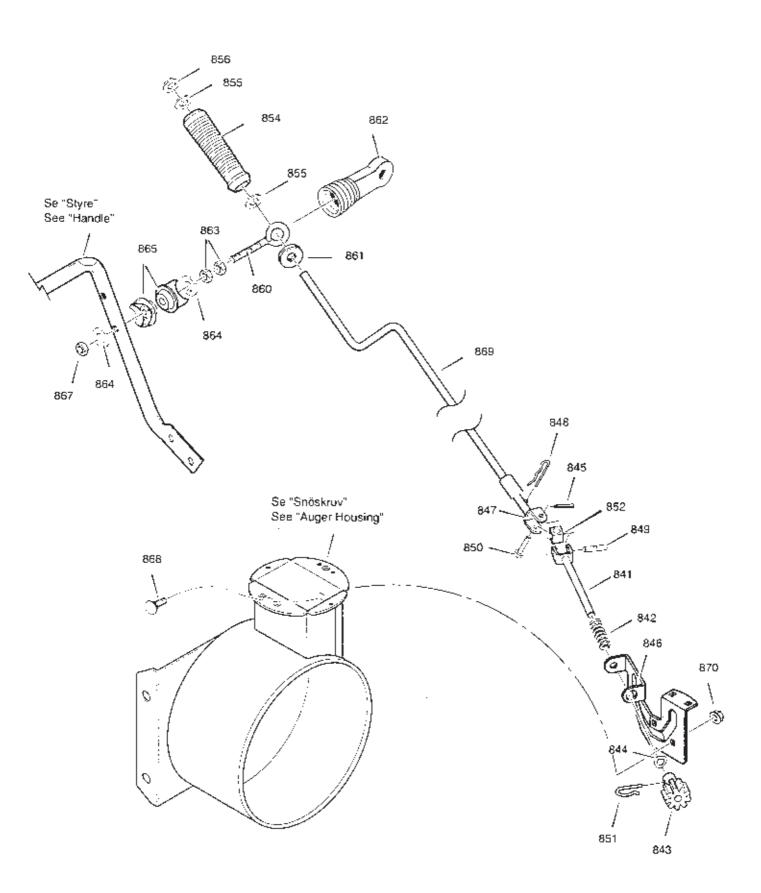






Urgava   Buler   Picture No   INSTALLNINGSVEV   SNOW COMFORT   CHUTE ROD   Page   72		Parts (	gue	SNOW THROWER								
Part No   Part		lssué	ssue		Picture No						:	Page
1			Ani	lal/Qu	antity			Benämning		Description		-
	X	842 843 844 845 846 847 848 850 851 852 854 855 860 861 862 863 864 865 867 868 869	1 1 1 1 1 1 1 1 2 2 2 1 1 1				1812-1761-01 1812-1706-01 1812-1914-01 9599-0033-00 1812-1793-01 1812-1708-01 1812-1511-01 1812-1316-01 1812-1317-01 1812-1168-01 1812-1171-01 1812-1483-01 1812-1821-01 1812-1822-01 9743-3721-32 9699-0035-02 1812-1172-01 9743-3721-32 1812-1679-01 1812-1707-01	Fjäder Drev Kupad fjäderbricka Saxsprint Fäste Gaflel Låsstift Axel Sprint Låsnål Ledknut Handtag Bricka Låsning Öglebult Hylsa Hylsa Hylsa Mutter Planbricka Adapter Mutter Vagnsbult Inställningsvev		Spring Gear Curved spring washer Split pin Bracket Yoke adapter Hair pin Universal pin Clevis pin Hair pin Universal pivot block Handte Washer Retainer Eye bott Grommet Eye bott boot Nut Flat washer Boot adaptor Nut Carriage bolt Chute crank		9T

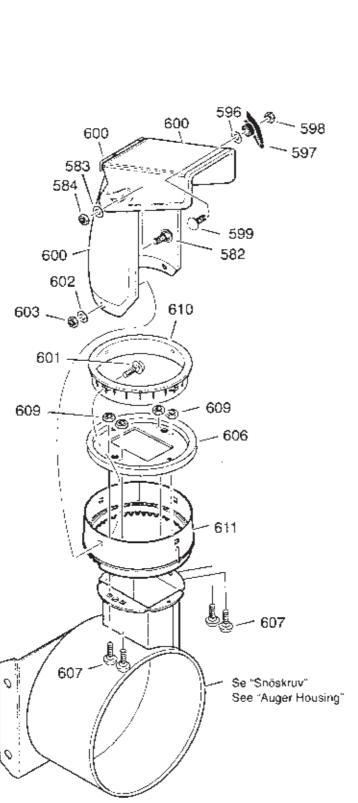


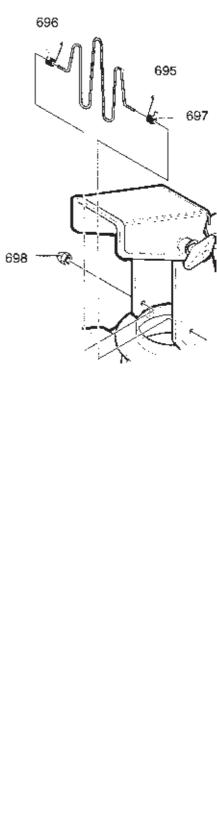





	Fans Catalogue					SNOW THROWERS					
	Utgáva Bildnr Issue Picture No 2004-14 1780			<b>N</b> o	SNOW STORM UTKAST	4	SNOW STORM DISCHARGE CHUI	re	Sida Page 74		
	Pos. Fig.			$\overline{}$	Art nr Part No	Benämning	Description	Anmärkning Notes			
X	582 583 584 596 597 598 599 600 601 602 603 606 607 609 610 695 698	2827 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				9699-0029-02 9743-3621-32 9699-0029-02 1133-0932-01 1812-1759-01 1812-1678-01 1812-1926-01 9899-3625-16 9699-0029-02 9743-3621-32 1812-1831-01 1812-1760-01 1812-1760-01 1812-1787-01 1133-0944-01 1133-0945-01	Skruv	Flat washer Nut Flat washer T-knob Nut Carriage bolt Chute assy Screw Flat washer Nut Chute rotate co Screw Nut Chute rotate co Screw Nut Chute rot. ring Retainer ring- Wire chute gu Torsion chute Torsion chute	ollar		

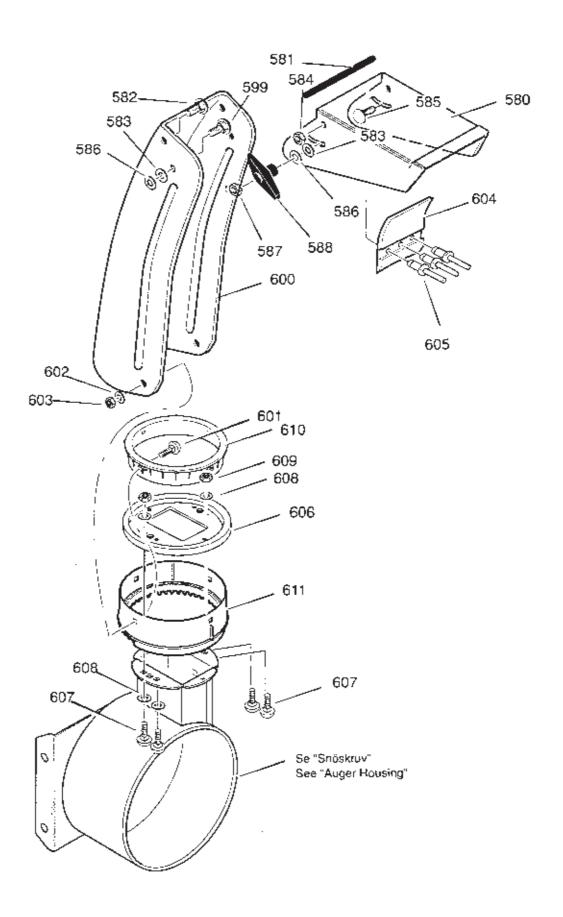





## SNÖSLUNGOR SNOW THROWERS

SNOW BLIZZARD SNOW BLIZZARD **Utgáva** Bilder Şida SNOW COMFORT Picture No. SNOW COMFORT Issue Page UTKAST DISCHARGE CHUTE 2004-14 1328C 76 Antal/Quantity Pos Art or Benämning Description Sats Anmärkning Part No Fig. Kit Notes 2830 2833 1812- 1464- 01 Utkastskärm ..... 580 Upper chute ..... 1 581 1 1812-1694-01 List ..... Trim..... 582 2 2 1133-1023-01 Skruv ..... Screw 2 583 2222 1812-1163-01 Plastbricka.... Plastic washer..... 2 9743-3621-32 Mutter..... 584 Nut ..... 2 585 1133-1023-01 Skruv ..... Screw..... 2 586 1812-0667-01 Plastbricka...... Plastic washer..... Mutter..... 587 1 1 Nut ..... 1812-1759-01 588 1 1 1133-0932-01 Låsratt ...... T- knob..... 1812- 1678- 01 Vagnsbult ...... 599 1 1 Carriage bolt ..... 600 1812- 1472- 01 Ulkaştrör ..... 1 1 Lower chute..... 3 3 601 9899-3625-16 Skruv ..... Screw..... 602 9699-0029-02 Planbricka..... Flat washer..... 3 3 603 9743-3621-32 Mutter..... Nut...... 604 1 1 1812-1569-01 Skyddstunga..... Flap ..... 605 3 3 1812-1462-01 Popnit..... Pop rivet ..... Chute rotate collar..... 606 1 1 1812-1983-01 Utkastplatia ..... 607 4 1812-1410-01 Vagnsbult ...... Carriage bolt ...... 1812-1831-01 Skruv..... 607 4 Screw ..... 608 4 9699-0028-02 | Planbricka..... Flat washer..... 609 4 4 1812-1760-01 Mutter ..... | Nut ..... 1812-1366-01 Utkastring-inre..... Chute rot, ring- inner....., 610 1 611 1812-1787-01 | Utkastring-yttre...... Retainer ring- outer .....