


Genuine Spare Parts



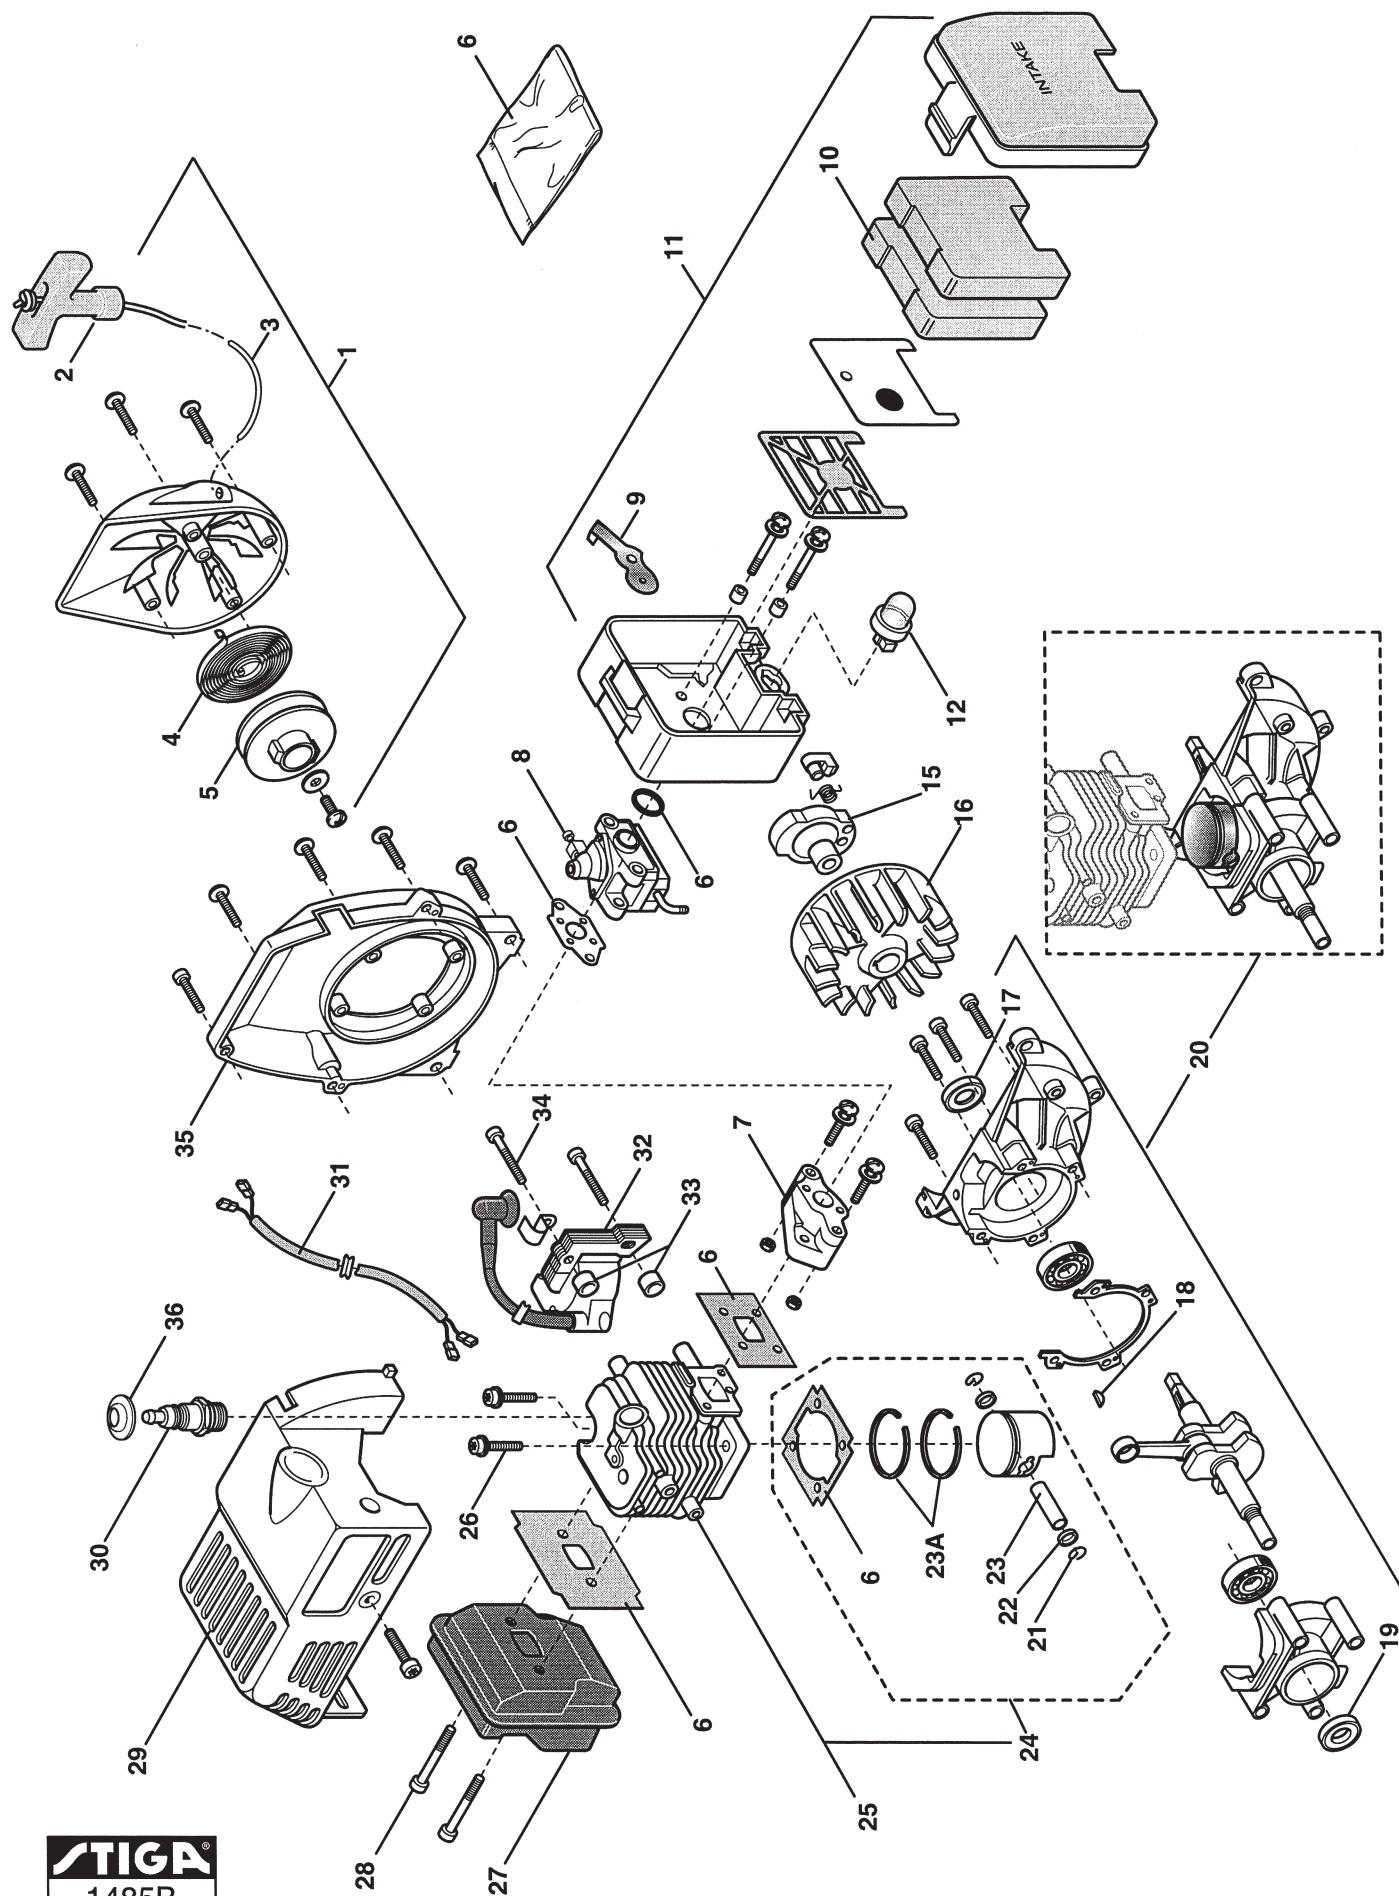

Utgåva Issue 2005- 12		Bildnr Picture No 1485B		ST 210- SB 22 MT 22CX- MB 22CX MOTOR		ST 210- SB 22 MT 22CX- MB 22CX ENGINE		Sida Page 254	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1021 6110	MT 22CX MB 22CX							
1	1	1			1911-3781-01	Start kpl.....	Start assy		Inkl. pos 2 - 5
2	1	1			1911-3782-01	• Starthandtag	• Starter handle.....		
3	1	1			1911-3783-01	• Startsnöre.....	• Starter rope.....		
4	1	1			1911-3784-01	• Fjäder.....	• Spring		
5	1	1			1911-3785-01	• Linhjul.....	• Pulley		
6	1	1			1911-3786-01	Packningssats	Gasket set		Ej ill/not ill.
7	1	1			1911-3787-01	Förgasarfäste.....	Carburettor base		
8	1	1			1911-3788-01	Förgasare kpl.....	Carburettor assy		
8A	1	1			1911-2062-01	Gasspjäll m.axel.....	Throttle valve & shaf		
9	1	1			1911-3789-01	• Chokespjäll	• Choke valve.....		
10	2	2			1911-3790-01	• Luftfilter.....	• Air filter		Inkl. pos 9 - 10
11	1	1			1911-3791-01	Luftfilter kpl	Air filter assy		
12	1	1			1911-3792-01	Primer	Primer		
15	1	1			1911-3855-01	Startspärr kpl.....	Starter pawl assy		
16	1	1			1911-3796-01	Svånghjul.....	Flywheel		
17	1	1			1911-3797-01	• Tätningsring	• Seal ring.....		Inkl. pos 21 - 23A Inkl. pos 24
18	1	1			1911-3798-01	• Kil	• Key		
19	1	1			1911-3799-01	• Tätningsring	• Seal ring.....		
20	1	1			1911-3800-01	Short- block	Short- block		
21	2	2			1911-3801-01	• • Låsring.....	• • Lock ring		
22	2	2			1911-3802-01	• • Packning	• • Gasket		Champion CJ7Y
23	1	1			1911-3803-01	• • Kolvbult	• • Piston pin		
23A	2	2			1911-3816-01	• • Kolvring	• • Piston ring.....		
24	1	1			1911-3804-01	• Kolv kpl.....	• Piston assy.....		
25	1	1			1911-3805-01	Cylinder kpl m.kolv	Cylinder assy w.pisto		
26	2	2			1911-3806-01	Skruv	Screw		
27	1	1			1911-3807-01	Ljuddämpare	Muffler		
28	2	2			1911-3808-01	Skruv	Screw		
29	1	1			1911-3809-01	Motorkåpa	Engine shield.....		
30	1	1			9400-0258-00	Tändstift	Spark plug		
31	1	1			1911-3810-01	Kablage.....	Wiring harness.....		
32	1	1			1911-3811-01	Elektronikspole	Electronic coil		
33	2	2			1911-3812-01	Distans	Spacer.....		
34	2	2			1911-3813-01	Skruv	Screw		
35	1	1			1911-3814-01	Svånghjulslock	Flywheel cover		
36	1	1			1911-3815-01	Tändstiftsskydd	Spark plug cover.....		

Utgåva Issue		Bildnr Picture No		SB 22 MB 22CX RÖJARE RIGG		SB 22 MB 22CX BRUSH CUTTER DRIVE SHAFT		Sida Page	
2005- 12		1616B						252	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6110	MB 22CX							
2	1	1			1911-3761-01	Platta	Fixed plate.....		Inkl. pos 11, 12, 34
3	4	4			1911-3762-01	Isolator	Insulator.....		
5	1	1			1911-3911-01	Gaswire	Throttle cable		
6	1	1			1911-3763-01	Lock.....	Cover		
7	1	1			1911-3764-01	Jordkabel.....	Ground wire		
8	1	1			1911-3918-01	Strömbrytare	Switch		
9	1				1911-3919-01	Kåpa kpl- gul.....	Housing assy- yellow		
9		1			6980325	Kåpa kpl- röd	Housing assy- red		
10	1	1			1911-3766-01	Bränsletank kpl	Fuel tank assy		
11	1	1			1911-3767-01	• Bränslefilter	• Fuel pick-up		
12	1	1			1911-3912-01	• Tanklock	• Fuel tank cap		
13	1	1			1911-3769-01	Fjäder.....	Spring		
14	1	1			1911-3914-01	Gasreglage.....	Throttle trigger		
14A	1	1			1911-3915-01	Säkerhetsspärr	Safety lever		
15	1	1			1911-3916-01	Rör nedre m.drivaxel	Lower tube w.shaft.....		
15A	1	1			1911-3917-01	Rör övre m.drivaxel	Upper tube w.shaft.....		
16	1	1			1911-3896-01	Stenskydd kpl	Stone guard assy		
16A	2	2			9865-0520-16	• Skruv	• Screw		
16B	2	2			9747-0531-02	• Mutter.....	• Nut		
17	1	1			1911-3772-01	• Kniv	• Line cutter blade		
18	1	1			1911-3897-01	Handtag främre kpl.....	Front handle assy		
18A	4	4			9865-0530-16	• Skruv	• Screw		
18B	4	4			9747-0531-02	• Mutter.....	• Nut		
19	1	1			1911-3895-01	Skärhuvud kpl.....	Cutting head assy.....		
19A	1	1			1911-9007-04	Skärtråd (2.0 mm)	Cutting line (2.0 mm).....		
19A	1	1			1911-9007-08	Skärtråd (2.0 mm)	Cutting line (2.0 mm).....		
20	1	1			1911-3898-01	• Fjäder.....	• Spring		
21	2	2			1911-3899-01	• Trådhylsa	• Line inlet		
22	1	1			1911-3757-01	• Ratt (vå-gänga).....	• Knob (LH-thread)		
23	1	1			1911-3900-01	Snäckväxel kpl.....	Gear case assy		
23A	1	1			1911-3901-01	Hylsa	Collar		
23B	1	1			1911-3902-01	Övre ringmutter	Upper ring nut.....		
23C	1	1			1911-3903-01	Nedre ringmutter	Lower ring nut		
23E	1	1			1911-3905-01	Mutter.....	Nut		
23F	2	2			9997-0535-12	• Skruv	• Screw		
23G	3	3			9699-0024-02	• Planbricka.....	• Flat washer		
23H	2	2			9739-0531-22	• Mutter.....	• Nut		
23I	1	1			9865-0512-16	• Skruv	• Screw		
23J	1	1			9683-0015-02	• Låsbricka	• Lock washer		
24	1	1			1911-3906-01	Stabiliseringsskål.....	Stabilizer bowl.....		
25	1	1			1911-3920-01	Röjklinga	Clearing blade		
26	1	1			1911-3907-01	Nyckel- skärhuvud	Key-cutting head		
27	1	1			1911-3908-01	Sele	Harness.....		
28	1	1			1911-3909-01	Fäste f.sele.....	Harness support		
28A	1	1			9865-0510-16	• Skruv	• Screw		
28B	1	1			9747-0531-02	• Mutter.....	• Nut		
29	1	1			1911-3910-01	Dekal- säkerhet	Label- safety		
30	1	1			1911-3780-01	Kopplingshjul.....	Clutch drum		
31	1	1			1911-3779-01	Koppling	Clutch.....		
32	1	1			1911-3777-01	Rörkoppling kpl.....	Tube joint		
32A	1	1			9939-0630-12	• Skruv	• Screw		
32B	2	2			9799-0631-02	• Mutter.....	• Nut		
32C	1	1			9997-0635-12	• Skruv	• Screw		
33	1	1			1911-3776-01	Axelhylsa	Shaft sleeve.....		
34	1	1			1911-3929-01	• Gummiringstättning.....	• Grommet.....		
35	3	3			1911-3013-01	Skruv	Screw		
36	2	2			1911-4262-01	Skruv	Screw		
37	2	2			1911-4263-01	Bricka	Washer.....		
38	8	8			1911-4264-01	Skruv	Screw		
39	6	6			1911-4265-01	Skruv	Screw		