



Genuine Spare Parts








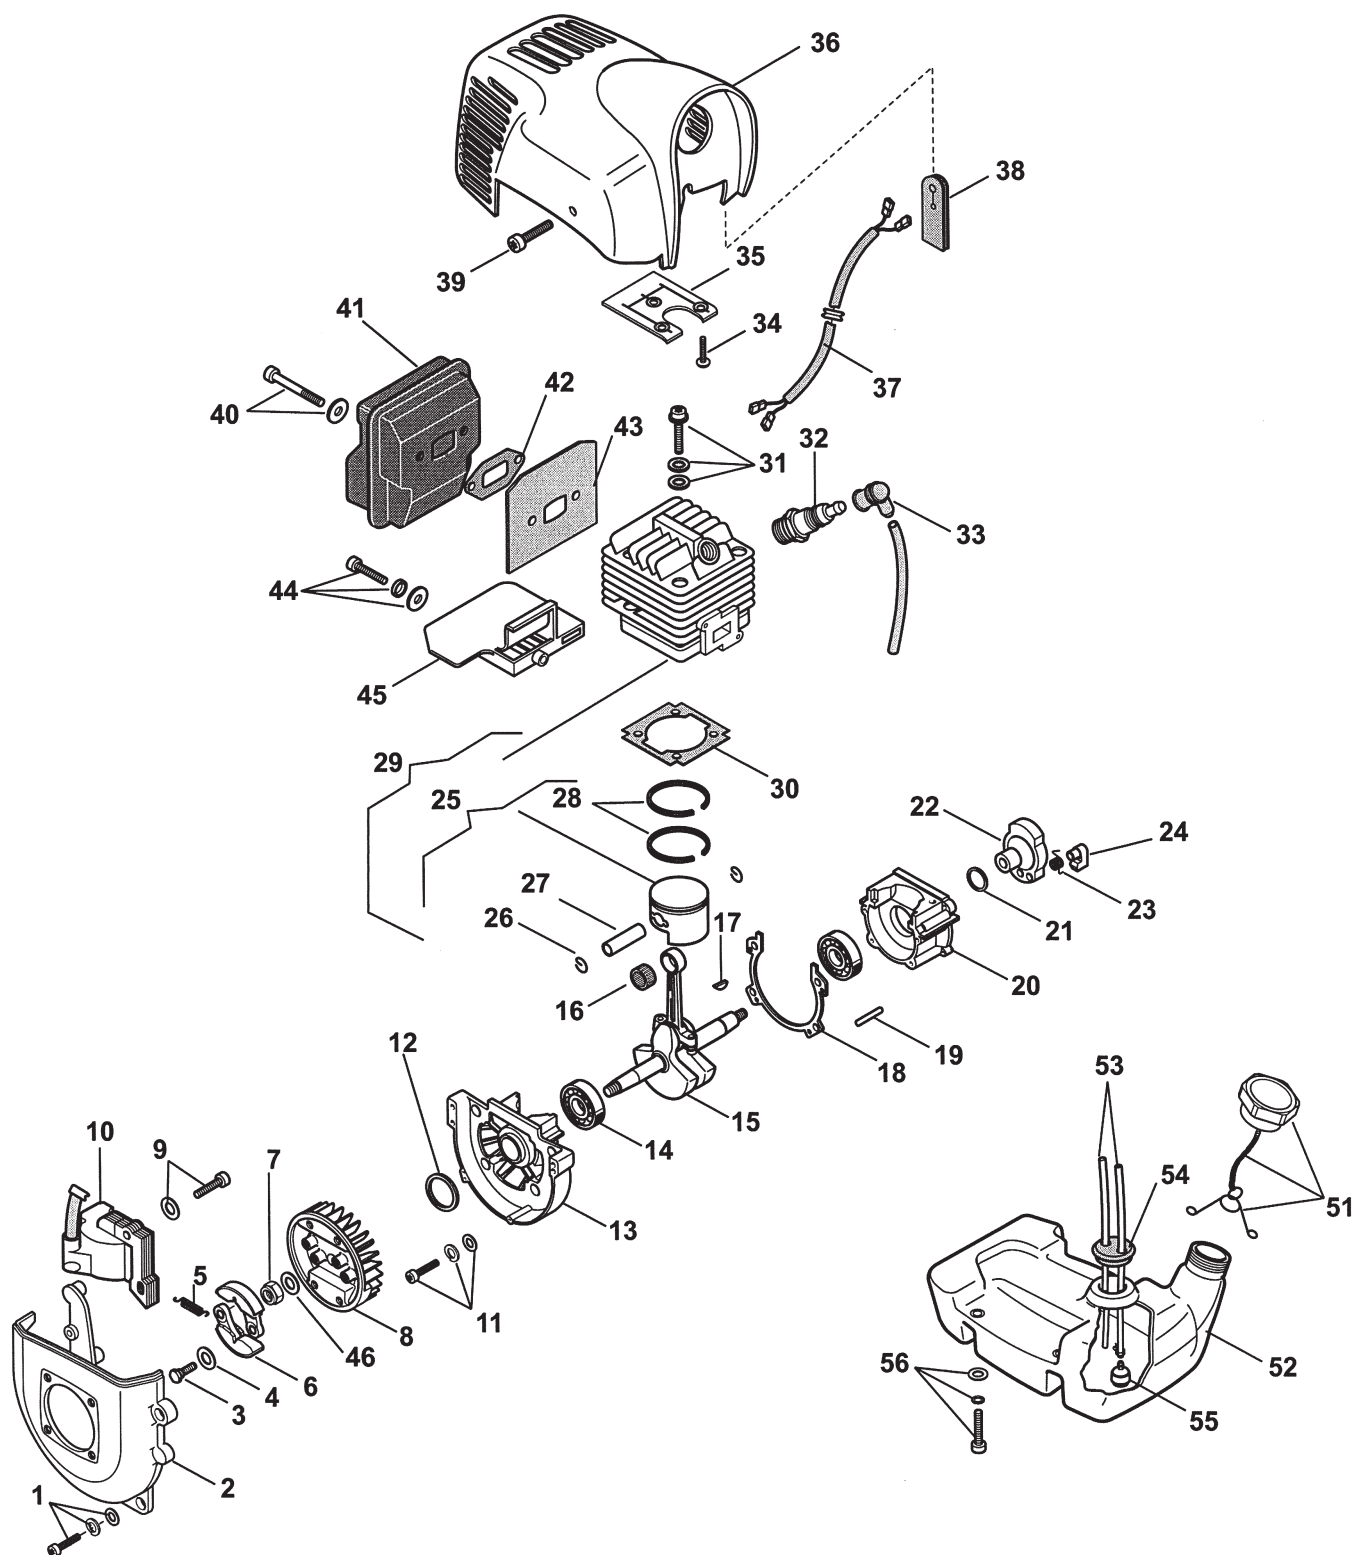

Utgåva Issue 2005- 12		Bildnr Picture No 1968		ST 290- SB 27- SB 29 MT 26- MB 26 MOTOR		ST 290- SB 27- SB 29 MT 26- MB 26 ENGINE		Sida Page 266	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1029 6116 6117	MT 26 MB 26							
1	4	4			1911-4334-01	Skrusats.....	Screw set		
2	1	1			1911-4284-01	Stödhjul	Transm.support case.....		
3	2	2			1911-4310-01	Skruv	Screw		
4	2	2			1911-4308-01	Bricka	Washer.....		
5	1	1			1911-4309-01	Fjäder.....	Spring		
6	2	2			1911-4307-01	Koppling	Clutch unit.....		
7	1	1			1911-4344-01	Mutter.....	Nut		
8	1	1			1911-4277-01	Svänghjul.....	Flywheel		
9	2	2			1911-4337-01	Skrusats.....	Screw set		
10	1	1			1911-4276-01	Elektronikspole	Electronic coil		
11	4	4			1911-4335-01	Skrusats.....	Screw set		
12	1	1			1911-4283-01	Tätningsring	Seal ring		
13	1	1			1911-4280-01	Vevhus- främre	Crankcase- front.....		
14	2	2			1911-4324-01	Kullager	Ball bearing		
15	1	1			1911-4291-01	Vevaxel	Crankshaft.....		
16	1	1			1911-4292-01	Nållager	Needle bearing		
17	1	1			1911-4323-01	Kil	Key		
18	1	1			1911-4282-01	Packning.....	Gasket		
19	3	3			1911-4342-01	Centerstift.....	Centering pin.....		
20	1	1			1911-4281-01	Vevhus- bakre	Crankcase- rear		
21	1	1			1911-4283-01	Tätningsring	Seal ring		
22	1	1			1911-4306-01	Startkopp.....	Starter cup		
23	1	1			1911-4345-01	Fjäder.....	Spring		
24	1	1			1911-4305-01	Startspärr	Starter hook		
25	1	1			1911-4287-01	• Kolv	• Piston.....		Inkl. pos 26 - 28
26	2	2			1911-4290-01	•• Låsring.....	•• Lock ring		
27	1	1			1911-4289-01	•• Kolvbult	•• Piston pin		
28	2	2			1911-4288-01	•• Kolvring	•• Piston ring.....		
29	1	1			1911-4278-01	Cylinder- kolv kpl	Cylinder- piston assy		Inkl. pos 25
30	1	1			1911-4279-01	Cylinderpackning	Cylinder gasket		
31	4	4			1911-4334-01	Skrusats.....	Screw set		
32	1	1			1911-4331-01	Tändstift	Spark plug.....		
33	1	1			1911-4298-01	Tändstiftshatt.....	Spark plug cover		
34	3	3			1911-4334-01	Skrusats.....	Screw set		
35	1	1			1911-4319-01	Skydd	Guard		
36	1				1911-4341-01	Motorkåpa- gul	Engine cover- yellow		
36		1			6981121	Motorkåpa- röd	Engine cover- red		
37	2	2			1911-4297-01	Kabel	Switch wire		
38	1	1			1911-4296-01	Kabelhållare	Cable retainer		
39	2	2			1911-4325-01	Skruv	Screw		
40	2	2			1911-4336-01	Skrusats.....	Screw set		
41	1	1			1911-4315-01	Ljuddämpare	Muffler		
42	1	1			1911-4317-01	Packning.....	Gasket		
43	1	1			1911-4316-01	Ljuddämparskydd.....	Muffler shield		
44	1	1			1911-4337-01	Skrusats.....	Screw set		
45	1	1			1911-4318-01	Skydd	Guard		
46	1	1			1911-4343-01	Bricka	Washer.....		
51	1	1			1911-4312-01	Tanklock	Tank cap.....		
52	1	1			1911-4311-01	Bränsletank kpl	Fuel tank assy		
53	2	2			1911-4313-01	Bränsleslang	Fuel hose		
54	1	1			1911-4314-01	Gummihylsa	Grommet.....		
55	1	1			1911-4254-01	Bränslefilter	Intake filter		
56	4	4			1911-4327-01	Skrusats.....	Screw set		

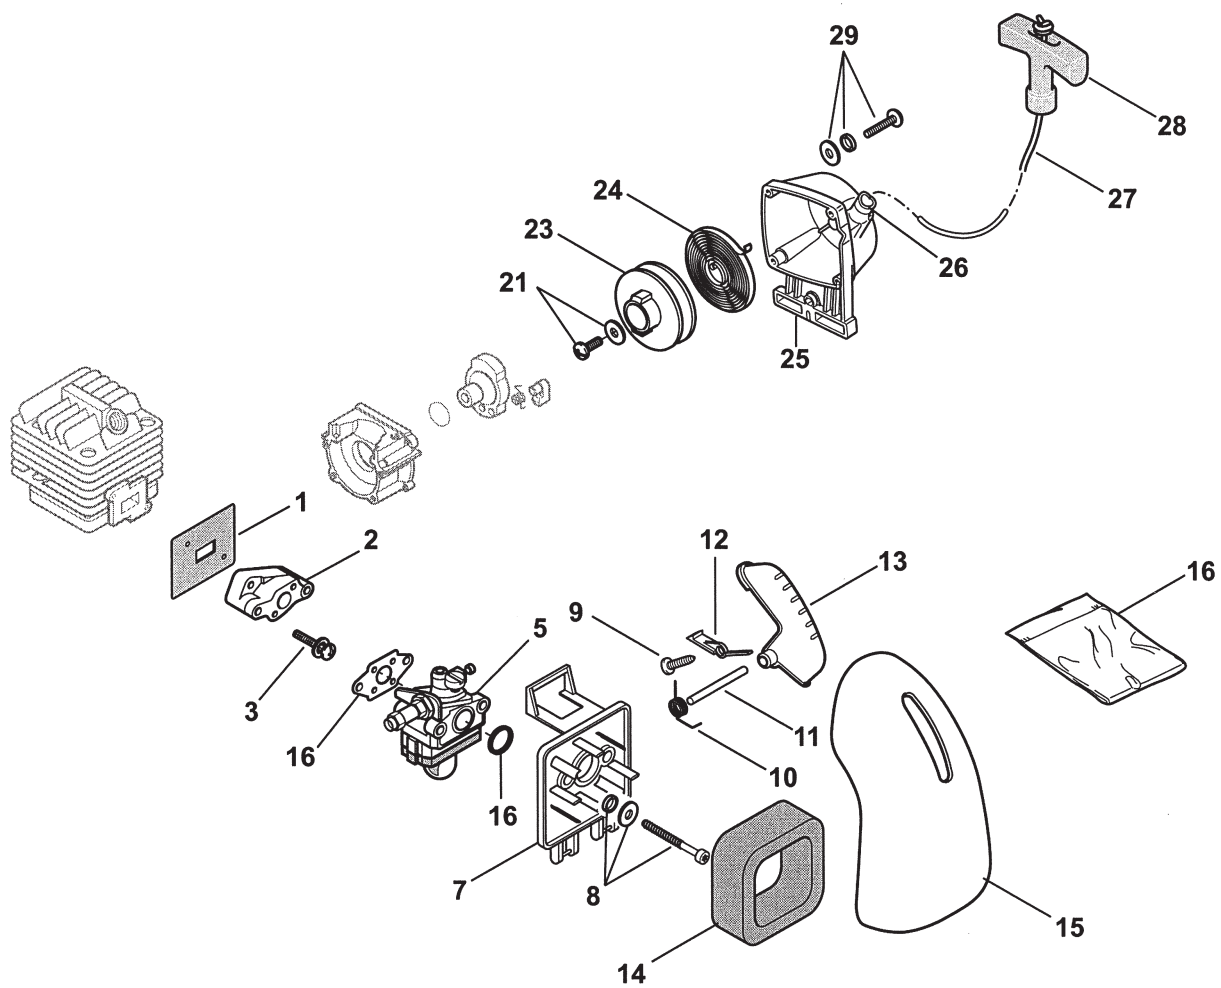

Utgåva Issue 2005- 12		Bildnr Picture No 1969		ST 290- SB 27- SB 29 MT 26- MB 26 FÖRGASARE		ST 290- SB 27- SB 29 MT 26- MB 26 CARBURETTOR		Sida Page 268	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1029 6116 6117	MT 26 MB 26							
1	1	1			1911-4286-01	Packning	Gasket		WYJ- 393
2	1	1			1911-4285-01	Insugningsrör	Intake manifold		
3	2	2			1911-4333-01	Skruvsats.....	Screw set		
5	1	1			1911-4122-01	Förgasare kpl.....	Carburettor assy		
7	1	1			1911-4294-01	Luftfilterhållare	Air filter holder		
8	2	2			1911-4330-01	Skruvsats.....	Screw set		
9	2	2			1911-4110-01	Skruv	Screw		
10	1	1			1911-4320-01	Fjäder.....	Spring		
11	1	1			1911-4321-01	Stift.....	Pin		
12	1	1			1911-4322-01	Hållare	Retainer		
13	1	1			1911-4332-01	Tryckknapp	Button		
14	1	1			1911-4295-01	Luftfilter	Air filter		
15	1				1911-4340-01	Filterlock- gul	Filter cover- yellow		
15		1			6981119	Filterlock- röd.....	Filter cover- red		
16	1	1			1911-4293-01	Packning- membransats	Gasket- diaphragm kit		
21	1	1			1911-4326-01	Skruvsats.....	Screw set		
23	1	1			1911-4301-01	Linhjul	Starter pulley.....		
24	1	1			1911-4300-01	Returfjäder	Rewind spring		
25	1	1			1911-4299-01	Starthus.....	Starter recoil case		
26	1	1			1911-4303-01	Linguide.....	Rope guide.....		
27	1	1			1911-4304-01	Startsnöre.....	Starter cord		
28	1	1			1911-4302-01	Starthandtag	Starter handle		
29	4	4			1911-4337-01	Skruvsats.....	Screw set		

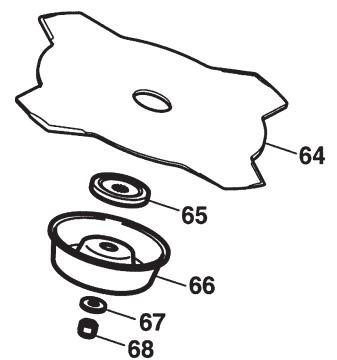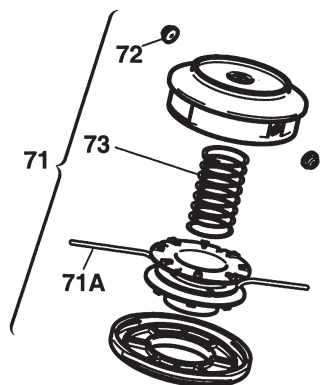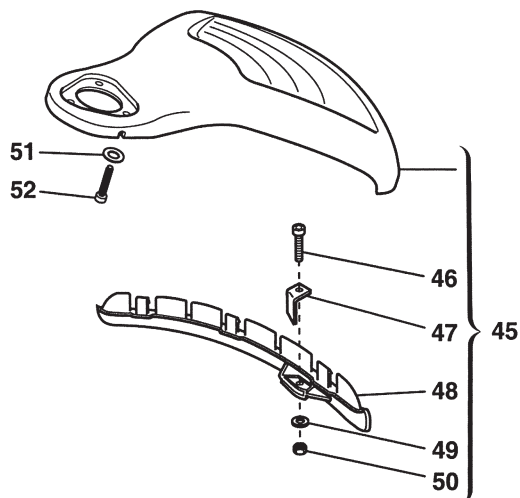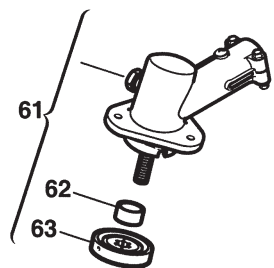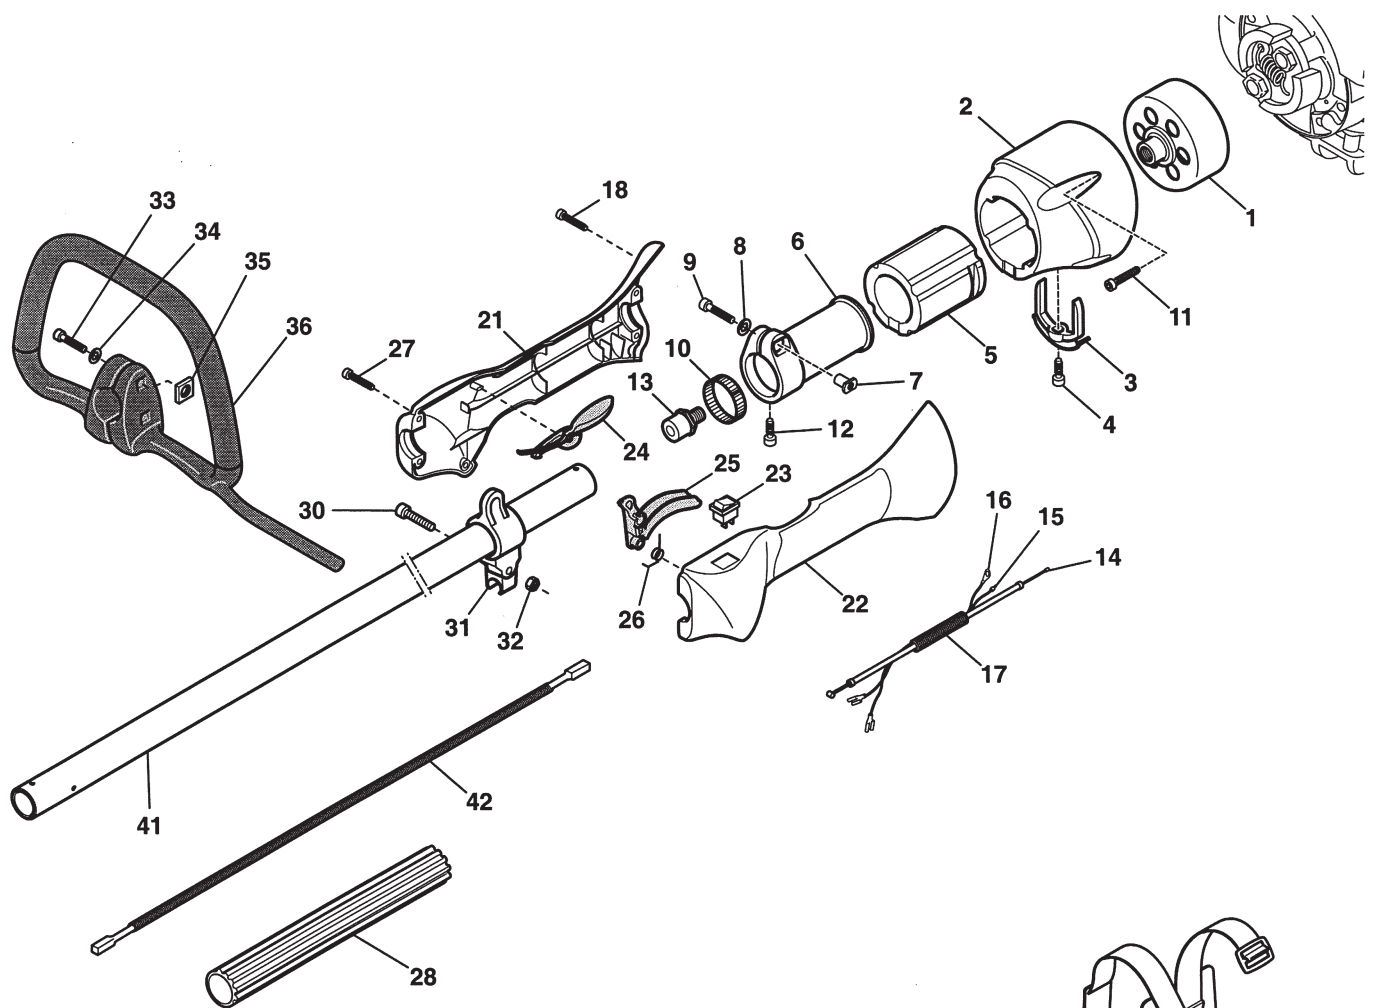

Utgåva Issue 2005- 12		Bildnr Picture No 1965		SB 27 RÖJARE RIGG		SB 27 BRUSH CUTTER DRIVE SHAFT		Sida Page 260	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6116								
1	1				1911-4206-01	Kopplingstrumma	Clutch drum		
2	1				1911-4189-01	Transmissionsstöd	Transmission support		
3	1				1911-4154-01	Gaffel	Fork		
4	1				1911-3002-01	Skruv	Screw		
5	1				1911-4155-01	Hylsa	Grommet		
6	1				1911-4188-01	Stöd	Support		
7	1				1911-4245-01	Bussning	Bushing		
8	1				1911-3267-01	Bricka	Washer		
9	1				1911-3007-01	Skruv	Screw		
10	1				1911-4236-01	Reducering	Reduction		
11	4				1911-3012-01	Skruv	Screw		
12	1				1911-3025-01	Skruv	Screw		
13	1				1911-4176-01	Lagernav	Bearing hub		
14	1				1911-4137-01	Gaswire	Throttle wire		
15	1				1911-4127-01	Kabel	Cable		
16	1				1911-4132-01	Jordkabel	Ground cable		
17	1				1911-4164-01	Kabelhölje	Wire sheath		
18	2				1911-3002-01	Skruv	Screw		
21	1				1911-4184-01	Handtag- hö	Handgrip- RH		
22	1				1911-4185-01	Handtag- vä	Handgrip- LH		
23	1				1911-3053-01	Stoppkontakt	Stop switch		
24	1				1911-4170-01	Säkerhetsspärr	Safety lever		
25	1				1911-4169-01	Gasreglage	Throttle lever		
26	1				1911-4173-01	Fjäder	Spring		
27	4				1911-3001-01	Skruv	Screw		
28	1				1911-4152-01	Värmeisolering	Heat insulator		
30	1				1911-3007-01	Skruv	Screw		
31	1				1911-4187-01	Fäste- sele	Harness support		
32	1				1911-3278-01	Mutter	Nut		
33	2				1911-3008-01	Skruv	Screw		
34	2				1911-3015-01	Bricka	Washer		
35	2				1911-3023-01	Mutter	Nut		
36	1				1911-4166-01	Handtag- främre	Handle- front		
41	1				1911-4223-01	Transmissionsrör	Transmission tube		
42	1				1911-4118-01	Transmissionsaxel	Transmission shaft		
45	1				1911-4217-01	Skyddskåpa kpl	Safety cover		Inkl. pos 46 - 50
46	1				1911-3006-01	• Skruv	• Screw		
47	1				1911-3077-01	• Kniv	• Line cutter		
48	1				1911-4180-01	• Skydd	• Protection		
49	1				1911-3216-01	• Bricka	• Washer		
50	1				1911-3022-01	• Mutter	• Nut		
51	3				1911-3216-01	Bricka	Washer		
52	3				1911-3013-01	Skruv	Screw		
55	1				1911-3724-01	Sele	Harness		
61	1				1911-4193-01	Snäckväxel kpl	Gear case		Inkl. pos 62 - 63
62	1				1911-4266-01	• Hylsa	• Collar		
63	1				1911-4267-01	• Ringmutter- övre	• Ring nut- upper		
64	1				1911-3179-01	Röjklinga	Clearing blade		4T - Ø 255 mm
65	1				1911-3680-01	Ringmutter- nedre	Ring nut- lower		
66	1				1911-4242-01	Stabilisator	Stabilizer		
67	1				1911-4228-01	Bricka	Washer		
68	1				1911-4232-01	Mutter	Nut		
71	1				1911-4148-01	Skärhuvud kpl	Nylon head assy		Inkl. pos 72 - 73
71A	1				1911-9008-04	Skärtråd (2.4 mm)	Cutting line (2.4 mm)		0.45 kg (90 m)
71A	1				1911-9008-08	Skärtråd (2.4 mm)	Cutting line (2.4 mm)		15 m
72	2				1911-3875-01	• Trådhylsa	• Line inlet		
73	1				1911-3876-01	• Fjäder	• Spring		
99	1				1911-3212-01	Skyddsglasögon	Protective goggles		Ej ill/not il.