




Genuine Spare Parts

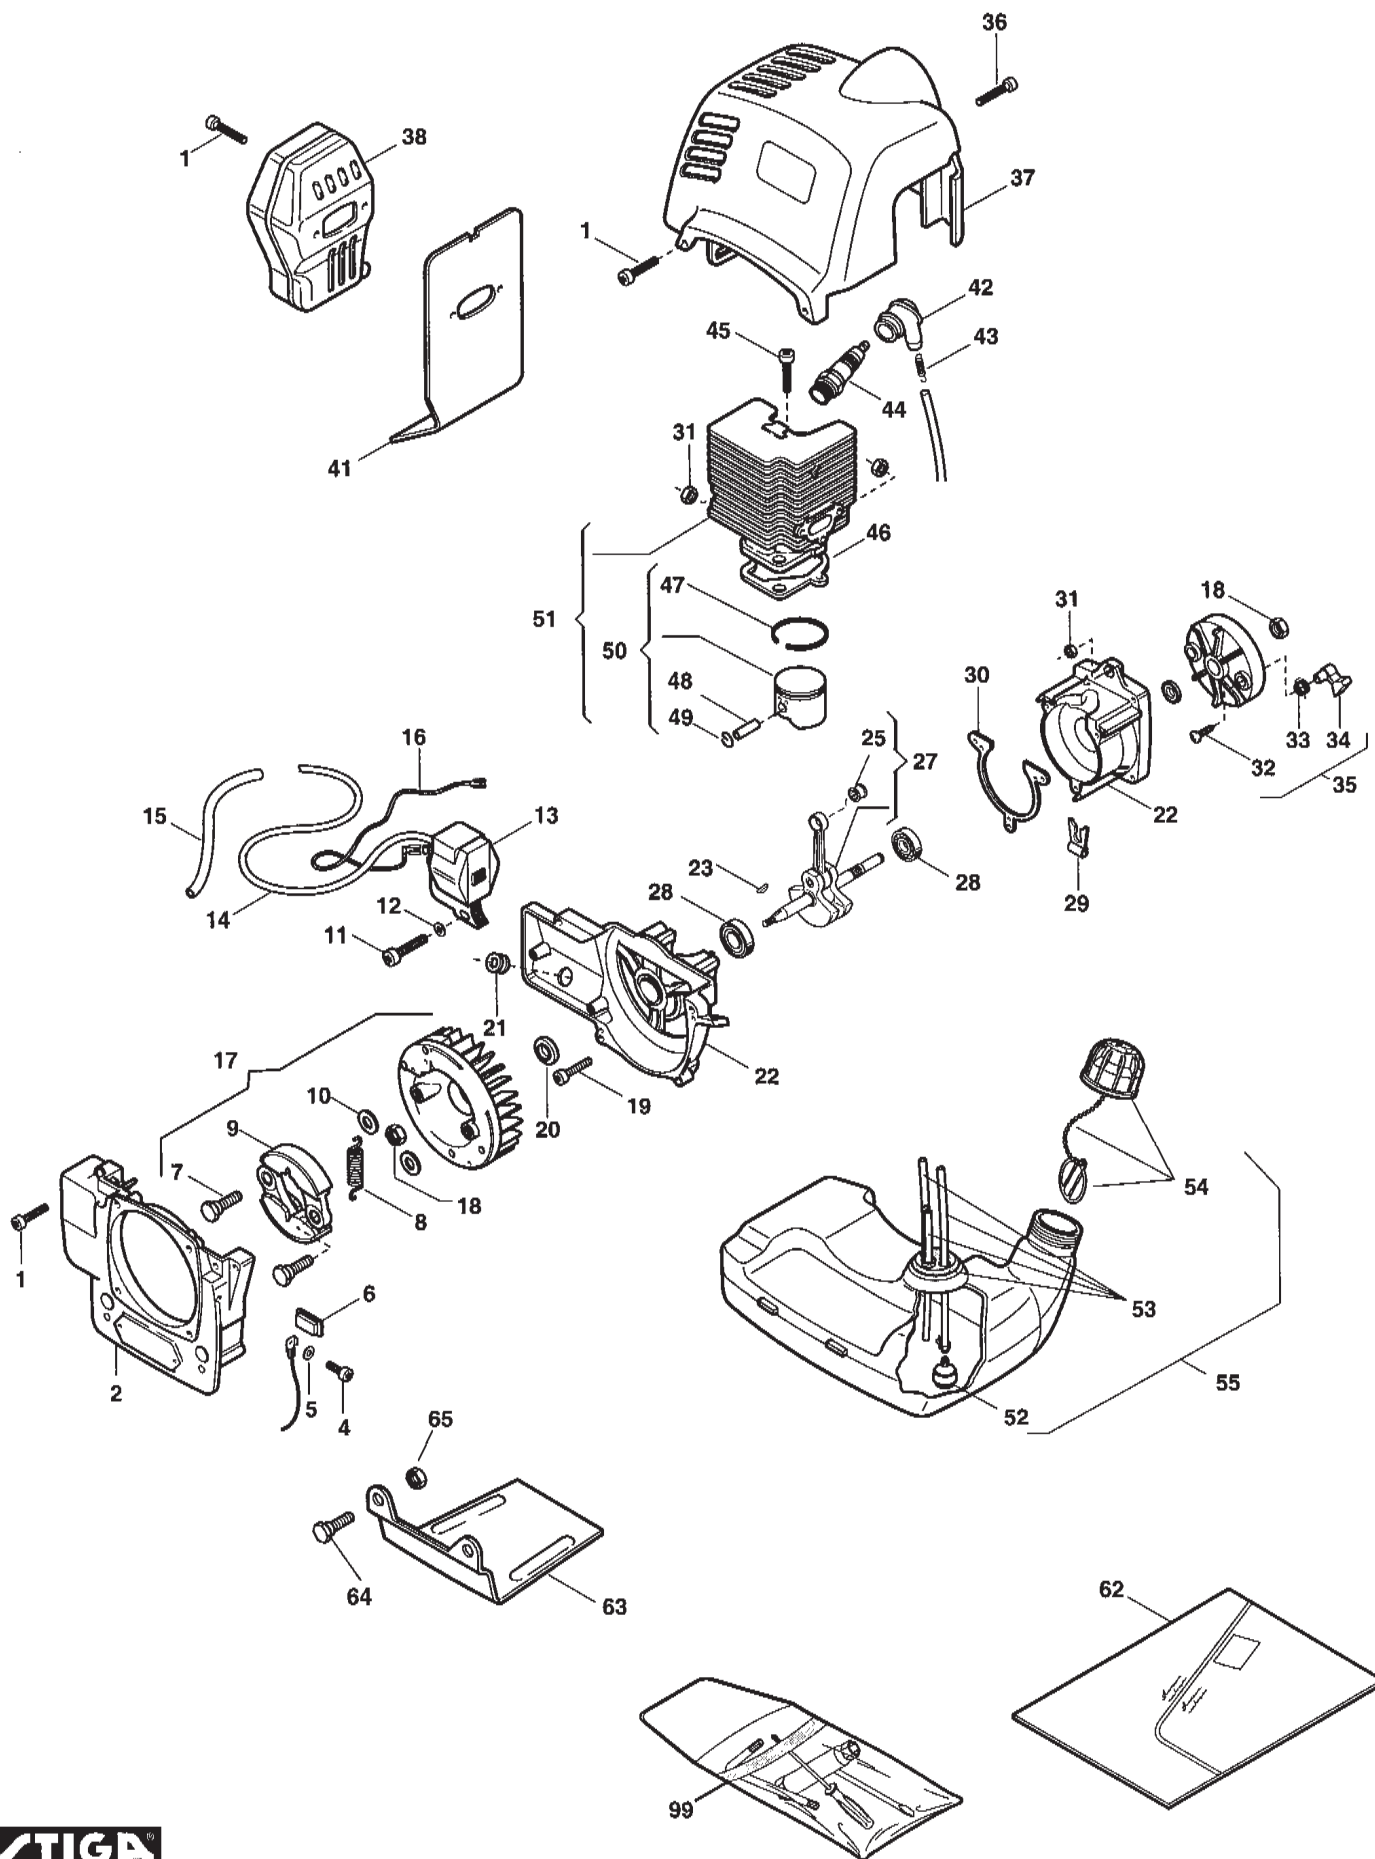


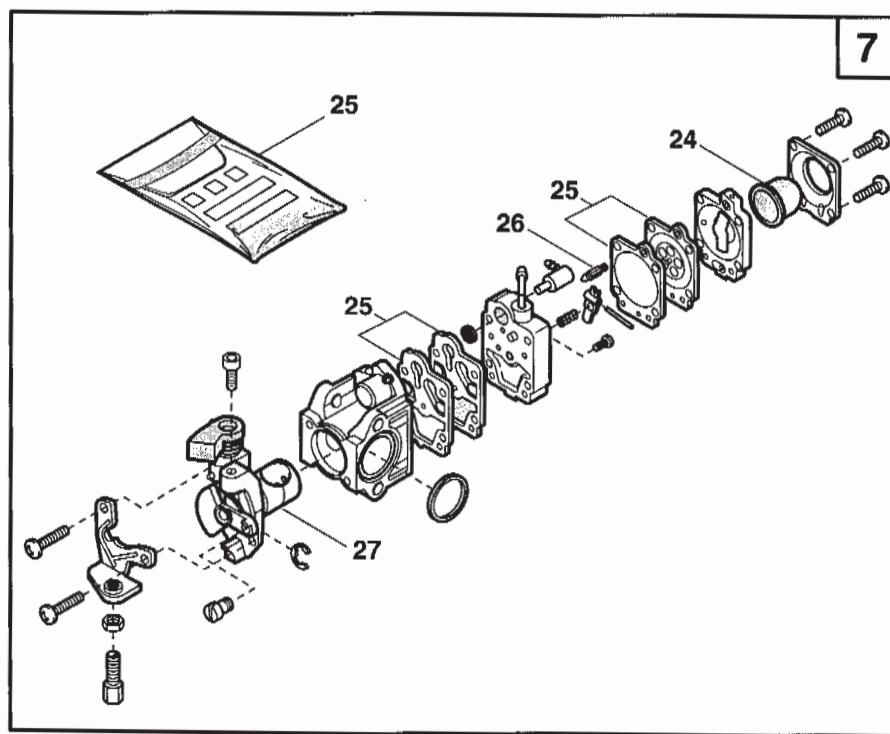


Utgåva Issue		Bildnr Picture No		SB 28- SB 30 RÖJARE MOTOR		SB 28- SB 30 BRUSH CUTTER ENGINE		Sida Page	
2005- 12		1489B						276	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6111 6112								
1	12				1911-3007-01 Skruv	Screw			
2	1				1911-3731-01 Transm.stödhus	Transm.support case			
4	1				1911-3005-01 Skruv	Screw			
5	1				1911-3016-01 Bricka	Washer			
6	4				1911-3117-01 Gummikudde	Grommet			
7	2				1911-3661-01 • Skruv	• Screw			
8	1				1911-3686-01 Fjäder	Spring			
9	2				1911-3689-01 • Kopplingsenhet	• Clutch unit			
10	2				1911-3659-01 • Bricka	• Washer			
11	2				1911-3259-01 Skruv	Screw			
12	2				1911-3272-01 Bricka	Washer			
13	1				1911-3667-01 Elektronikspole	Electronic coil			
14	1				1911-3055-01 Tändstiftskabel	Spark plug cable			
15	1				1911-4248-01 Kabelhölje	Wire sheath			
16	1				1911-3060-01 Jordkabel	Ground cable			
17	1				1911-3925-01 Svänghjul kpl	Flywheel assy			Inkl. pos 7, 9, 10
18	2				1911-3030-01 Mutter	Nut			
19	3				1911-3008-01 Skruv	Screw			
20	2				1911-3043-01 Tätningring	Seal ring			
21	1				1911-3116-01 Gummihylsa	Grommet			
22	1				1911-3931-01 Vevhus	Crankcase			
23	1				1911-3048-01 Svänghjulskil	Flywheel key			
25	1				1911-3042-01 • Nålager	• Needle bearing			
27	1				1911-3930-01 Vevaxel kpl	Crankshaft assy			Inkl. pos 25
28	2				1911-3039-01 Kullager	Ball bearing			
29	1				1911-3121-01 Kabelhållare	Cable guide			
30	1				1911-3692-01 • Packning	• Gasket			
31	5				1911-3022-01 Mutter	Nut			
32	2				1911-3002-01 • Skruv	• Screw			
33	2				1911-3087-01 • Fjäder	• Spring			
34	2				1911-3118-01 • Startspärr	• Starter hook			
35	1				1911-3822-01 Startkopp kpl	Starter cup assy			Inkl. pos 32 - 34
36	1				1911-3006-01 Skruv	Screw			
37	1				1911-3736-01 Cylinderkåpa	Cylinder cover			
38	1				1911-3708-01 Ljuddämpare	Muffler			
41	1				1911-3694-01 • Packning	• Gasket			
42	1				1911-3113-01 Tändstiftshylsa	Spark plug cover			
43	1				1911-3093-01 Tändstiftsfjäder	Spark plug spring			
44	1				9400-0258-00 Tändstift	Spark plug			Champion CJ7Y
45	2				1911-3011-01 Skruv	Screw			
46	1				1911-3693-01 • Packning	• Gasket			
47	1				1911-3665-01 • • Kolvring	• • Piston ring			
48	1				1911-3666-01 • • Kolvbult	• • Piston pin			
49	2				1911-3069-01 • • Låsring	• • Lock ring			
50	1				1911-3924-01 • Kolv kpl	• Piston assy			Inkl. pos 47 - 49
51	1				1911-3923-01 Cylinder kpl m.kolv	Cylinder assy w.pist			Inkl. pos 50
52	1				1911-3150-01 • Bränslefilter	• Intake filter			
53	1				1911-3208-01 • Slangtätning kpl	• Hose grommet assy			
54	1				1911-3207-01 • Tanklock	• Fuel cap			
55	1				1911-3716-01 Bränsletank kpl	Fuel tank assy			Inkl. pos 52 - 54
62	1				1911-3833-01 Packningssats	Gasket set			Inkl. pos 30, 41, 46
63	1				1911-4190-01 Fläns	Flange			
64	2				1911-3013-01 Skruv	Screw			
65	2				1911-3022-01 Mutter	Nut			
99	1				1911-3723-01 Påse m.verktyg	Bag w.tools			

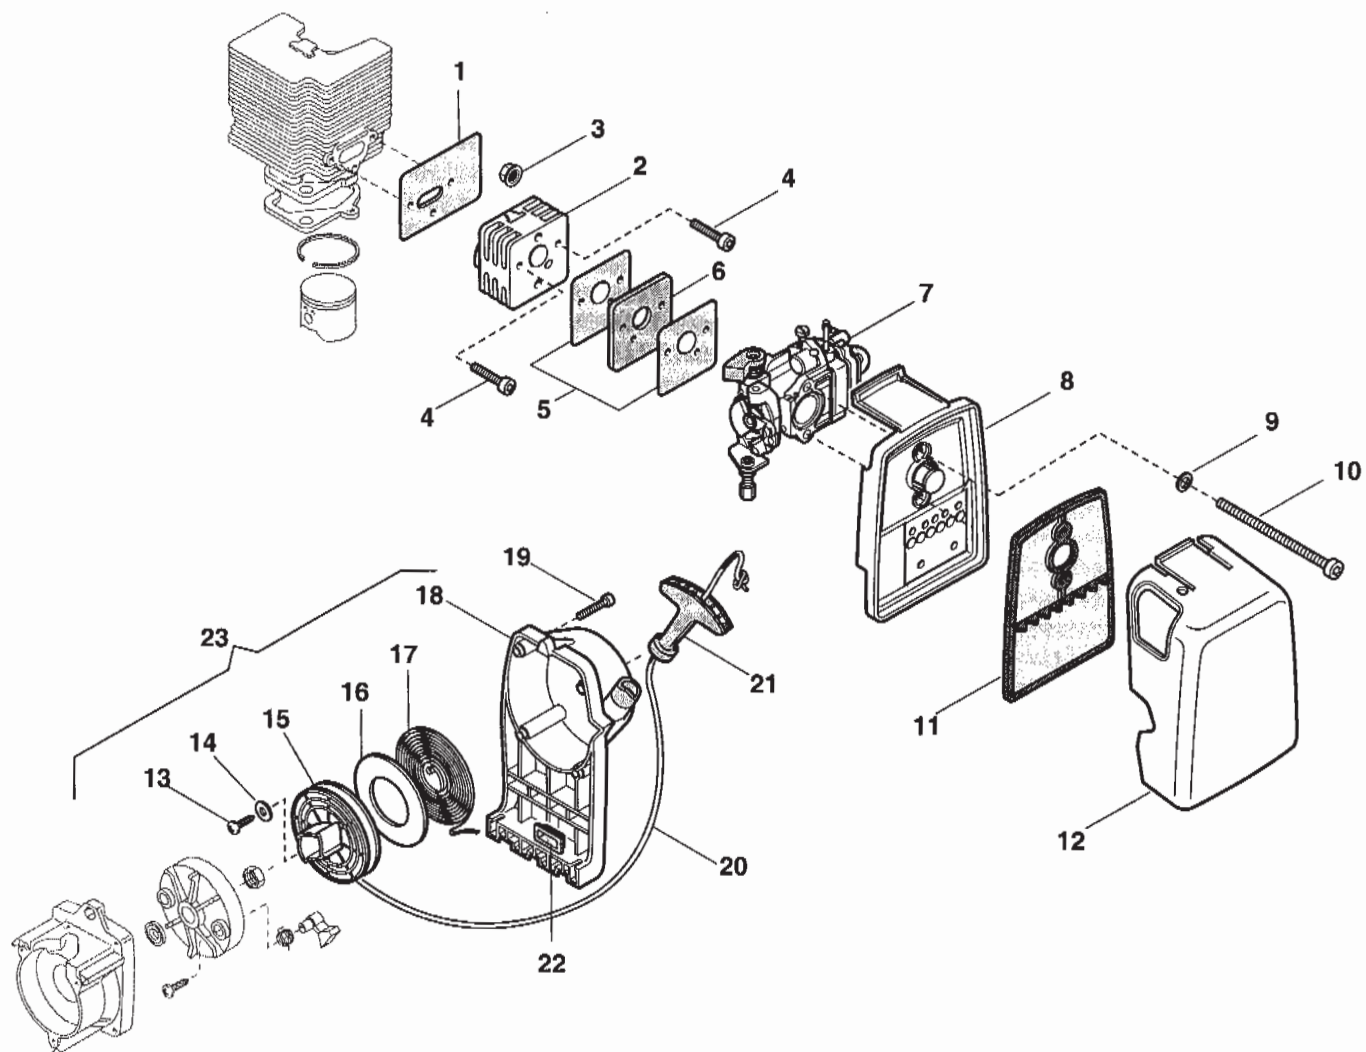

Utgåva Issue		Bildnr Picture No		SB 28- SB 30 RÖJARE FÖRGASARE		SB 28- SB 30 BRUSH CUTTER CARBURETTOR		Sida Page	
2005- 12		1490						278	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6111 6112								
1	1				1911-3104-01 Packning.....	Gasket.....			
2	1				1911-3122-01 Insugningsrör.....	Intake manifold			
3	2				1911-3031-01 Mutter.....	Nut			
4	2				1911-3008-01 Skruv	Screw			
5	2				1911-3107-01 Packning.....	Gasket.....			
6	1				1911-3132-01 Värmedistans.....	Heat block.....			
7	1				1911-3725-01 Förgasare kpl.....	Carburettor assy			WYJ304
8	1				1911-3835-01 Lufffilterhållare	Air filter holder			
9	2				1911-3015-01 Bricka	Washer.....			
10	2				1911-3014-01 Skruv	Screw			
11	1				1911-3702-01 Lufffilter	Air filter			
12	1				1911-3737-01 Filterlock.....	Filter cover			
13	1				1911-3002-01 • Skruv	• Screw			
14	1				1911-3071-01 • Bricka	• Washer.....			
15	1				1911-3164-01 • Linhjul.....	• Starter pulley			
16	1				1911-3096-01 • Skiva.....	• Disc.....			
17	1				1911-3176-01 • Startfjäder.....	• Starter spring			
18	1				1911-3832-01 • Starthus.....	• Starter case			
19	4				1911-3007-01 • Skruv	• Screw			
20	1				1911-3130-01 • Startsnöre	• Starter cord			
21	1				1911-3479-01 • Starthandtag.....	• Starter handle.....			
22	4				1911-3117-01 • Gummikudde	• Grommet			
23	1				1911-3718-01 Start kpl.....	Starter assy.....			Inkl. pos 13 - 22
24	1				1911-3115-01 Primer	Primer bulb			
25	1				1911-3157-01 Packning- membransats	Gasket- diaphragm set			
26	1				1911-3158-01 Reparationssats.....	Repair set.....			
27	1				1911-3727-01 Ventil	Floating valve			

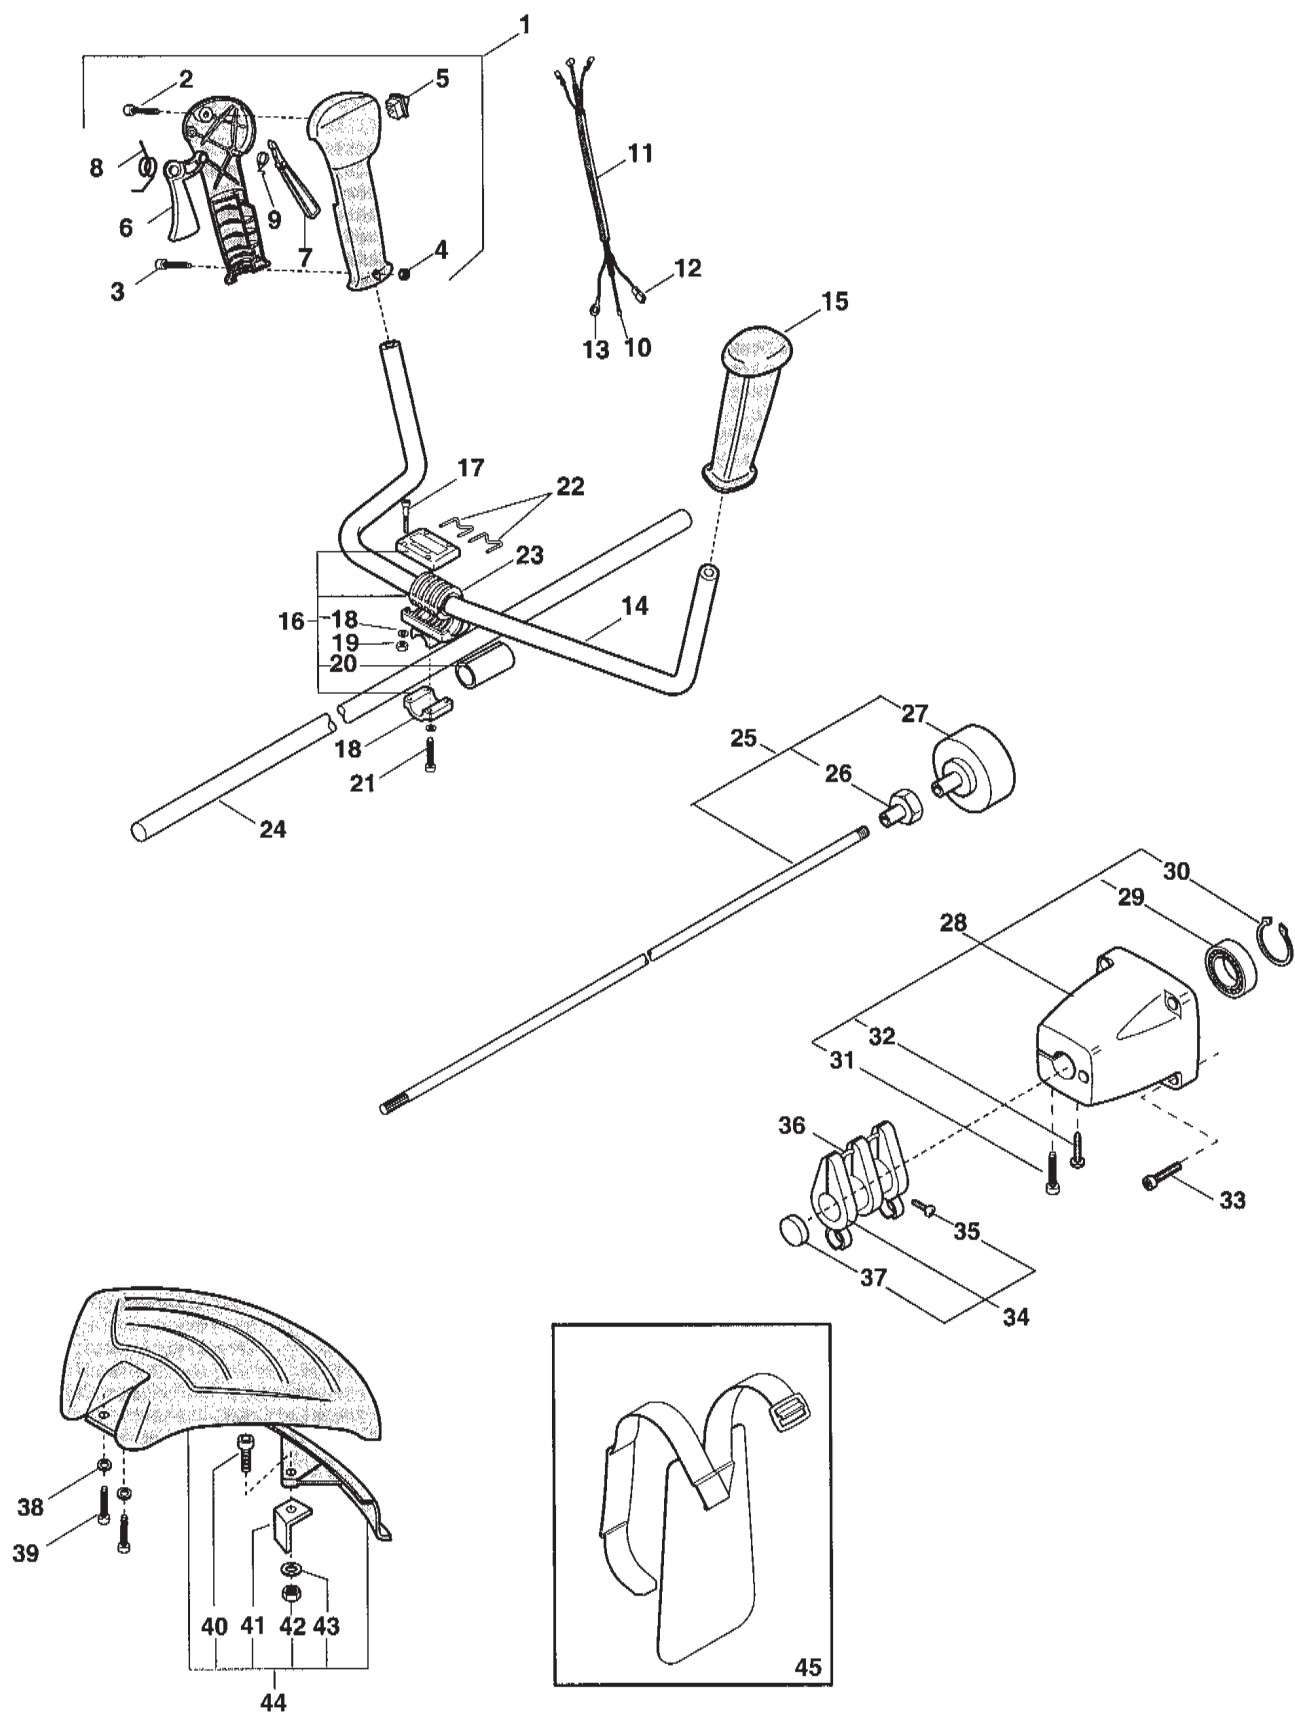

Utgåva Issue		Bildnr Picture No		SB 30 RÖJARE RIGG		SB 30 BRUSH CUTTER DRIVE SHAFT		Sida Page	
2005- 12		1487						272	
Pos. Fig.	Anta/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6112								
1	1				1911-3203-01 Handtag kpl	Handle assy.....			Inkl. pos 2 - 9
2	1				1911-3001-01 • Skruv	• Screw			
3	1				1911-3008-01 • Skruv	• Screw			
4	1				9747-0531-02 • Mutter.....	• Nut			
5	1				1911-3053-01 • Stoppkontakt	• Stop switch			
6	1				1911-3108-01 • Gasreglage.....	• Throttle lever			
7	1				1911-3109-01 • Säkerhetsspärr	• Safety lever			
8	1				1911-3089-01 • Fjäder	• Spring			
9	1				1911-3090-01 • Fjäder.....	• Spring			
10	1				1911-3720-01 Gaswire	Throttle wire.....			
11	1				1911-3704-01 Wirehölje	Wire sheath.....			
12	1				1911-3675-01 Brytarkabel	Switch cable.....			
13	1				1911-3676-01 Jordkabel	Earth cable			
14	1				1911-3719-01 Handtag kpl	Handle assy.....			Inkl. pos 15 - 23
15	1				1911-3114-01 • Handtag- vä.....	• Knob- left.....			
16	1				1911-3818-01 • Handtagsstöd kpl.....	• Handgrip support assy.....			Inkl. pos 17 - 21
17	4				1911-3263-01 •• Skruv	•• Screw			
18	4				1911-3015-01 •• Bricka.....	•• Washer			
19	4				9747-0531-02 •• Mutter.....	•• Nut			
20	1				1911-3691-01 •• Gummihylsa.....	•• Rubber facing.....			
21	4				1911-3003-01 •• Skruv	•• Screw			
22	2				1911-3688-01 • Handtagslås	• Handle lock			
23	2				1911-3698-01 • Vibrationsdämpare	• Vibration grommet.....			
24	1				1911-3820-01 Transmissionsrör.....	Transmission tube.....			
25	1				1911-3712-01 Drivaxel kpl.....	Transmission shaft			Inkl. pos 26 - 27
26	1				1911-3684-01 • Lagernav.....	• Bearing hub.....			
27	1				1911-3707-01 • Kopplingstrumma.....	• Clutch drum			
28	1				1911-3828-01 Transm.stöd kpl.....	Transm.support assy.....			Inkl. pos 29 - 32
29	1				1911-3035-01 • Kullager	• Ball bearing			
30	1				1911-3066-01 • Låsring	• Lock ring			
31	2				1911-3251-01 • Skruv	• Screw			
32	1				1911-3657-01 • Skruv	• Screw			
33	4				1911-3012-01 Skruv	Screw			
34	1				1911-3829-01 Stöd kpl- sele	Support assy- harness			Inkl. pos 35, 37
35	4				1911-3251-01 • Skruv	• Screw			
36	1				1911-3685-01 Stift.....	Pin			
37	2				1911-3691-01 • Gummihylsa	• Rubber facing.....			
38	2				1911-3216-01 Bricka	Washer.....			
39	2				1911-3009-01 Skruv	Screw			
40	1				1911-3006-01 • Skruv	• Screw			
41	1				1911-3077-01 • Kniv	• Line cutter			
42	1				1911-3022-01 • Mutter.....	• Nut			
43	1				1911-3216-01 • Bricka	• Washer			
44	1				1911-3201-01 Säkerhetsskydd kpl.....	Safety cover assy			Inkl. pos 40 - 43
45	1				1911-3724-01 Sele	Harness			
99	1				1911-3212-01 Skyddsglasögon	Protective goggles			Ej ill/not ill.

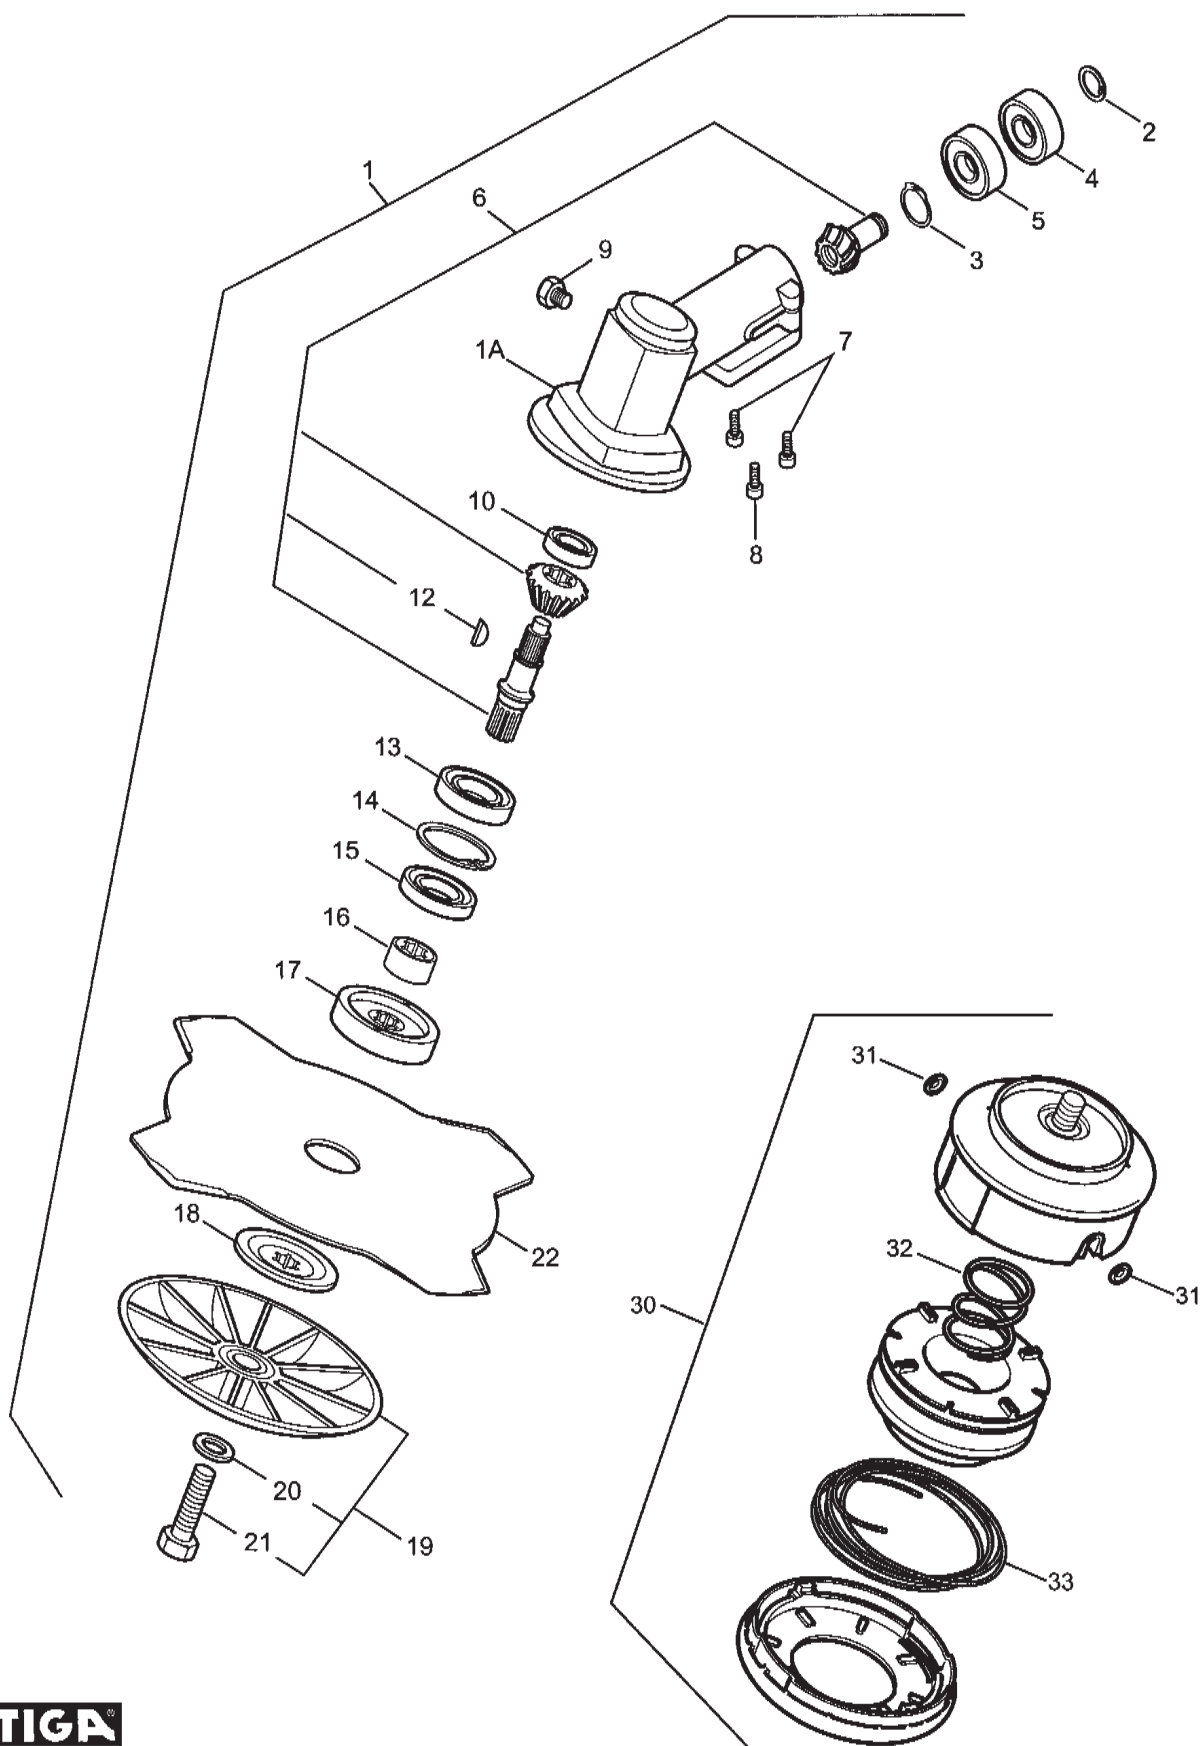



Utgåva Issue 2005- 12		Bildnr Picture No 1488A		SB 28- SB 30 RÖJARE SNÄCKVÄXEL		SB 28- SB 30 BRUSH CUTTER GEAR CASE		Sida Page 274	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6111 6112								
1	1				1911-3710-01	Snäckväxel kpl.....	Gear case assy		Inkl. pos 2 - 21
1A	1				1911-3729-01	Snäckväxelhus	Gear case		
2	1				1911-3678-01	• Låsring	• Lock ring		Inkl. pos 20 - 21
3	1				1911-3677-01	• Låsring	• Lock ring		
4	1				1911-3662-01	• Kullager	• Ball bearing		
5	1				1911-3038-01	• Kullager	• Ball bearing		
6	1				1911-3817-01	• Snäckdrev	• Worm gear		
7	2				1911-3008-01	• Skruv	• Screw		
8	1				1911-3025-01	• Skruv	• Screw		
9	1				1911-3029-01	• Skruv	• Screw		
10	1				1911-3663-01	• Kullager	• Ball bearing		
12	1				1911-3049-01	• Kil	• Key		
13	1				1911-3039-01	• Kullager	• Ball bearing		
14	1				1911-3679-01	• Låsring	• Lock ring		
15	1				1911-3664-01	• Tätningsring	• Seal ring		
16	1				1911-3690-01	• Hylsa.....	• Collar.....		
17	1				1911-3683-01	• Ringmutter- övre.....	• Ring nut- upper		
18	1				1911-3680-01	• Ringmutter- nedre.....	• Ring nut- lower		
19	1				1911-3163-01	• Skål kpl (fast)	• Bowl assy (fixed).....		
20	1				1911-3018-01	• • Bricka.....	• • Washer		
21	1				1911-3026-01	• • Skruv (vä- gängad)	• • Screw (LH- thread)		
22	1				1911-3179-01	Röjklina	Clearing blade	4T - Ø 255 mm	
22A	1				1911-3850-01	Klingskydd	Blade guard	Ej ill/not ill.	
30	1				1911-3877-01	Skärhuvud kpl.....	Cutterhead assy	Inkl. pos 31 - 32	
31	2				1911-3875-01	• Trådhylsa	• Line inlet		
32	1				1911-3876-01	• Fjäder.....	• Spring		
33	1				1911-9008-04	Skärtråd (2.4 mm)	Cutting line (2.4 mm)	0.45 kg (90 m)	
33	1				1911-9008-08	Skärtråd (2.4 mm)	Cutting line (2.4 mm)	15 m	
99	1				1911-3853-01	Fettub	Grease tube.....	Ej ill/not ill.	