



# Genuine Spare Parts

---

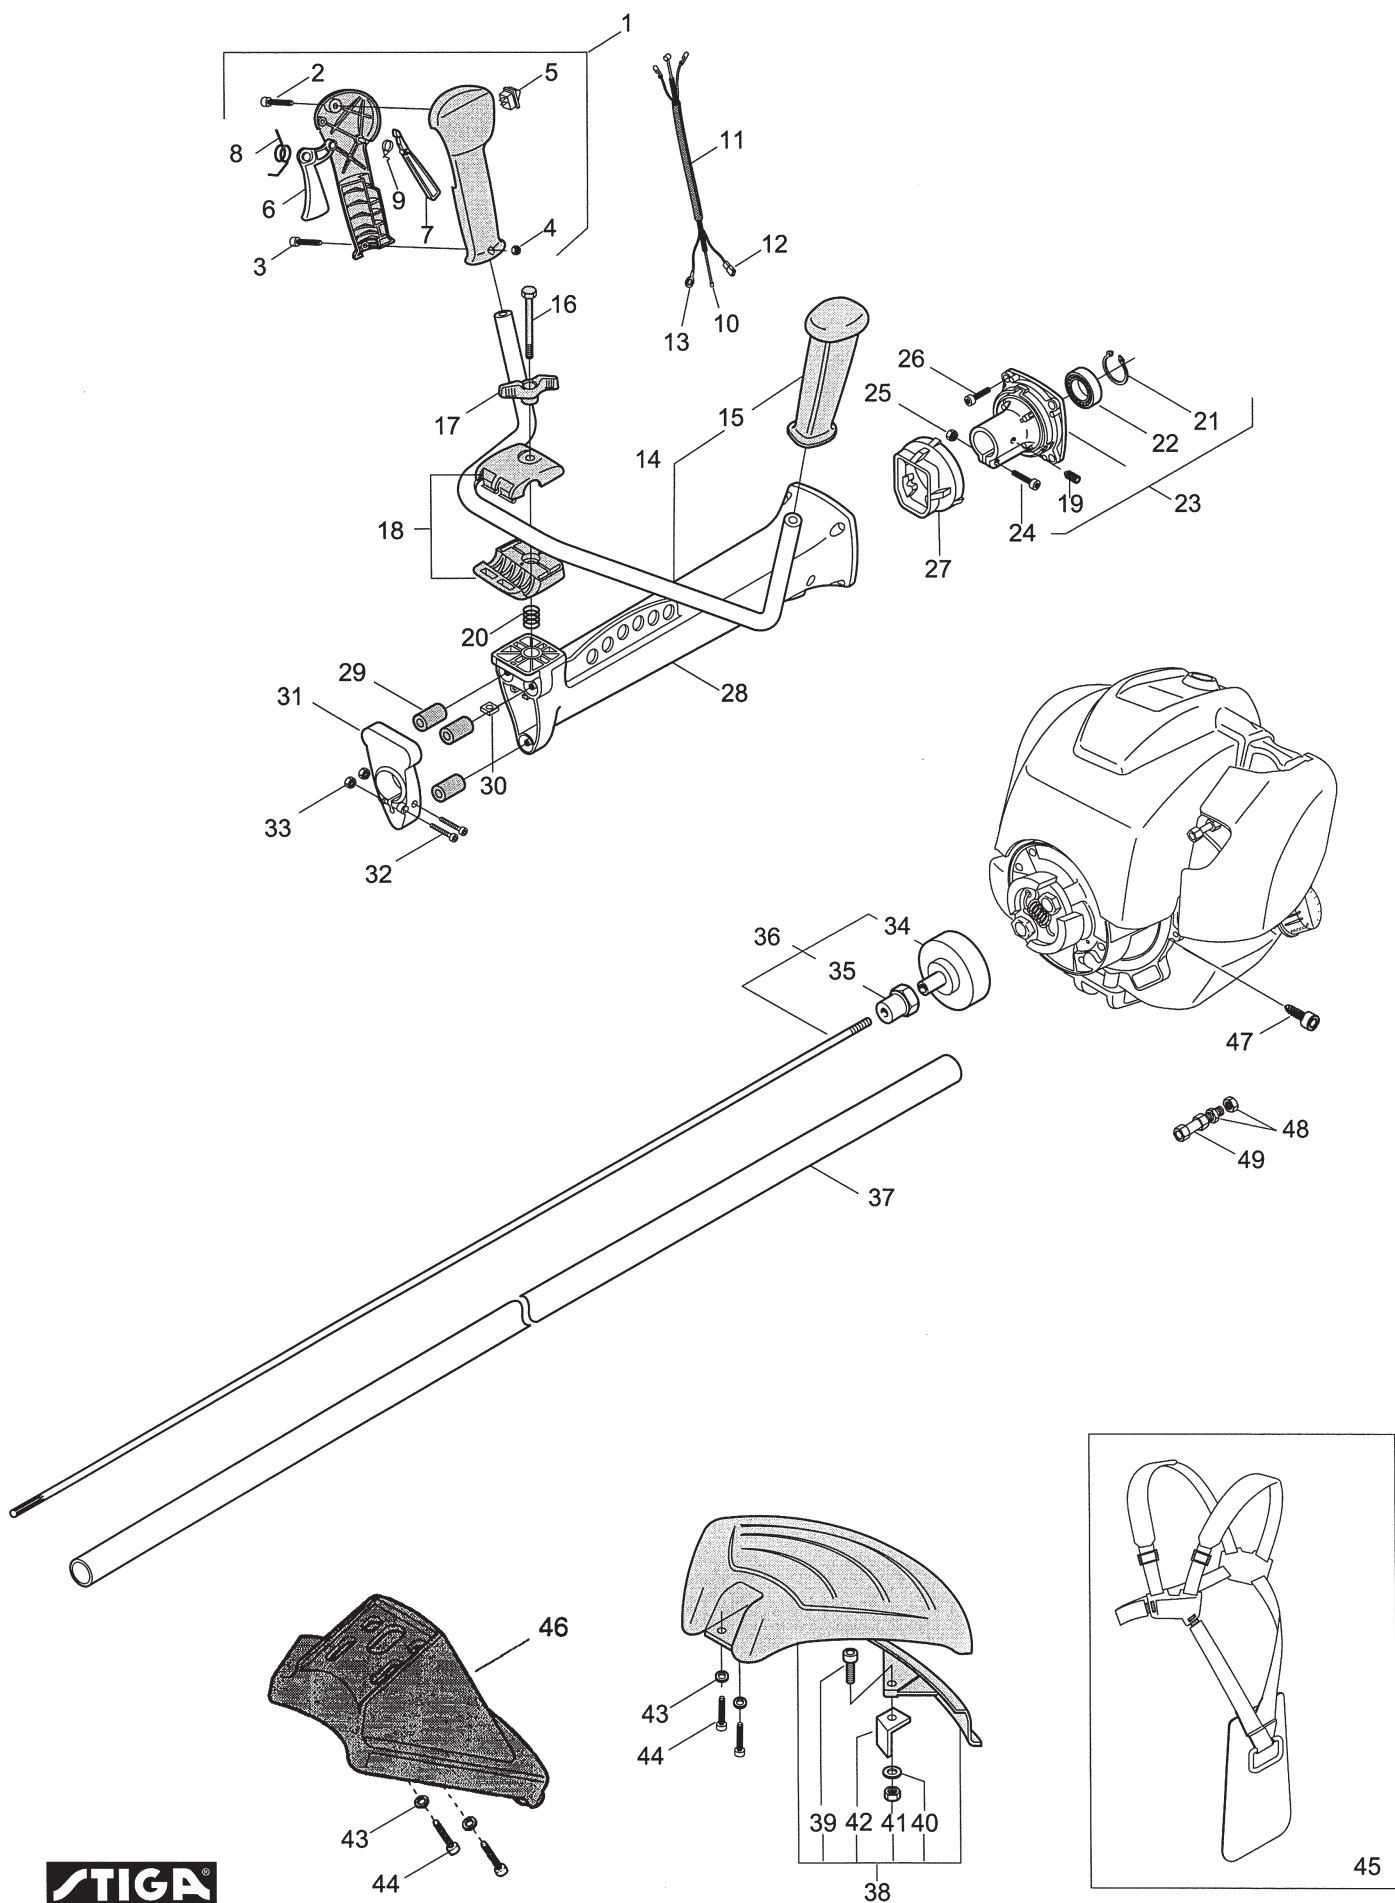



| Utgåva<br>Issue<br>2005- 12 |                | Bildnr<br>Picture No<br>1753 |  | SB 436<br>RÖJARE<br>RIGG |                   | SB 436<br>BRUSH CUTTER<br>DRIVE SHAFT |                             | Sida<br>Page<br>304 |                                                     |
|-----------------------------|----------------|------------------------------|--|--------------------------|-------------------|---------------------------------------|-----------------------------|---------------------|-----------------------------------------------------|
| Pos.<br>Fig.                | Antal/Quantity |                              |  |                          | Art nr<br>Part No | Benämning                             | Description                 | Sats<br>Kit         | Anmärkning<br>Notes                                 |
|                             |                |                              |  |                          |                   |                                       |                             |                     |                                                     |
|                             | 4402           |                              |  |                          |                   |                                       |                             |                     |                                                     |
| 1                           | 1              |                              |  |                          | 1911-3203-01      | Handtag kpl .....                     | Handle assy.....            |                     | Inkl. pos 2 - 9                                     |
| 2                           | 1              |                              |  |                          | 1911-3001-01      | • Skruv .....                         | • Screw .....               |                     |                                                     |
| 3                           | 1              |                              |  |                          | 1911-3008-01      | • Skruv .....                         | • Screw .....               |                     |                                                     |
| 4                           | 1              |                              |  |                          | 9747-0531-02      | • Mutter.....                         | • Nut .....                 |                     |                                                     |
| 5                           | 1              |                              |  |                          | 1911-3053-01      | • Stoppkontakt .....                  | • Stop switch .....         |                     |                                                     |
| 6                           | 1              |                              |  |                          | 1911-3108-01      | • Gasreglage.....                     | • Throttle lever .....      |                     |                                                     |
| 7                           | 1              |                              |  |                          | 1911-3109-01      | • Säkerhetsspärr .....                | • Safety lever .....        |                     |                                                     |
| 8                           | 1              |                              |  |                          | 1911-3089-01      | • Fjäder.....                         | • Spring .....              |                     |                                                     |
| 9                           | 1              |                              |  |                          | 1911-3090-01      | • Fjäder.....                         | • Spring .....              |                     |                                                     |
| 10                          | 1              |                              |  |                          | 1911-3996-01      | Gaswire .....                         | Throttle wire.....          |                     |                                                     |
| 11                          | 1              |                              |  |                          | 1911-3997-01      | Kabelskydd .....                      | Wire sheath .....           |                     | Inkl. pos 15                                        |
| 12                          | 1              |                              |  |                          | 1911-3993-01      | Kabel- röd .....                      | Cable- red .....            |                     |                                                     |
| 13                          | 1              |                              |  |                          | 1911-3994-01      | Jordkabel- svart.....                 | Ground cable- black .....   |                     |                                                     |
| 14                          | 1              |                              |  |                          | 1911-3722-01      | Styre .....                           | Handle.....                 |                     |                                                     |
| 15                          | 1              |                              |  |                          | 1911-3114-01      | • Handtag- vä.....                    | • Knob- left.....           |                     |                                                     |
| 16                          | 1              |                              |  |                          | 1911-3000-01      | Skruv .....                           | Screw .....                 |                     |                                                     |
| 17                          | 1              |                              |  |                          | 1911-3123-01      | Vingmutter.....                       | Wing nut .....              |                     |                                                     |
| 18                          | 1              |                              |  |                          | 1911-3192-01      | Styrinfästning kpl .....              | Handle support assy .....   |                     |                                                     |
| 19                          | 1              |                              |  |                          | 1911-3658-01      | • Skruv .....                         | • Screw .....               |                     |                                                     |
| 20                          | 1              |                              |  |                          | 1911-3091-01      | Fjäder.....                           | Spring .....                |                     | Inkl. pos 19, 21 - 22                               |
| 21                          | 1              |                              |  |                          | 1911-3066-01      | • Låsring .....                       | • Lock ring .....           |                     |                                                     |
| 22                          | 1              |                              |  |                          | 1911-3035-01      | • Kullager .....                      | • Ball bearing .....        |                     |                                                     |
| 23                          | 1              |                              |  |                          | 1911-3188-01      | Transmissionsnav kpl.....             | Transmission hub assy ..... |                     |                                                     |
| 24                          | 1              |                              |  |                          | 1911-3011-01      | Skruv .....                           | Screw .....                 |                     |                                                     |
| 25                          | 1              |                              |  |                          | 1911-3021-01      | Mutter.....                           | Nut .....                   |                     |                                                     |
| 26                          | 4              |                              |  |                          | 1911-3012-01      | Skruv .....                           | Screw .....                 |                     |                                                     |
| 27                          | 1              |                              |  |                          | 1911-3111-01      | Vibrationsdämpare- bak.....           | Shock absorber- rear.....   |                     |                                                     |
| 28                          | 1              |                              |  |                          | 1911-3171-01      | Transmissionshus .....                | Transmission housing .....  |                     |                                                     |
| 29                          | 3              |                              |  |                          | 1911-3110-01      | Vibrationsdämpare- fra .....          | Shock absorber- front ..... |                     | Inkl. pos 34 - 35<br>D = 26 mm<br>Inkl. pos 39 - 42 |
| 30                          | 1              |                              |  |                          | 1911-3080-01      | Handtagsfästmutter.....               | Handle fixing plate .....   |                     |                                                     |
| 31                          | 1              |                              |  |                          | 1911-3172-01      | Stöd- främre .....                    | Housing support- front..... |                     |                                                     |
| 32                          | 2              |                              |  |                          | 1911-3009-01      | Skruv .....                           | Screw .....                 |                     |                                                     |
| 33                          | 2              |                              |  |                          | 9747-0531-02      | Mutter.....                           | Nut .....                   |                     |                                                     |
| 34                          | 1              |                              |  |                          | 1911-3134-01      | • Kopplingstrumma.....                | • Clutch.....               |                     |                                                     |
| 35                          | 1              |                              |  |                          | 1911-3083-01      | • Lagernav.....                       | • Bearing hub.....          |                     |                                                     |
| 36                          | 1              |                              |  |                          | 1911-3140-01      | Drivaxel kpl .....                    | Transm. shaft assy .....    |                     |                                                     |
| 37                          | 1              |                              |  |                          | 1911-3139-01      | Drivaxelrör.....                      | Transmission pipe .....     |                     |                                                     |
| 38                          | 1              |                              |  |                          | 1911-3201-01      | Säkerhetsskydd kpl.....               | Safety cover assy .....     |                     | Ej ill/not ill.                                     |
| 39                          | 1              |                              |  |                          | 1911-3006-01      | • Skruv .....                         | • Screw .....               |                     |                                                     |
| 40                          | 1              |                              |  |                          | 1911-3216-01      | • Bricka .....                        | • Washer .....              |                     |                                                     |
| 41                          | 1              |                              |  |                          | 1911-3022-01      | • Mutter.....                         | • Nut .....                 |                     |                                                     |
| 42                          | 1              |                              |  |                          | 1911-3077-01      | • Kniv .....                          | • Line cutter .....         |                     |                                                     |
| 43                          | 2              |                              |  |                          | 1911-3216-01      | Bricka .....                          | Washer.....                 |                     |                                                     |
| 44                          | 2              |                              |  |                          | 1911-3009-01      | Skruv .....                           | Screw .....                 |                     |                                                     |
| 45                          | 1              |                              |  |                          | 1911-3152-01      | Sele .....                            | Harness.....                |                     |                                                     |
| 46                          | 1              |                              |  |                          | 1911-3166-01      | Stenskydd (sågklinga) .....           | Stone shield (saw) .....    |                     |                                                     |
| 47                          | 1              |                              |  |                          | 1911-3261-01      | Skruv .....                           | Screw .....                 |                     |                                                     |
| 48                          | 2              |                              |  |                          | 1911-4000-01      | Mutter.....                           | Nut .....                   |                     |                                                     |
| 49                          | 1              |                              |  |                          | 1911-3998-01      | Wirejustering .....                   | Throttle cable adjust.....  |                     |                                                     |
| 99                          | 1              |                              |  |                          | 1911-3212-01      | Skyddsglasögon .....                  | Protective goggles .....    |                     |                                                     |

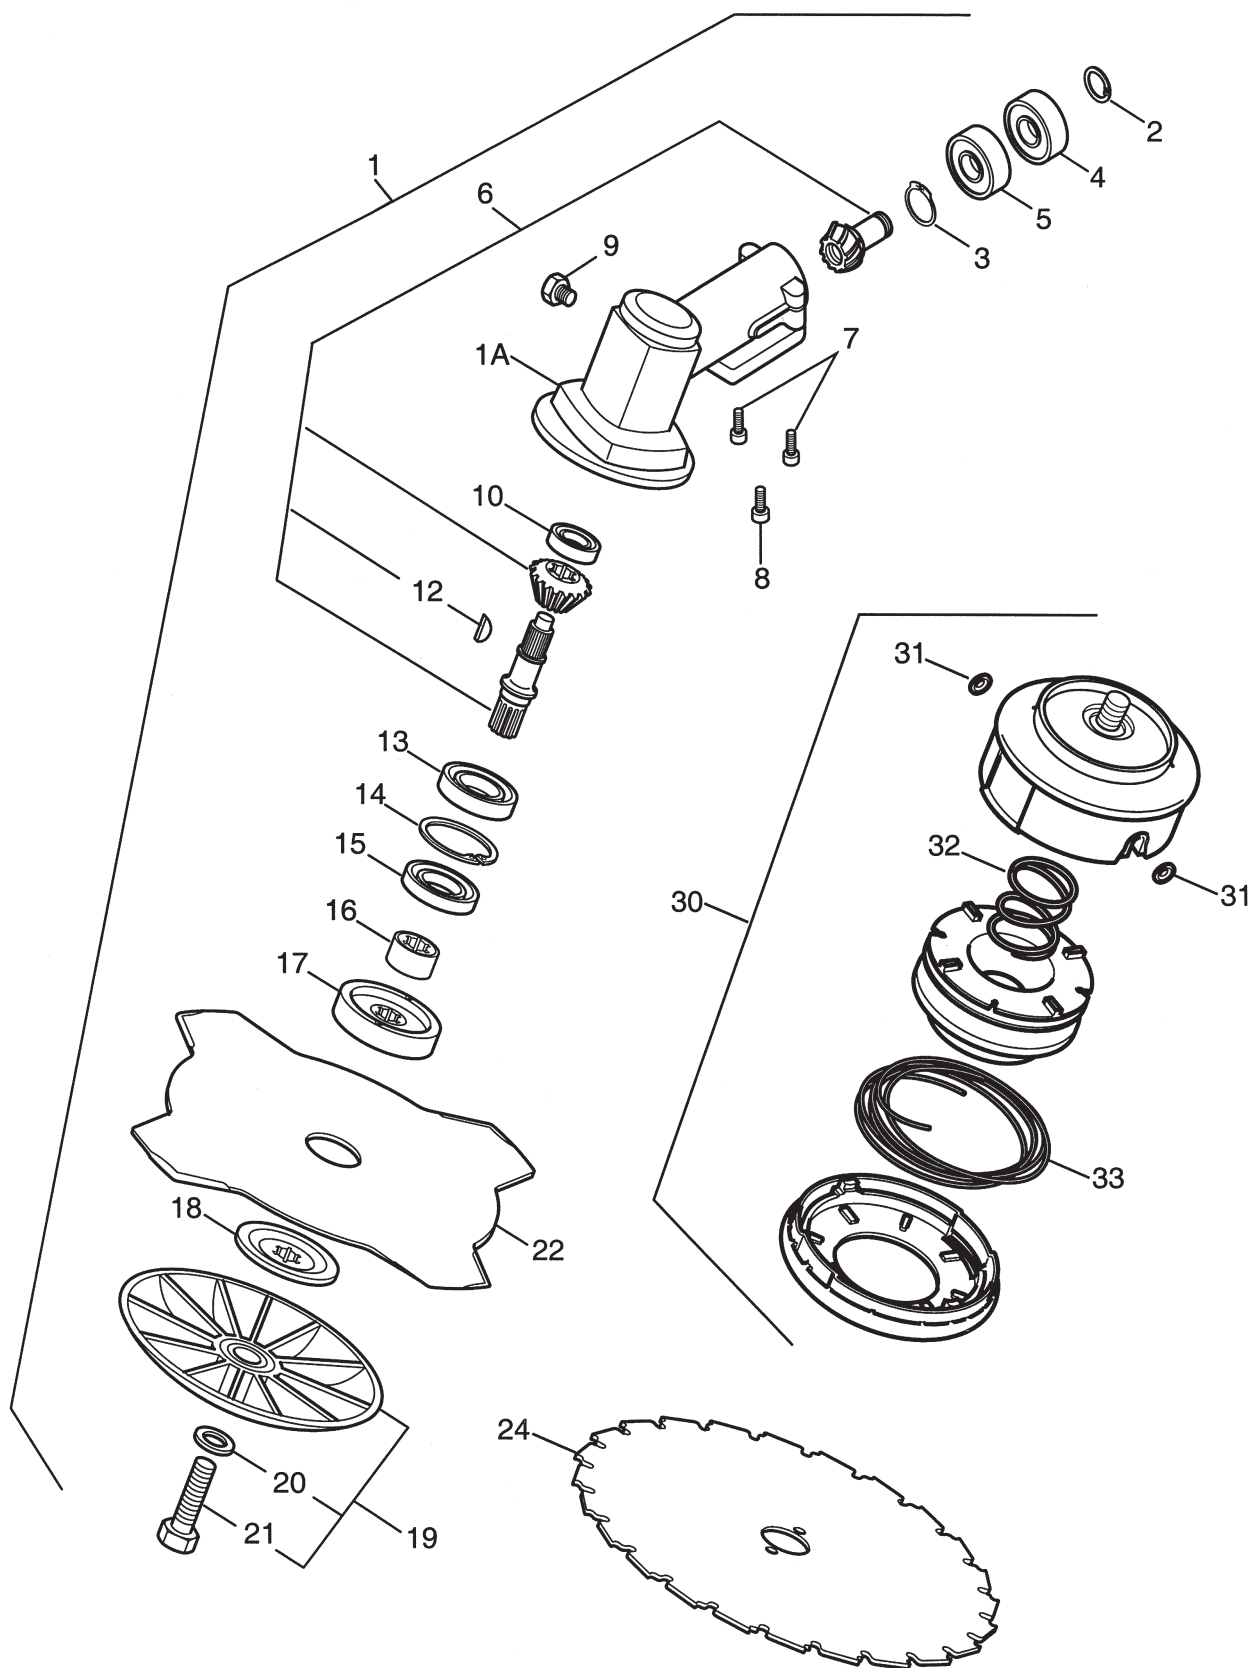



| Utgåva<br>Issue<br><br>2005- 12 |                | Bildnr<br>Picture No<br><br>1285B |  | SB 435- SB 436<br>RÖJARE<br>SNÄCKVÄXEL |                   | SB 435- SB 436<br>BRUSH CUTTER<br>GEAR CASE |                             | Sida<br>Page<br><br>306 |                     |
|---------------------------------|----------------|-----------------------------------|--|----------------------------------------|-------------------|---------------------------------------------|-----------------------------|-------------------------|---------------------|
| Pos.<br>Fig.                    | Antal/Quantity |                                   |  |                                        | Art nr<br>Part No | Benämning                                   | Description                 | Sats<br>Kit             | Anmärkning<br>Notes |
|                                 | 4401<br>4402   |                                   |  |                                        |                   |                                             |                             |                         |                     |
| 1                               | 1              |                                   |  |                                        | 1911-3137-01      | Snäckväxel kpl.....                         | Gear case assy .....        |                         | Inkl. pos 2 - 21    |
| 1 A                             | 1              |                                   |  |                                        | 1911-3161-01      | Snäckväxelhus.....                          | Gear case .....             |                         |                     |
| 2                               | 1              |                                   |  |                                        | 1911-3067-01      | • Låsring .....                             | • Lock ring .....           |                         |                     |
| 3                               | 1              |                                   |  |                                        | 1911-3065-01      | • Låsring .....                             | • Lock ring.....            |                         |                     |
| 4                               | 1              |                                   |  |                                        | 1911-3037-01      | • Kullager .....                            | • Ball bearing .....        |                         |                     |
| 5                               | 1              |                                   |  |                                        | 1911-3036-01      | • Kullager .....                            | • Ball bearing .....        |                         |                     |
| 6                               | 1              |                                   |  |                                        | 1911-3182-01      | • Snäckdrev.....                            | • Worm gear .....           |                         |                     |
| 7                               | 2              |                                   |  |                                        | 1911-3008-01      | • Skruv .....                               | • Screw .....               |                         |                     |
| 8                               | 1              |                                   |  |                                        | 1911-3025-01      | • Skruv .....                               | • Screw .....               |                         |                     |
| 9                               | 1              |                                   |  |                                        | 1911-3029-01      | • Skruv .....                               | • Screw .....               |                         |                     |
| 10                              | 1              |                                   |  |                                        | 1911-3038-01      | • Kullager .....                            | • Ball bearing .....        |                         |                     |
| 12                              | 1              |                                   |  |                                        | 1911-3049-01      | • Kil .....                                 | • Key .....                 |                         |                     |
| 13                              | 1              |                                   |  |                                        | 1911-3034-01      | • Kullager .....                            | • Ball bearing .....        |                         |                     |
| 14                              | 1              |                                   |  |                                        | 1911-3066-01      | • Låsring .....                             | • Lock ring .....           |                         |                     |
| 15                              | 1              |                                   |  |                                        | 1911-3045-01      | • Tätningsring .....                        | • Oil seal .....            |                         |                     |
| 16                              | 1              |                                   |  |                                        | 1911-3082-01      | • Hylsa.....                                | • Collar.....               |                         |                     |
| 17                              | 1              |                                   |  |                                        | 1911-3081-01      | • Ringmutter- övre.....                     | • Ring nut- upper .....     |                         |                     |
| 18                              | 1              |                                   |  |                                        | 1911-3070-01      | • Ringmutter- nedre.....                    | • Ring nut- lower.....      |                         |                     |
| 19                              | 1              |                                   |  |                                        | 1911-3163-01      | • Skål kpl (fast) .....                     | • Bowl assy (fixed).....    |                         | Inkl. pos 20 - 21   |
| 20                              | 1              |                                   |  |                                        | 1911-3018-01      | •• Bricka.....                              | •• Washer .....             |                         |                     |
| 21                              | 1              |                                   |  |                                        | 1911-3026-01      | •• Skruv (vä- gängad) .....                 | •• Screw (LH- thread) ..... |                         |                     |
| 22                              | 1              |                                   |  |                                        | 1911-3179-01      | Röjklinga .....                             | Clearing blade .....        |                         | 4T - Ø 255 mm       |
| 22 A                            | 1              |                                   |  |                                        | 1911-3850-01      | Klingskydd.....                             | Blade guard .....           |                         | Ej ill/not ill.     |
| 24                              | 1              |                                   |  |                                        | 1911-3921-01      | Sågklinga.....                              | Saw blade .....             |                         | 24T - Ø 255 mm      |
| 30                              | 1              |                                   |  |                                        | 1911-3877-01      | Skärhuvud kpl.....                          | Cutterhead assy .....       |                         | Inkl. pos 31 - 32   |
| 31                              | 2              |                                   |  |                                        | 1911-3875-01      | • Trådhylsa .....                           | • Line inlet .....          |                         |                     |
| 32                              | 1              |                                   |  |                                        | 1911-3876-01      | • Fjäder.....                               | • Spring .....              |                         |                     |
| 33                              | 1              |                                   |  |                                        | 1911-9008-04      | Skärtråd (2.4 mm) .....                     | Cutting line (2.4 mm).....  |                         | 0.45 kg (90 m)      |
| 33                              | 1              |                                   |  |                                        | 1911-9008-08      | Skärtråd (2.4 mm) .....                     | Cutting line (2.4 mm).....  |                         | 15 m                |
| 99                              | 1              |                                   |  |                                        | 1911-3853-01      | Fettub .....                                | Grease tube.....            |                         | Ej ill/not ill.     |