


Genuine Spare Parts

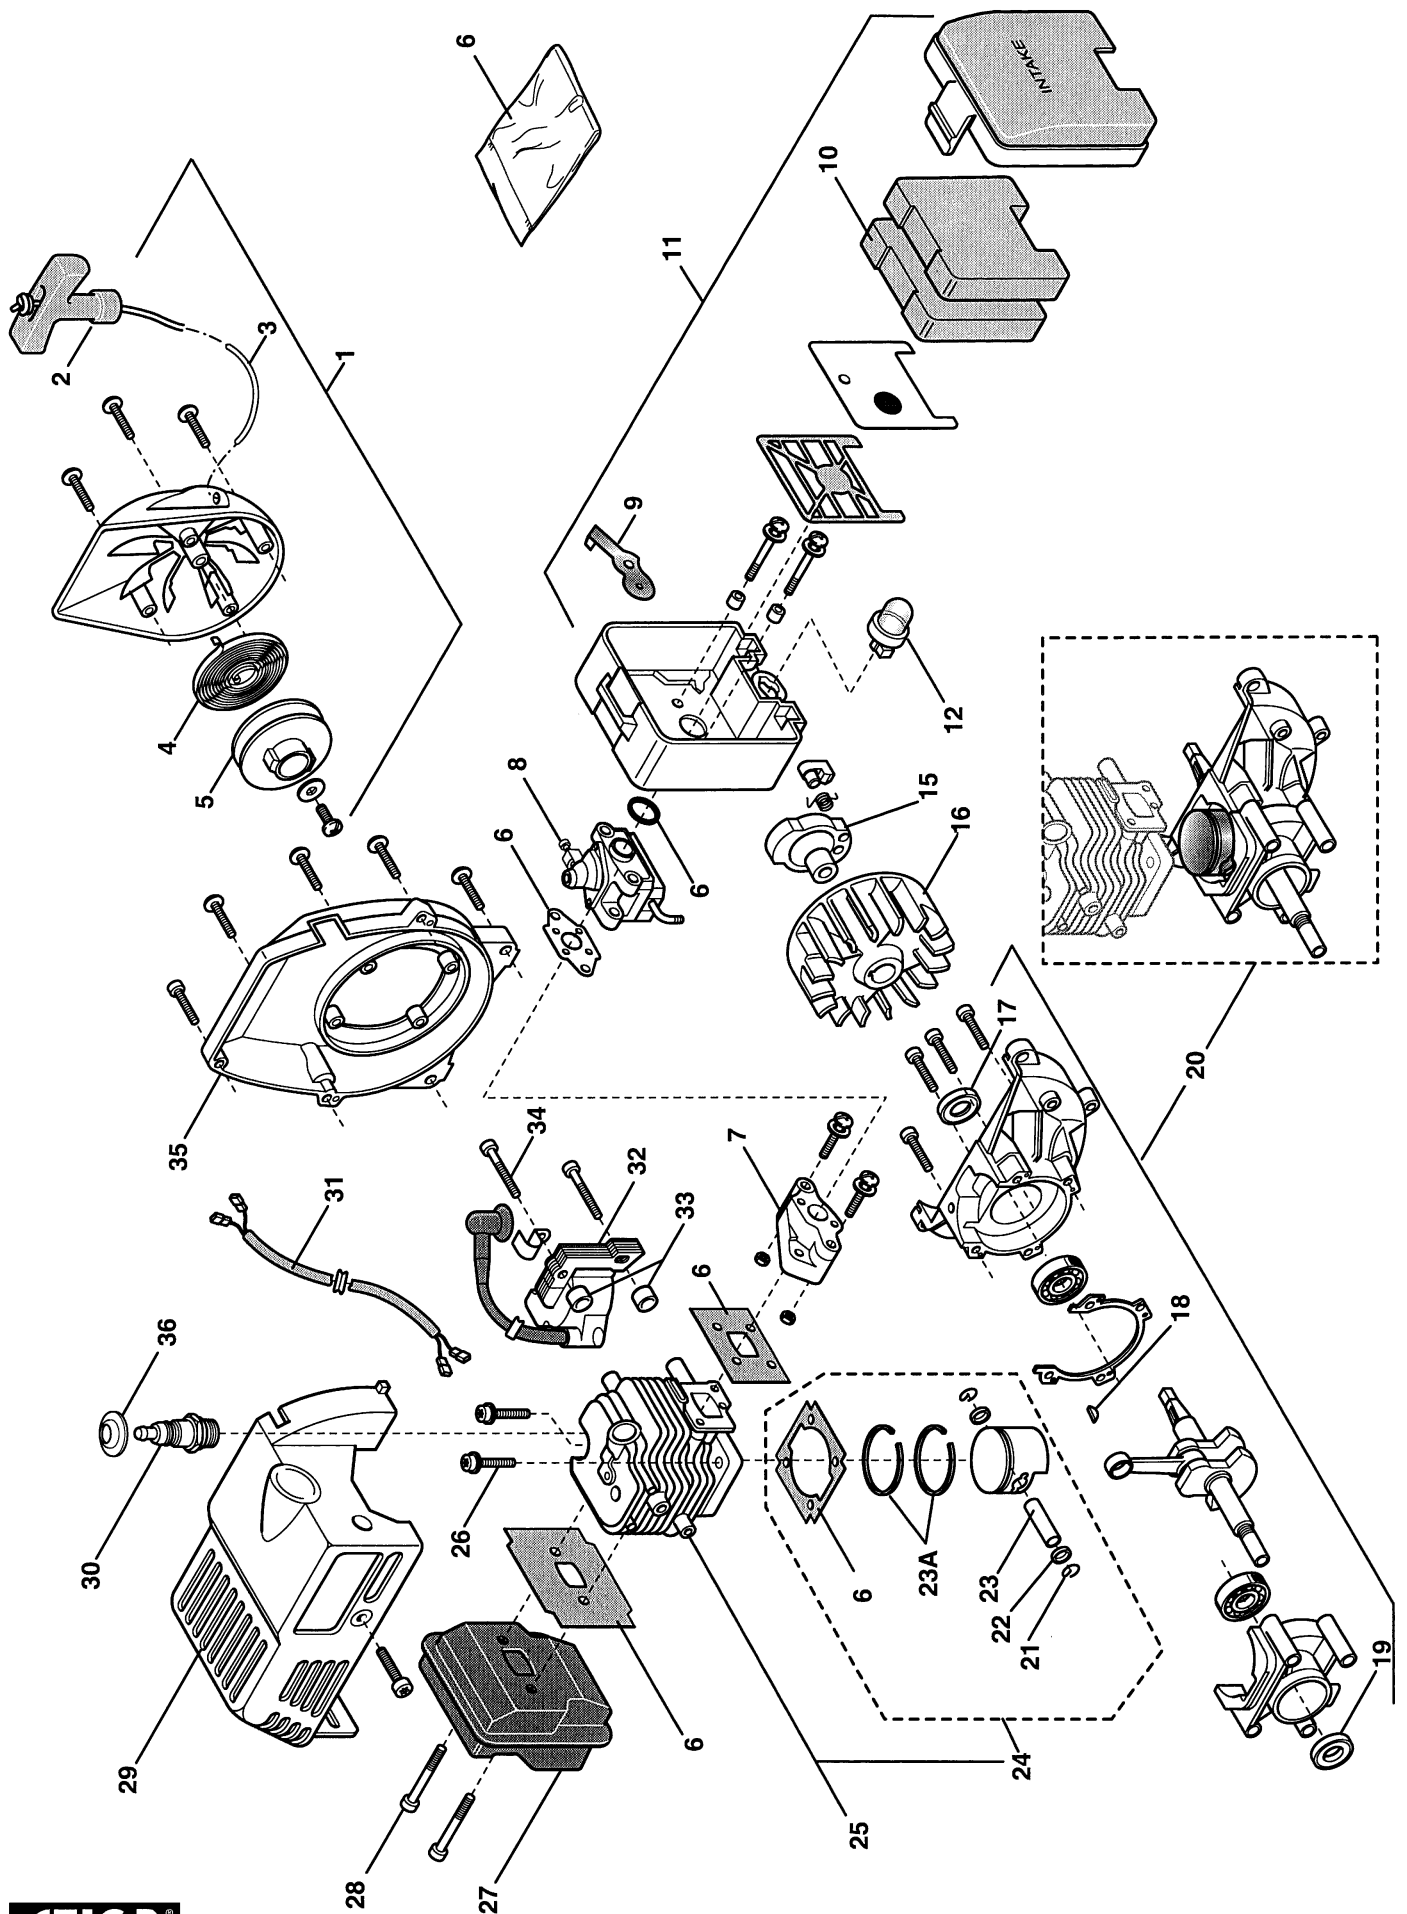



Utgåva Issue		Bildnr Picture No		ST 210- SB 22 MOTOR		ST 210- SB 22 ENGINE		Sida Page	
2006- 12		1485B						258	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1021 6110								
1	1				1911- 3781- 01	Start kpl.....	Start assy.....		Inkl. pos 2 - 5
2	1				1911- 3782- 01	• Starthandtag.....	• Starter handle.....		
3	1				1911- 3783- 01	• Startsnöre.....	• Starter rope.....		
4	1				1911- 3784- 01	• Fjäder.....	• Spring.....		
5	1				1911- 3785- 01	• Linhjul.....	• Pulley.....		
6	1				1911- 3786- 01	Packningssats.....	Gasket set.....		
7	1				1911- 3787- 01	Förgasarfäste.....	Carburettor base.....		
8	1				1911- 3788- 01	Förgasare kpl.....	Carburettor assy.....		
8A	1				1911- 2062- 01	Gasspjäll m.axel.....	Throttle valve & shaf.....		Ej ill/not ill.
9	1				1911- 3789- 01	• Chokespjäll.....	• Choke valve.....		
10	2				1911- 3790- 01	• Luftfilter.....	• Air filter.....		
11	1				1911- 3791- 01	Luftfilter kpl.....	Air filter assy.....		Inkl. pos 9 - 10
12	1				1911- 3792- 01	Primer.....	Primer.....		
15	1				1911- 3855- 01	Startspärr kpl.....	Starter pawl assy.....		
16	1				1911- 3796- 01	Svänghjul.....	Flywheel.....		
17	1				1911- 3797- 01	• Tätningsring.....	• Seal ring.....		
18	1				1911- 3798- 01	• Kil.....	• Key.....		
19	1				1911- 3799- 01	• Tätningsring.....	• Seal ring.....		
20	1				1911- 3800- 01	Short- block.....	Short- block.....		
21	2				1911- 3801- 01	• Låsring.....	• Lock ring.....		
22	2				1911- 3802- 01	• Packning.....	• Gasket.....		
23	1				1911- 3803- 01	• Kolvbult.....	• Piston pin.....		
23A	2				1911- 3816- 01	• Kolvring.....	• Piston ring.....		
24	1				1911- 3804- 01	• Kolv kpl.....	• Piston assy.....		Inkl. pos 21 - 23A
25	1				1911- 3805- 01	Cylinder kpl m.kolv.....	Cylinder assy w.pisto.....		Inkl. pos 24
26	2				1911- 3806- 01	Skruv.....	Screw.....		
27	1				1911- 3807- 01	Ljuddämpare.....	Muffler.....		
28	2				1911- 3808- 01	Skruv.....	Screw.....		
29	1				1911- 3809- 01	Motorkåpa.....	Engine shield.....		
30	1				9400- 0258- 00	Tändstift.....	Spark plug.....		Champion CJ7Y
31	1				1911- 3810- 01	Kablage.....	Wiring harness.....		
32	1				1911- 3811- 01	Elektronikspole.....	Electronic coil.....		
33	2				1911- 3812- 01	Distans.....	Spacer.....		
34	2				1911- 3813- 01	Skruv.....	Screw.....		
35	1				1911- 3814- 01	Svänghjulslock.....	Flywheel cover.....		
36	1				1911- 3815- 01	Tändstiftsskydd.....	Spark plug cover.....		

Utgåva Issue 2006- 12		Bildnr Picture No 1616C		SB 22 RÖJARE RIGG		SB 22 BRUSH CUTTER DRIVE SHAFT		Sida Page 256	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6110								
2	1				1911-3761-01	Platta	Fixed plate		Inkl. pos 11, 34
3	4				1911-3762-01	Isolator	Insulator		
5	1				1911-3911-01	Gaswire	Throttle cable		
6	1				1911-3763-01	Lock.....	Cover		
7	1				1911-3764-01	Jordkabel.....	Ground wire		
8	1				1911-3918-01	Strömbrytare	Switch		
9	1				1911-3919-01	Kåpa kpl- gul	Housing assy- yellow		
10	1				1911-3766-01	Bränsletank kpl	Fuel tank assy		
11	1				1911-3767-01	• Bränslefilter	• Fuel pick- up		
12	1				1911-3912-01	Tanklock	Fuel tank cap		
13	1				1911-3769-01	Fjäder.....	Spring		Inkl. pos 17
14	1				1911-3914-01	Gasreglage.....	Throttle trigger		
14A	1				1911-3915-01	Säkerhetsspärr	Safety lever		
15	1				1911-3916-01	Rör nedre m.drivaxel	Lower tube w.shaft.....		
15A	1				1911-3917-01	Rör övre m.drivaxel	Upper tube w.shaft.....		
16	1				1911-3896-01	Stenskydd kpl	Stone guard assy		
16A	2				9865-0525-16	• Skruv	• Screw		
16B	2				9747-0531-02	• Mutter	• Nut		
17	1				1911-3772-01	• Kniv	• Line cutter blade		
18	1				1911-3897-01	Handtag främre kpl	Front handle assy		
18A	4				9865-0530-16	• Skruv	• Screw		Inkl. pos 20 - 22 0.45 kg (130 m) 15 m
18B	4				9747-0531-02	• Mutter	• Nut		
19	1				1911-3895-01	Skärhuvud kpl.....	Cutting head assy.....		
19A	1				1911-9007-04	Skärtråd (2.0 mm).....	Cutting line (2.0 mm).....		
19A	1				1911-9007-08	Skärtråd (2.0 mm).....	Cutting line (2.0 mm).....		
20	1				1911-3898-01	• Fjäder	• Spring		
21	2				1911-3899-01	• Trådhylsa	• Line inlet		
22	1				1911-3757-01	• Ratt (vä- gänga)	• Knob (LH- thread)		
23	1				1911-3900-01	Snäckväxel kpl.....	Gear case assy		
23A	1				1911-3901-01	Hylsa	Collar		
23B	1				1911-3902-01	Övre ringmutter	Upper ring nut.....		3T
23C	1				1911-3903-01	Nedre ringmutter	Lower ring nut		
23E	1				1911-3905-01	Mutter.....	Nut		
23F	2				9997-0535-12	• Skruv	• Screw		
23G	3				9699-0024-02	• Planbricka.....	• Flat washer		
23H	2				9739-0531-22	• Mutter	• Nut		
23I	1				9865-0512-16	• Skruv	• Screw		
23J	1				9683-0015-02	• Låsbricka	• Lock washer		
24	1				1911-3906-01	Stabiliseringsskål.....	Stabilizer bowl.....		
25	1				1911-3920-01	Röjklinga	Clearing blade		
26	1				1911-3907-01	Nyckel- skärhuvud	Key- cutting head		
27	1				1911-3908-01	Sele	Harness.....		
28	1				1911-3909-01	Fäste f.sele.....	Harness support		
28A	1				9865-0510-16	• Skruv	• Screw		
28B	1				9747-0531-02	• Mutter	• Nut		
29	1				1911-3910-01	Dekal- säkerhet	Label- safety		
30	1				1911-3780-01	Kopplingshjul.....	Clutch drum		
31	1				1911-3779-01	Koppling	Clutch		
32	1				1911-3777-01	Rörkoppling kpl	Tube joint		
32A	1				9939-0630-12	• Skruv	• Screw		
32B	2				9799-0631-02	• Mutter	• Nut		
32C	1				9997-0635-12	• Skruv	• Screw		
33	1				1911-3776-01	Axelhylsa	Shaft sleeve.....		
34	1				1911-3929-01	• Gummiringstättning.....	• Grommet		
35	3				1911-3013-01	Skruv	Screw		
36	2				1911-4262-01	Skruv	Screw		
37	2				1911-4263-01	Bricka	Washer		
38	8				1911-4264-01	Skruv	Screw		
39	6				1911-4265-01	Skruv	Screw		