




# Genuine Spare Parts

---



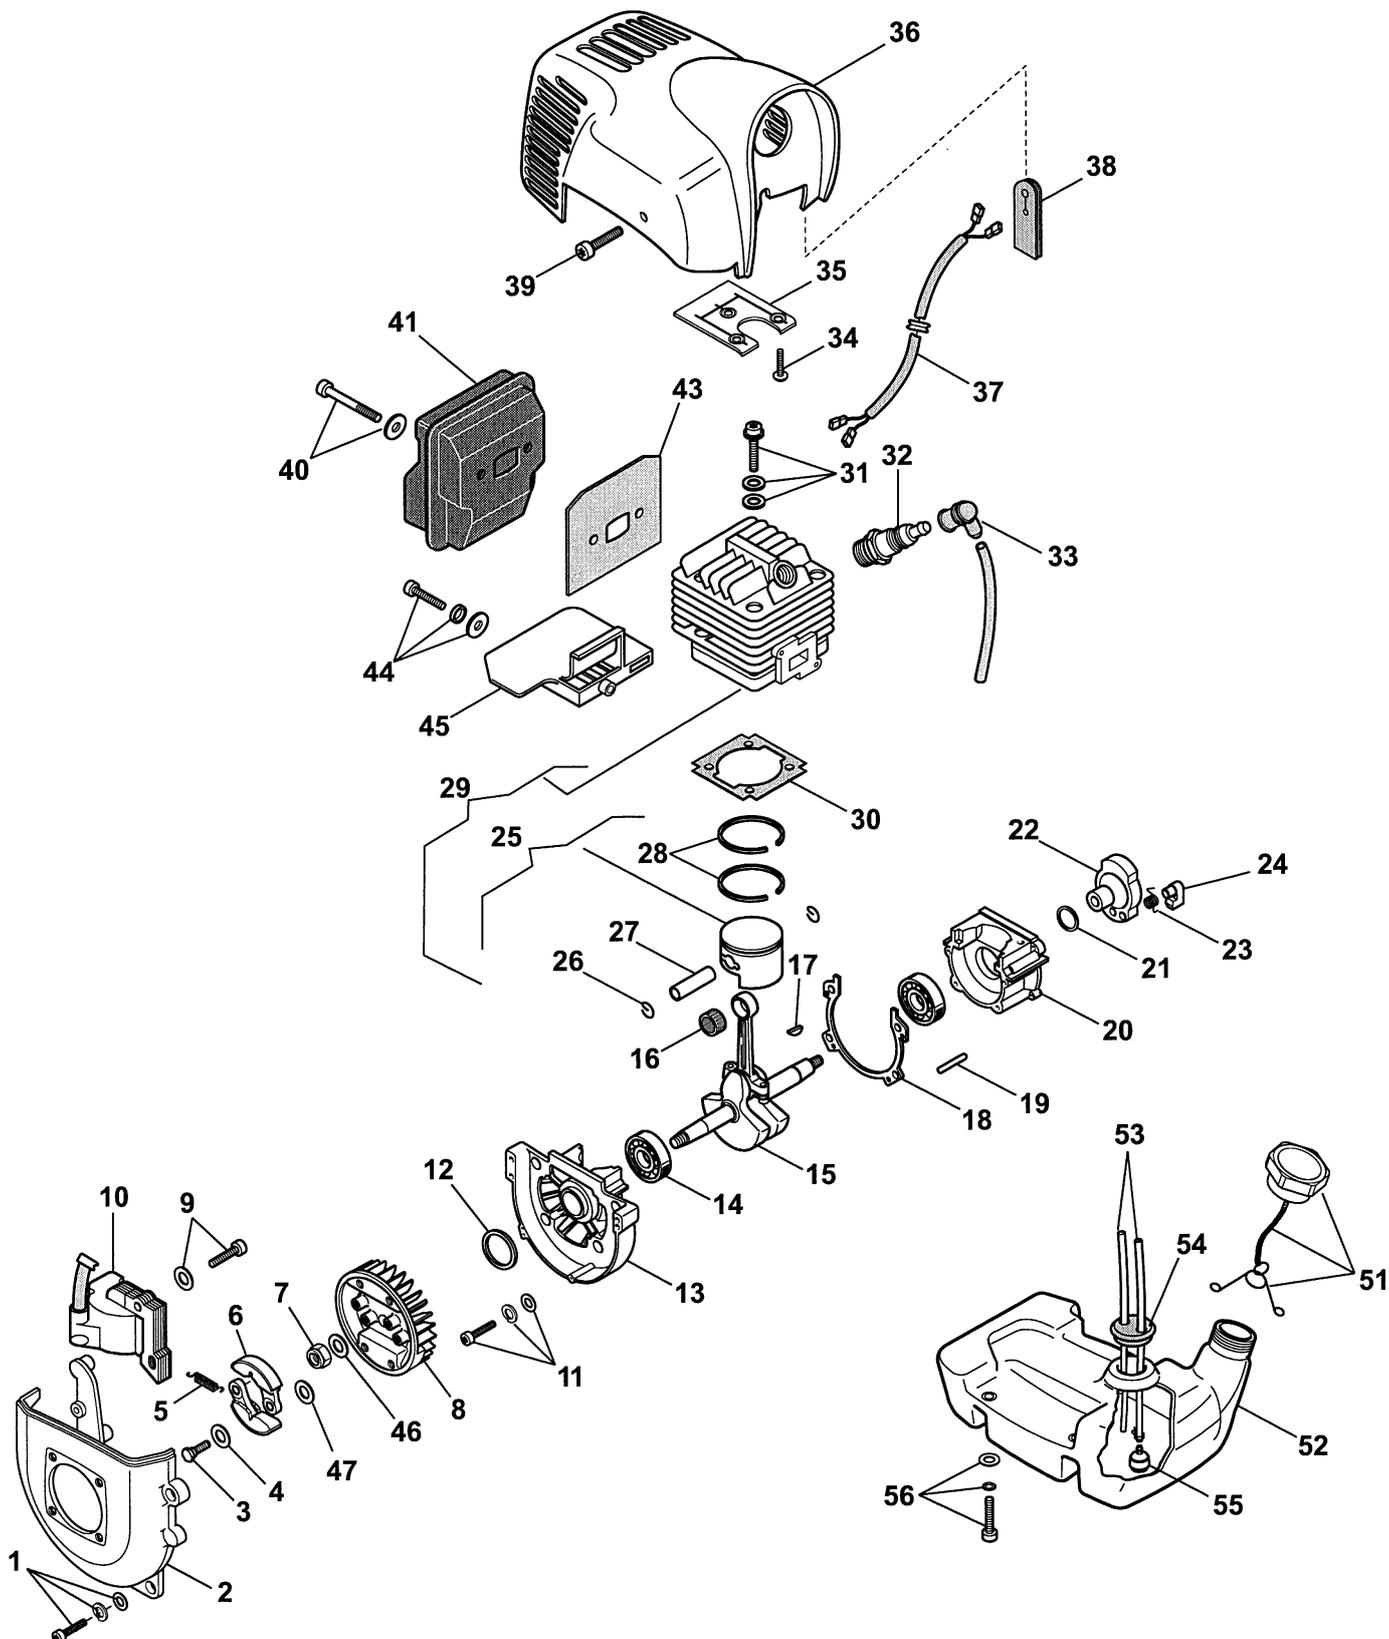


Utgåva Issue 2006-12		Bildnr Picture No 1968A		ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J MOTOR		ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J ENGINE		Sida Page 276
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1025 6109	1029 1031 6116 6117						
	1	4	4	1911-4334-01	Skrivsats.....	Screw set.....		
	2	1	1	1911-4284-01	Stödhus.....	Transm.support case.....		
	3	2	2	1911-4310-01	Skruv.....	Screw.....		
	4	2	2	1911-4308-01	Bricka.....	Washer.....		
	5	1	1	1911-4309-01	Fjäder.....	Spring.....		
	6	2	2	1911-4307-01	Koppling.....	Clutch unit.....		
	7	1	1	1911-4358-01	Mutter.....	Nut.....		
	8	1	1	1911-4277-01	Svånghjul.....	Flywheel.....		
	9	2	2	1911-4337-01	Skrivsats.....	Screw set.....		
	10	1	1	1911-4276-01	Elektronikspole.....	Electronic coil.....		
	11	4	4	1911-4335-01	Skrivsats.....	Screw set.....		
	12	1	1	1911-4283-01	Tätningring.....	Seal ring.....		
	13	1	1	1911-4280-01	Vevhus- främre.....	Crankcase- front.....		
	14		2	1911-4324-01	Kullager.....	Ball bearing.....		
X	14	2		6981110	Kullager.....	Ball bearing.....		
	15	1	1	1911-4291-01	Vevaxel.....	Crankshaft.....		
	16	1	1	1911-4292-01	Nållager.....	Needle bearing.....		
	17	1	1	1911-4323-01	Kil.....	Key.....		
	18	1	1	1911-4282-01	Packning.....	Gasket.....		
	19	3	3	1911-4342-01	Centererstift.....	Centering pin.....		
	20	1	1	1911-4281-01	Vevhus- bakre.....	Crankcase- rear.....		
	21	1	1	1911-4283-01	Tätningring.....	Seal ring.....		
	22	1	1	1911-4306-01	Startkopp.....	Starter cup.....		
	23	1	1	1911-4345-01	Fjäder.....	Spring.....		
	24	1	1	1911-4305-01	Startspärr.....	Starter hook.....		
	25	1	1	1911-4287-01	• Kolv.....	• Piston.....		Inkl. pos 26 - 28
	26	2	2	1911-4290-01	•• Låsring.....	•• Lock ring.....		
	27	1	1	1911-4289-01	•• Kolvbult.....	•• Piston pin.....		
	28	2	2	1911-4288-01	•• Kolvrings.....	•• Piston ring.....		
	29	1	1	1911-4278-01	Cylinder- kolv kpl.....	Cylinder- piston assy.....		Inkl. pos 25
	30	1	1	1911-4279-01	Cylinderpackning.....	Cylinder gasket.....		
	31	4	4	1911-4334-01	Skrivsats.....	Screw set.....		
	32	1	1	1911-4331-01	Tändstift.....	Spark plug.....		
	33	1	1	1911-4298-01	Tändstiftshatt.....	Spark plug cover.....		
X	34	3	3	6981285	Skruv.....	Screw.....		
	35	1	1	1911-4319-01	Skydd.....	Guard.....		
	36	1	1	1911-4341-01	Motorkåpa- gul.....	Engine cover- yellow.....		
	37	2	2	1911-4297-01	Kabel.....	Switch wire.....		
	38	1	1	1911-4296-01	Kabelhållare.....	Cable retainer.....		
	39	2	2	1911-4325-01	Skruv.....	Screw.....		
	40	2	2	1911-4336-01	Skrivsats.....	Screw set.....		
	41	1	1	1911-4315-01	Ljuddämpare.....	Muffler.....		
	43	1	1	1911-4316-01	Ljuddämparskydd.....	Muffler shield.....		
	44	1	1	1911-4337-01	Skrivsats.....	Screw set.....		
	45	1	1	1911-4318-01	Skydd.....	Guard.....		
	46	1	1	1911-4343-01	Bricka.....	Washer.....		
X	47	2	2	1911-4430-01	Bricka.....	Washer.....		
X	51	1	1	1911-4424-01	Tanklock.....	Fuel tank cap.....		
	52	1	1	1911-4311-01	Bränsletank.....	Fuel tank.....		
	53	2	2	1911-4313-01	Bränsleslang.....	Fuel hose.....		
	54	1	1	1911-4314-01	Gummihylsa.....	Grommet.....		
	55	1	1	1911-4254-01	Bränslefilter.....	Intake filter.....		
	56	4	4	1911-4327-01	Skrivsats.....	Screw set.....		

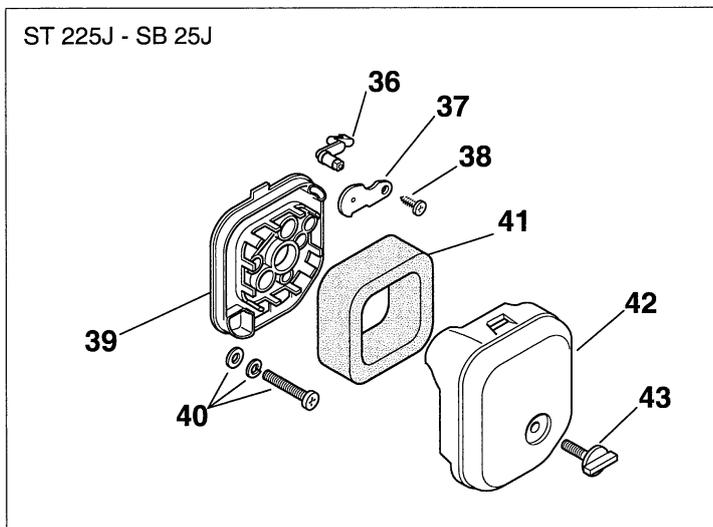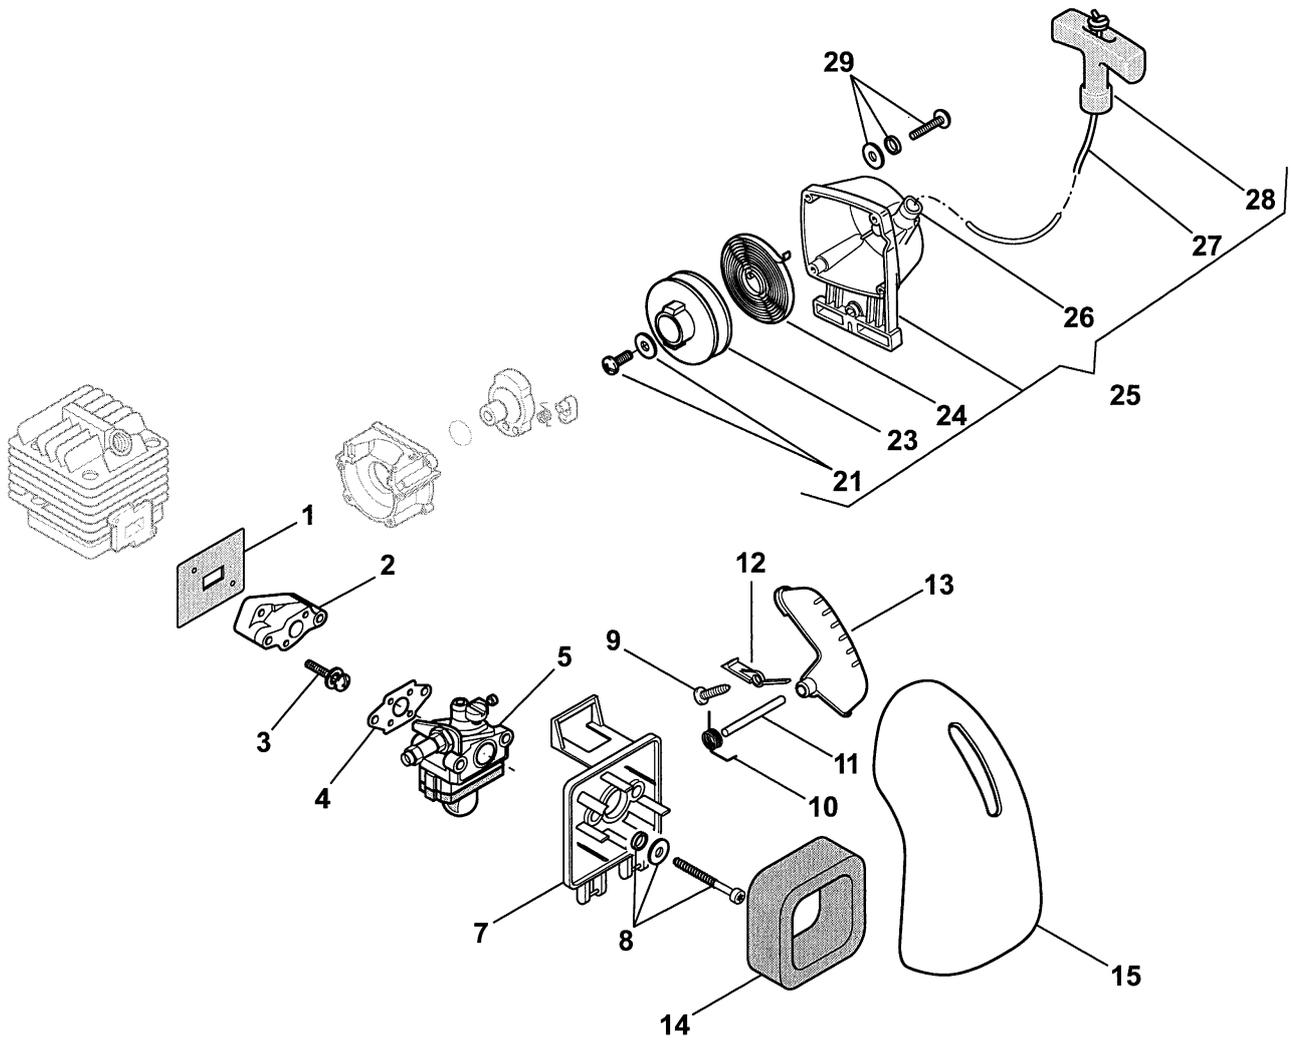

Utgåva Issue 2006- 12	Bildnr Picture No 1969A	ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J FÖRGASARE	ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J CARBURETTOR	Sida Page 278
-----------------------------	-------------------------------	------------------------------------------------------------------	--------------------------------------------------------------------	---------------------

Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1025 6109	1029 1031 6116 6117						
	1	1		1911- 4286- 01	Packning.....	Gasket .....		
	2	1		1911- 4285- 01	Insugningsrör.....	Intake manifold .....		
X	3	2		1911- 4428- 01	Skrivsats.....	Screw set .....		
	4	1		1911- 4293- 01	Packning- membransats .....	Gasket- diaphragm kit .....		
	5	1		1911- 4122- 01	Förgasare kpl.....	Carburettor assy .....		WYJ- 393
X	5	1		1911- 4449- 01	Förgasare kpl.....	Carburettor assy .....		WYJ- 398A
	7	1		1911- 4294- 01	Lufffilterhållare .....	Air filter holder .....		
	8	2		1911- 4330- 01	Skrivsats.....	Screw set .....		
X	9	2		6981269	Skruv .....	Screw .....		
	10	1		1911- 4320- 01	Fjäder.....	Spring .....		
	11	1		1911- 4321- 01	Stift.....	Pin .....		
	12	1		1911- 4322- 01	Hållare .....	Retainer .....		
	13	1		1911- 4332- 01	Tryckknapp .....	Button .....		
	14	1		1911- 4295- 01	Lufffilter .....	Air filter .....		
	15	1		1911- 4340- 01	Filterlock- gul.....	Filter cover- yellow .....		
	21	1		1911- 4326- 01	• Skrivsats.....	• Screw set .....		
	23	1		1911- 4301- 01	• Linhjul.....	• Starter pulley .....		
	24	1		1911- 4300- 01	• Returfjäder.....	• Rewind spring .....		
X	25	1		1911- 4529- 01	Start kpl.....	Starter assy .....		Inkl. pos 21 - 28
	26	1		1911- 4303- 01	• Linguide.....	• Rope guide .....		
	27	1		1911- 4304- 01	• Startsnöre.....	• Starter cord .....		
	28	1		1911- 4302- 01	• Starthandtag.....	• Starter handle.....		
	29	4	4	1911- 4337- 01	Skrivsats.....	Screw set .....		
	36	1		1911- 4352- 01	Chokearm .....	Choke lever .....		
	37	1		1911- 4351- 01	Chokespjäll .....	Choke valve .....		
X	38	1		1911- 4429- 01	Skruv .....	Screw .....		
	39	1		1911- 4346- 01	Lufffilterhus .....	Filter housing .....		
	40	2		1911- 4329- 01	Skrivsats.....	Screw set .....		
	41	1		1911- 4295- 01	Lufffilter .....	Air filter .....		
	42	1		1911- 4349- 01	Filterlock.....	Filer cover .....		
	43	1		1911- 4347- 01	Skruv .....	Screw .....		

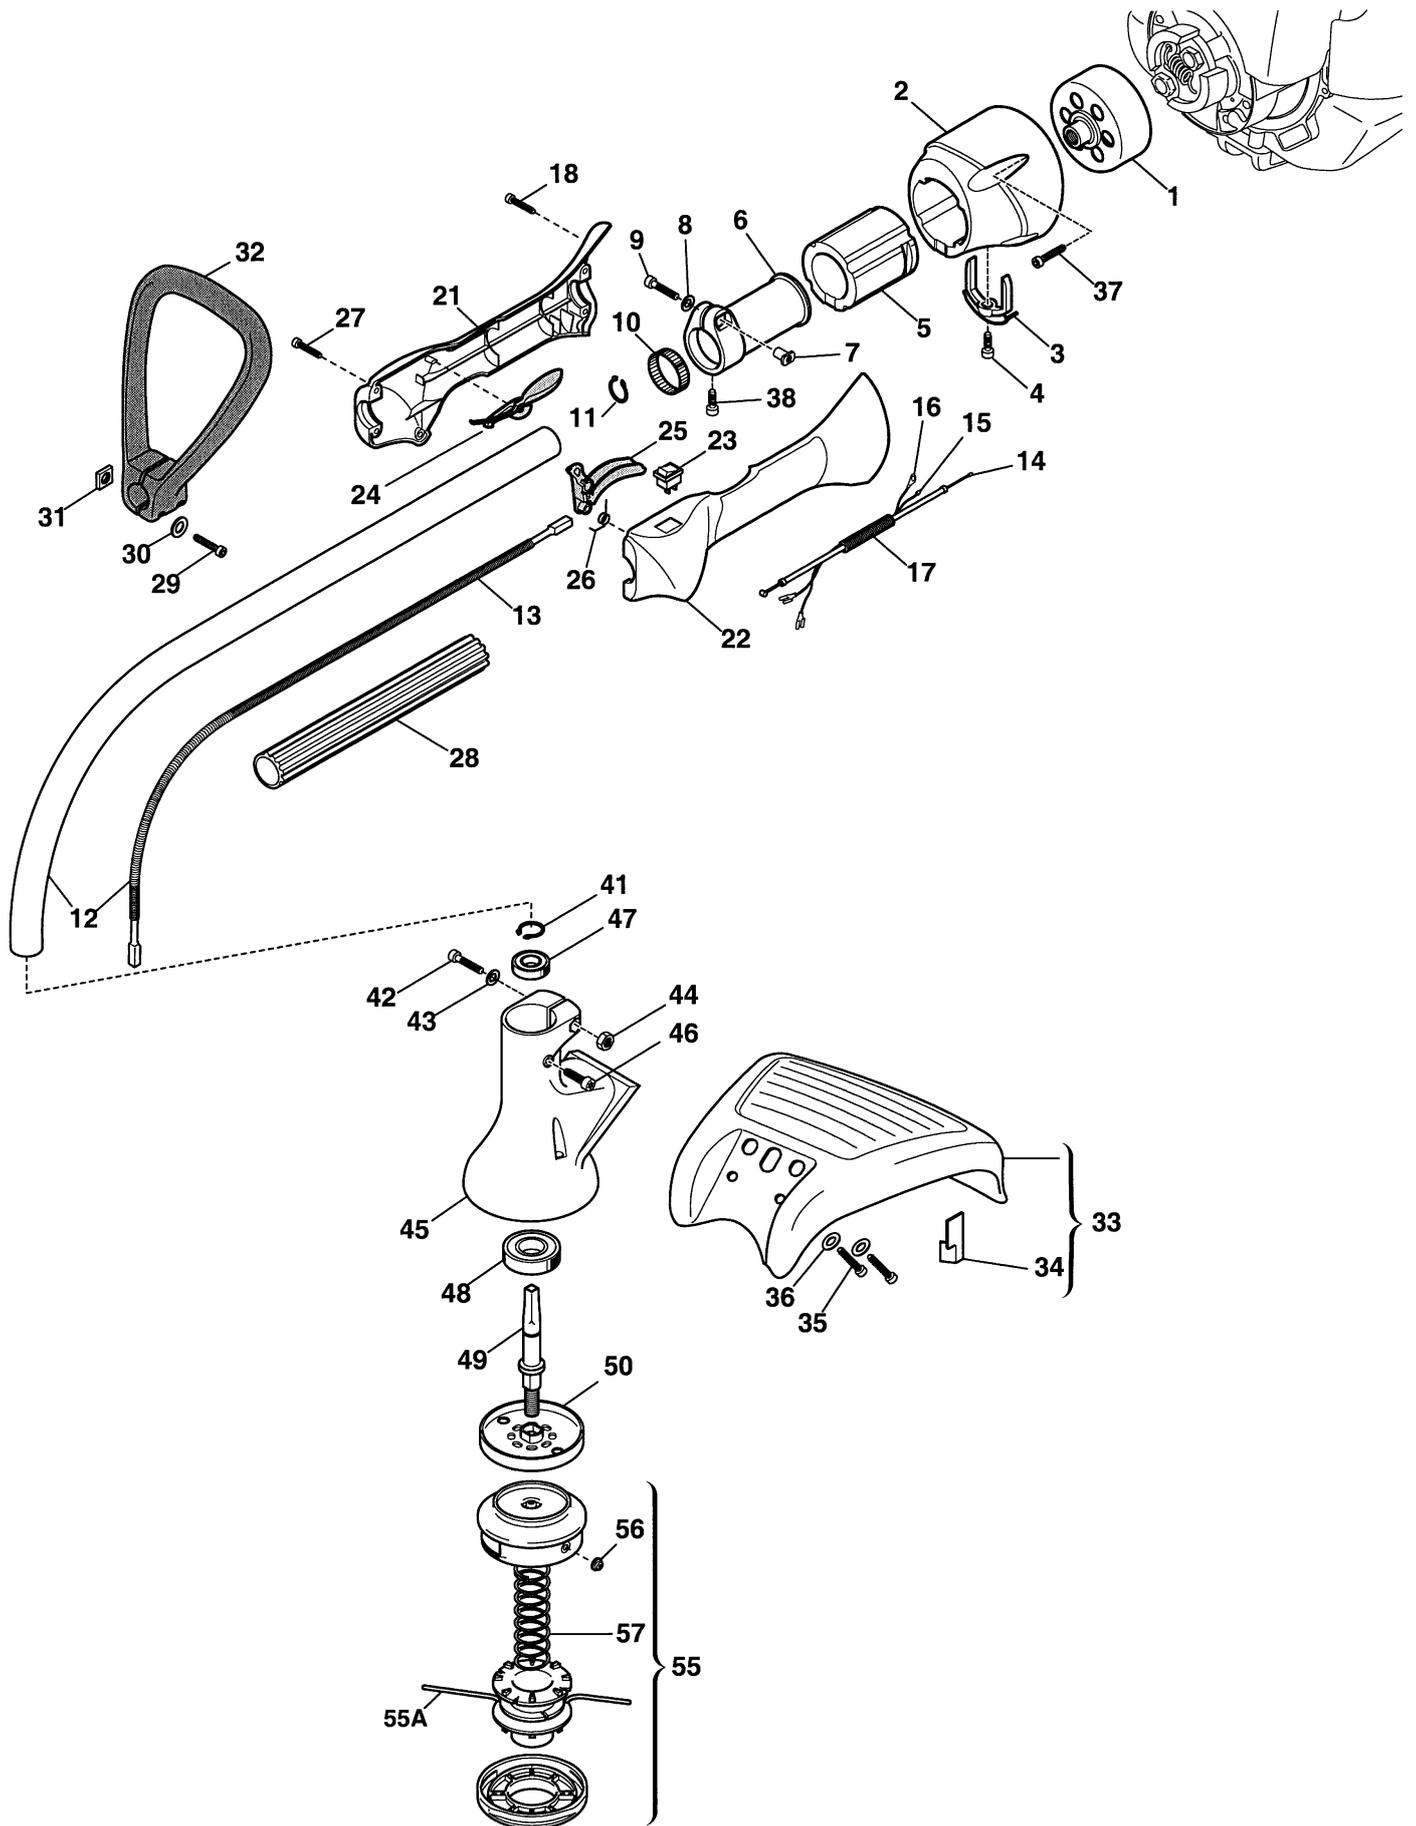

Utgåva Issue		Bildnr Picture No		ST 290 TRIMMER	ST 290 TRIMMER	Sida Page		
2006-12		1963A				266		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1029 -11							
1	1			1911-4205-01	Kopplingstrumma.....	Clutch drum .....		
2	1			1911-4189-01	Transmissionsstöd .....	Transmission support .....		
3	1			1911-4154-01	Gaffel .....	Fork .....		
4	1			1911-3002-01	Skruv .....	Screw .....		
5	1			1911-4155-01	Hylsa .....	Grommet .....		
6	1			1911-4188-01	Stöd .....	Support .....		
7	1			1911-4245-01	Bussning .....	Bushing .....		
8	1			1911-3267-01	Bricka .....	Washer .....		
9	1			1911-3007-01	Skruv .....	Screw .....		
10	1			1911-4236-01	Reducering .....	Reduction .....		
11	1			1911-4239-01	Låsring .....	Snap ring .....		
12	1			1911-4224-01	Drivaxelrör kpl .....	Transmission tube.....		Inkl. pos 13
13	1			1911-4117-01	• Drivaxel.....	• Transmission shaft.....		
14	1			1911-4137-01	Gaswire .....	Throttle wire .....		
15	1			1911-4127-01	Kabel .....	Cable .....		
16	1			1911-4132-01	Jordkabel.....	Ground cable.....		
17	1			1911-4164-01	Kabelhölje.....	Wire sheath.....		
18	2			1911-3002-01	Skruv .....	Screw .....		
21	1			1911-4184-01	Handtag- hö .....	Handgrip- RH .....		
22	1			1911-4185-01	Handtag- vä .....	Handgrip- LH.....		
23	1			1911-3053-01	Stoppkontakt .....	Stop switch .....		
24	1			1911-4170-01	Säkerhetsspärr .....	Safety lever .....		
25	1			1911-4169-01	Gasreglage.....	Throttle lever .....		
26	1			1911-4173-01	Fjäder.....	Spring .....		
27	4			1911-3001-01	Skruv .....	Screw .....		
28	1			1911-4152-01	Värmeisolering .....	Heat insulator.....		
29	2			1911-3008-01	Skruv .....	Screw .....		
30	2			1911-3015-01	Bricka .....	Washer .....		
31	2			1911-3023-01	Mutter.....	Nut .....		
32	1			1911-4165-01	Handtag- främre.....	Handle- front .....		
33	1			1911-4216-01	Skyddskåpa kpl.....	Safety cover assy .....		Inkl. pos 34
34	1			1911-3074-01	• Knivblad.....	• Line cutter blade .....		
35	2			1911-3001-01	Skruv .....	Screw .....		
36	2			1911-3216-01	Bricka .....	Washer .....		
37	4			1911-3012-01	Skruv .....	Screw .....		
38	1			1911-3025-01	Skruv .....	Screw .....		
41	1			1911-4239-01	Låsring .....	Snap ring .....		
42	1			1911-3011-01	Skruv .....	Screw .....		
43	1			1911-3266-01	Bricka .....	Washer .....		
44	1			1911-4231-01	Mutter.....	Nut .....		
45	1			1911-4125-01	Transmissionshus .....	Gear case .....		
46	1			1911-3002-01	Skruv .....	Screw .....		
47	1			1911-4113-01	Kullager .....	Ball bearing .....		
48	1			1911-3040-01	Kullager .....	Ball bearing .....		
49	1			1911-4115-01	Axel .....	Head shaft.....		
50	1			1911-3073-01	Ringmutter- övre .....	Ring nut- upper .....		
55	1			1911-4149-01	Skärhuvud kpl.....	Nylon head assy.....		Inkl. pos 56 - 57
55A	1			1911-9008-04	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		0.45 kg (90 m)
55A	1			1911-9008-08	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		15 m
56	2			1911-3875-01	• Trådhylsa .....	• Line inlet .....		
57	1			1911-4174-01	• Fjäder.....	• Spring .....		
99	1			1911-3212-01	Skyddsglasögon .....	Protective goggles .....		Tillbehör/accessory