




Genuine Spare Parts

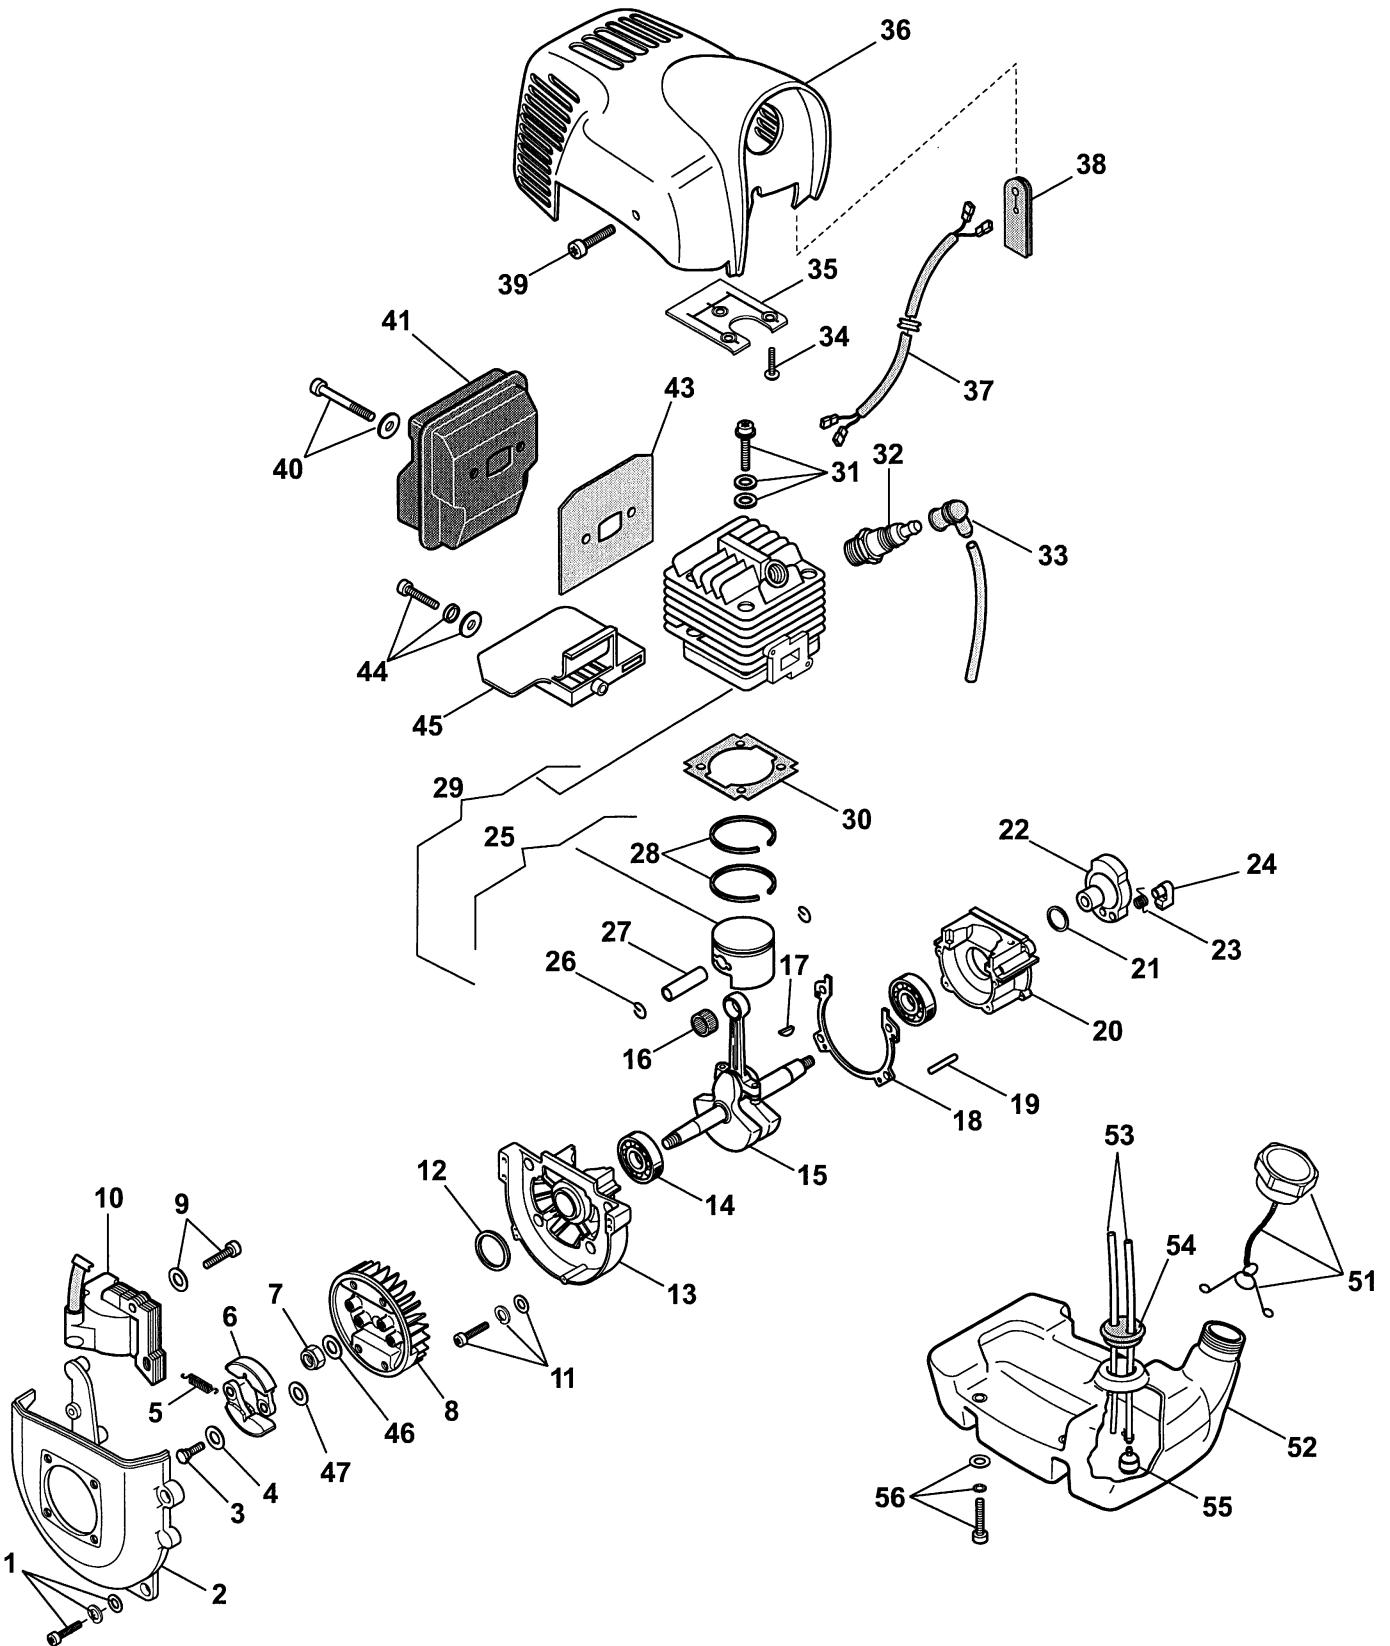


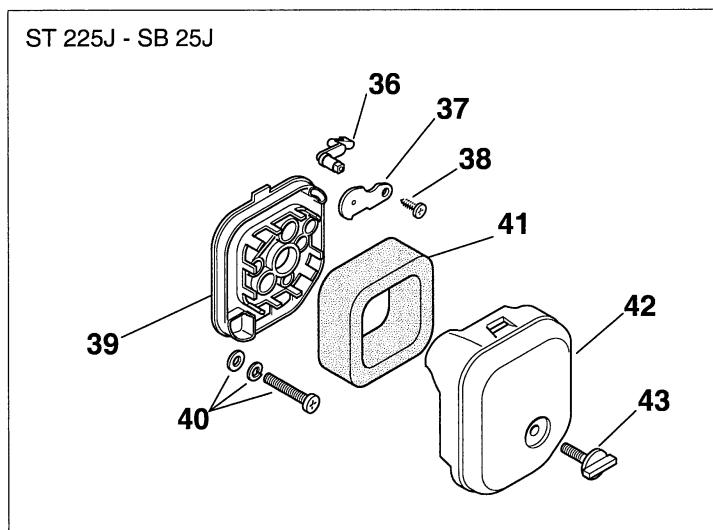

Utgåva Issue 2006-12		Bildnr Picture No 1968A		ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J MOTOR			ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J ENGINE	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1029 1031 6109	1025 6116	1029 1031 6117					
X	1	4	4	1911-4334-01	Skruvsets.....	Screw set		
	2	1	1	1911-4284-01	Stödhus	Transm.support case.....		
	3	2	2	1911-4310-01	Skruv	Screw		
	4	2	2	1911-4308-01	Bricka	Washer		
	5	1	1	1911-4309-01	Fjäder.....	Spring		
	6	2	2	1911-4307-01	Koppling	Clutch unit		
	7	1	1	1911-4358-01	Mutter	Nut		
	8	1	1	1911-4277-01	Svänghjul.....	Flywheel		
	9	2	2	1911-4337-01	Skruvsets.....	Screw set		
	10	1	1	1911-4276-01	Elektronikspole	Electronic coil		
	11	4	4	1911-4335-01	Skruvsets.....	Screw set		
	12	1	1	1911-4283-01	Tätningsring	Seal ring		
	13	1	1	1911-4280-01	Vevhus- främre	Crankcase- front		
	14	2		1911-4324-01	Kullager	Ball bearing		
	14	2		6981110	Kullager	Ball bearing		
	15	1	1	1911-4291-01	Vevaxel	Crankshaft		
	16	1	1	1911-4292-01	Nållager	Needle bearing		
	17	1	1	1911-4323-01	Kil	Key		
	18	1	1	1911-4282-01	Packning	Gasket		
	19	3	3	1911-4342-01	Centrerstift	Centering pin		
	20	1	1	1911-4281-01	Vevhus- bakre	Crankcase- rear		
	21	1	1	1911-4283-01	Tätningsring	Seal ring		
	22	1	1	1911-4306-01	Startkopp	Starter cup		
	23	1	1	1911-4345-01	Fjäder	Spring		
	24	1	1	1911-4305-01	Startspärr	Starter hook		
	25	1	1	1911-4287-01	• Kolv	• Piston	Inkl. pos 26 - 28	
	26	2	2	1911-4290-01	.. Låsring Lock ring		
	27	1	1	1911-4289-01	.. Kolvbult Piston pin		
	28	2	2	1911-4288-01	.. Kolvrings Piston ring		
X	29	1	1	1911-4278-01	Cylinder- kolv kpl	Cylinder- piston assy	Inkl. pos 25	
	30	1	1	1911-4279-01	Cylinderpackning	Cylinder gasket		
	31	4	4	1911-4334-01	Skruvsets	Screw set		
	32	1	1	1911-4331-01	Tändstift	Spark plug		
	33	1	1	1911-4298-01	Tändstiftshatt	Spark plug cover		
	34	3	3	6981285	Skruv	Screw		
	35	1	1	1911-4319-01	Skydd	Guard		
	36	1	1	1911-4341-01	Motorkåpa- gul	Engine cover- yellow		
	37	2	2	1911-4297-01	Kabel	Switch wire		
	38	1	1	1911-4296-01	Kabelhållare	Cable retainer		
	39	2	2	1911-4325-01	Skruv	Screw		
	40	2	2	1911-4336-01	Skruvsets	Screw set		
	41	1	1	1911-4315-01	Ljuddämpare	Muffler		
	43	1	1	1911-4316-01	Ljuddämparskydd	Muffler shield		
	44	1	1	1911-4337-01	Skruvsets	Screw set		
	45	1	1	1911-4318-01	Skydd	Guard		
	46	1	1	1911-4343-01	Bricka	Washer		
X	47	2	2	1911-4430-01	Bricka	Washer		
X	51	1	1	1911-4424-01	Tanklock	Fuel tank cap		
	52	1	1	1911-4311-01	Bränsletank	Fuel tank		
	53	2	2	1911-4313-01	Bränsleslang	Fuel hose		
	54	1	1	1911-4314-01	Gummihylsa	Grommet		
	55	1	1	1911-4254-01	Bränsleförfilter	Intake filter		
	56	4	4	1911-4327-01	Skruvsets	Screw set		

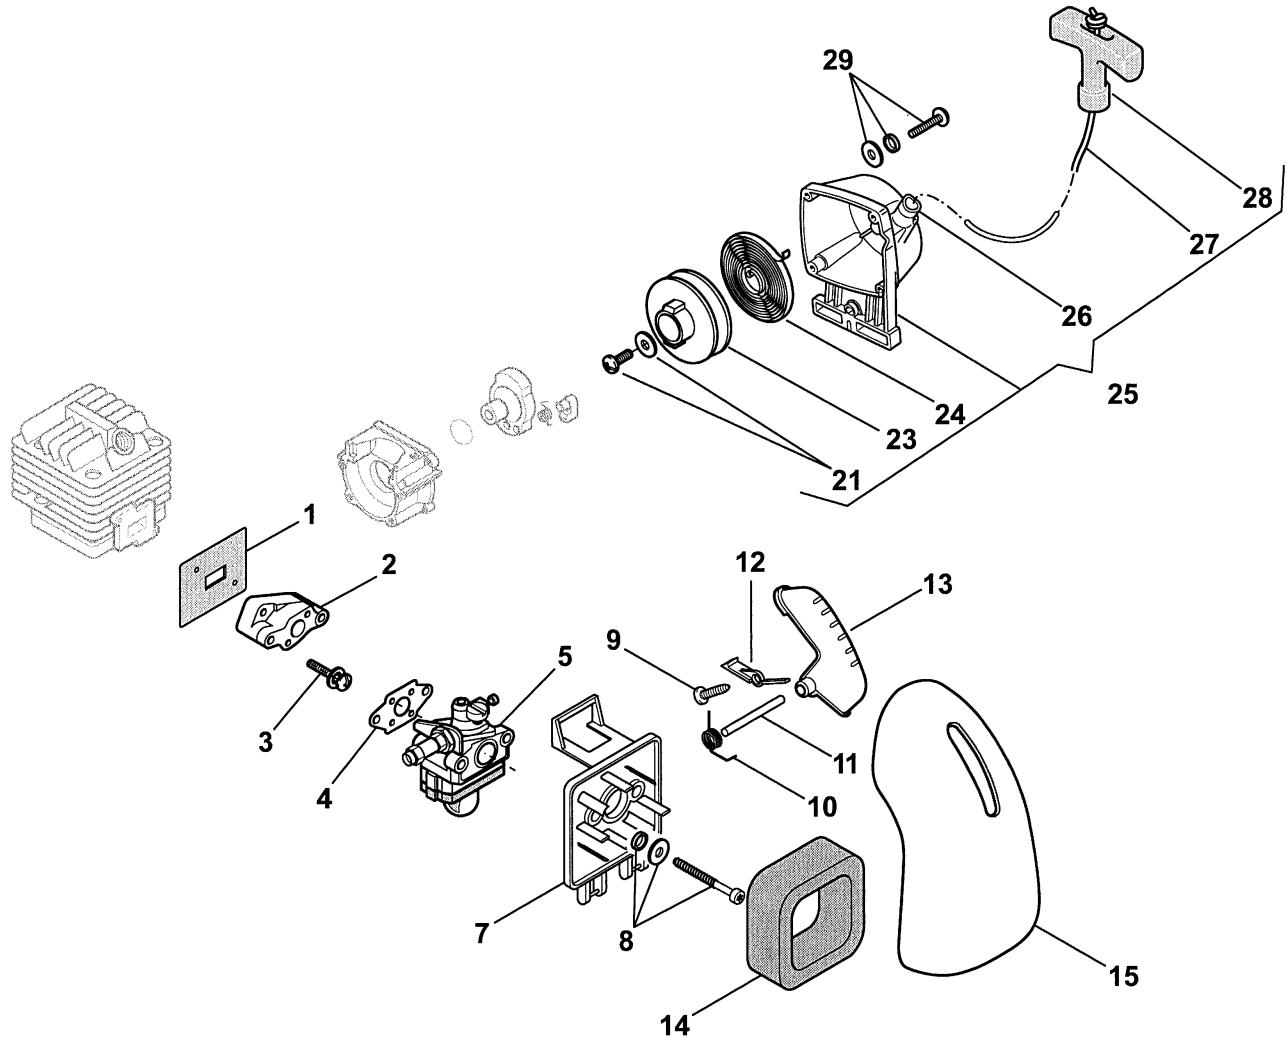

Utgåva Issue 2006-12		Bildnr Picture No 1969A		ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J FÖRGASARE			ST 225J- SB 25J ST 290- ST 291 SB 27J- SB 29J CARBURETTOR		Sida Page 278
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
		1029 1031	1025 6109	6116 6117					
X 1	1	1			1911-4286-01	Packning.....	Gasket.....		
X 2	1	1			1911-4285-01	Insugningsrör.....	Intake manifold		
X 3	2	2			1911-4428-01	Skruvsets.....	Screw set.....		
X 4	1	1			1911-4293-01	Packning- membransats	Gasket- diaphragm kit		
X 5		1			1911-4122-01	Förgasare kpl.....	Carburettor assy		
X 5	1				1911-4449-01	Förgasare kpl.....	Carburettor assy		
X 7		1			1911-4294-01	Luftfilterhållare	Air filter holder		
X 8		2			1911-4330-01	Skruvsets.....	Screw set		
X 9		2			6981269	Skruv.....	Screw.....		
X 10		1			1911-4320-01	Fjäder.....	Spring		
X 11		1			1911-4321-01	Stift.....	Pin		
X 12		1			1911-4322-01	Hållare	Retainer		
X 13		1			1911-4332-01	Tryckknapp	Button		
X 14		1			1911-4295-01	Luftfilter.....	Air filter		
X 15		1			1911-4340-01	Filterlock- gul	Filter cover- yellow		
X 21	1	1			1911-4326-01	• Skruvsats.....	• Screw set		
X 23	1	1			1911-4301-01	• Linjhjul.....	• Starter pulley		
X 24	1	1			1911-4300-01	• Returfjäder.....	• Rewind spring		
X 25	1	1			1911-4529-01	Start kpl.....	Starter assy		Inkl. pos 21 - 28
X 26	1	1			1911-4303-01	• Linguide.....	• Rope guide		
X 27	1	1			1911-4304-01	• Startsnöre	• Starter cord		
X 28	1	1			1911-4302-01	• Starthandtag	• Starter handle		
X 29	4	4			1911-4337-01	Skruvsets.....	Screw set		
X 36	1				1911-4352-01	Chokearm	Choke lever		
X 37	1				1911-4351-01	Chokespjäll	Choke valve		
X 38	1				1911-4429-01	Skruv.....	Screw		
X 39	1				1911-4346-01	Luftfilterhus	Filter housing		
X 40	2				1911-4329-01	Skruvsets.....	Screw set		
X 41	1				1911-4295-01	Luftfilter.....	Air filter		
X 42	1				1911-4349-01	Filterlock.....	Filer cover		
X 43	1				1911-4347-01	Skruv.....	Screw		

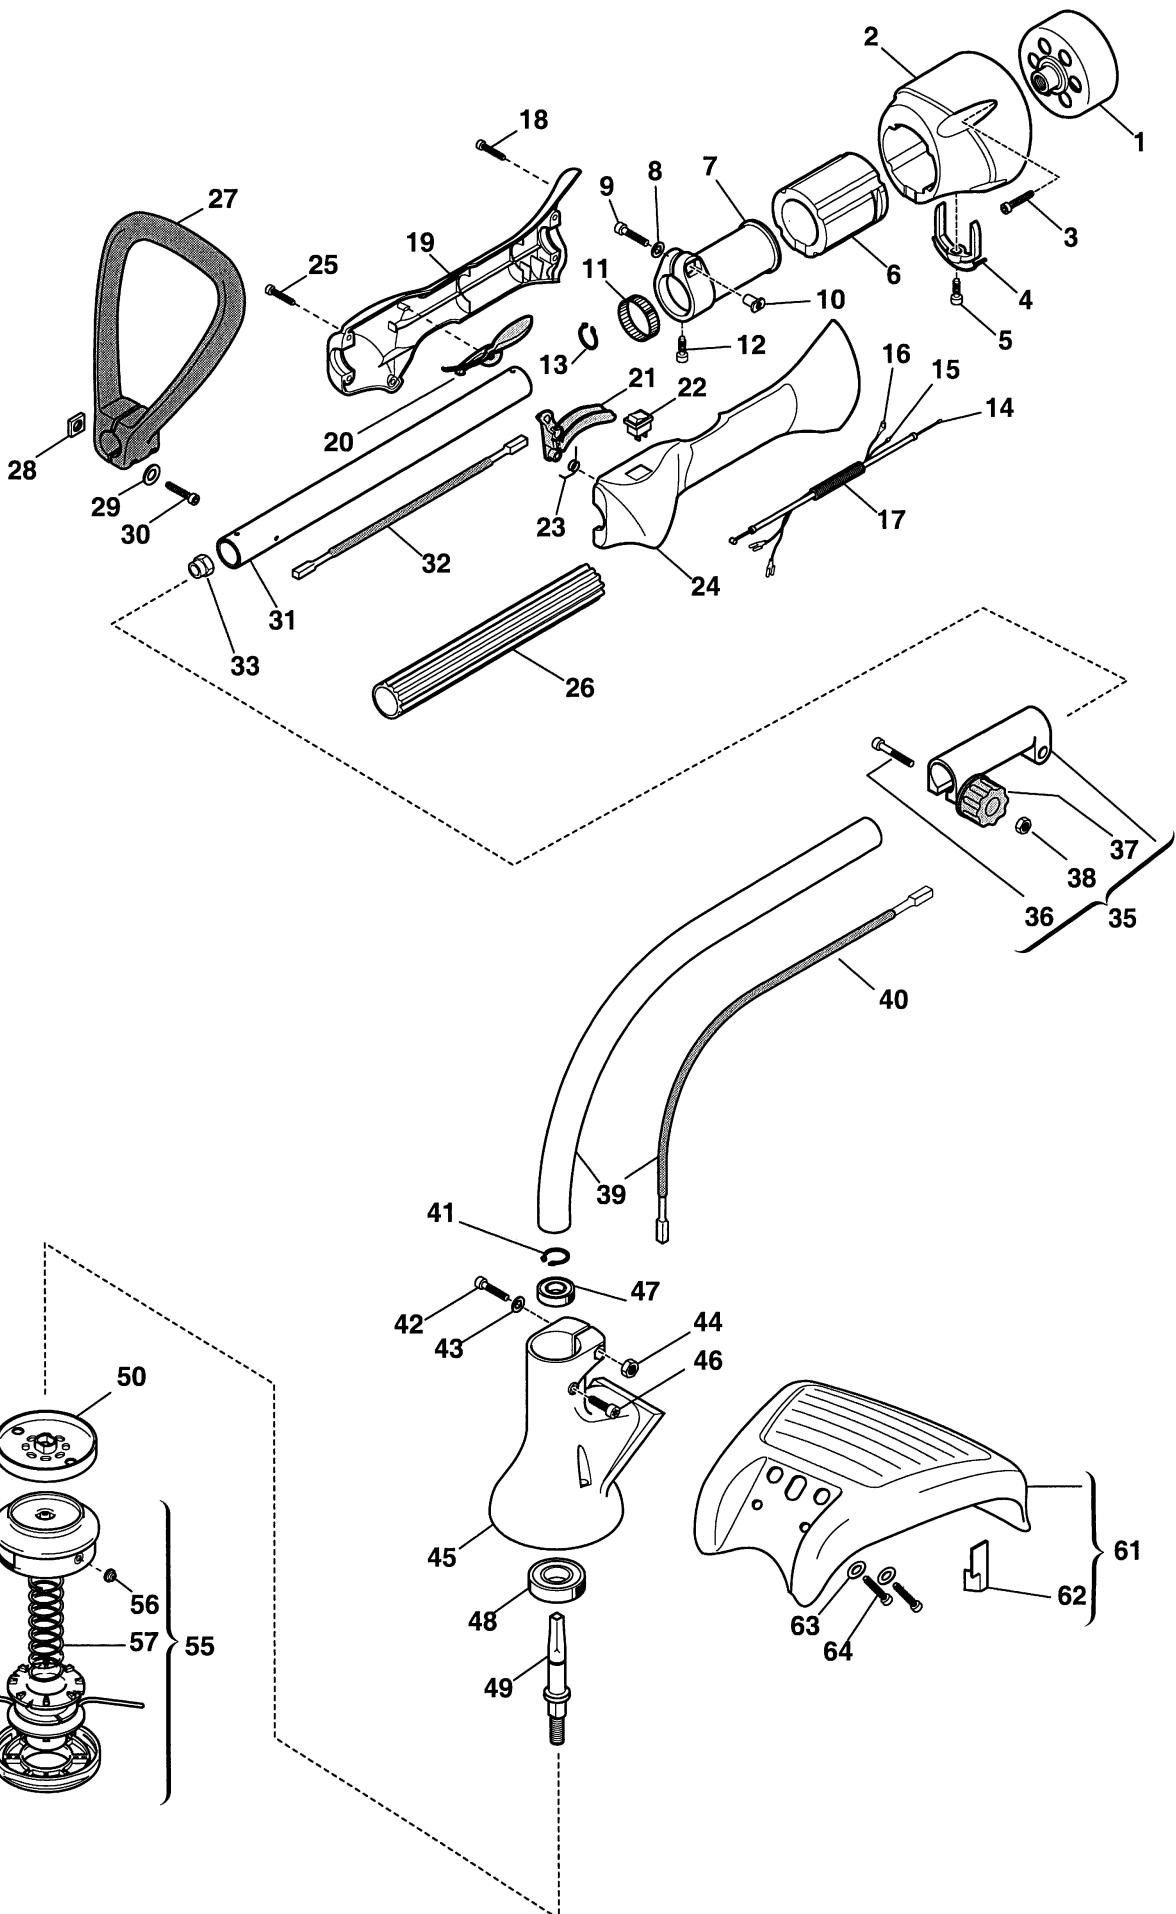

Utgåva Issue		Bildnr Picture No		ST 291 TRIMMER		ST 291 TRIMMER		Sida Page
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1031 - 11							
X	1	1		1911-4205-01	Kopplingstrumma.....	Clutch drum		
	2	1		1911-4189-01	Transmissionsstöd	Transmission support		
X	3	4		1911-4438-01	Skruv	Screw		
	4	1		1911-4154-01	Gaffel	Fork		
X	5	1		1911-3002-01	Skruv	Screw		
	6	1		1911-4155-01	Hylsa	Grommet		
X	7	1		1911-4188-01	Stöd	Support		
X	8	1		1911-4463-01	Bricka	Washer		
X	9	1		1911-4435-01	Skruv	Screw		
X	10	1		1911-4513-01	Bussning	Bushing		
X	11	1		1911-4507-01	Reduktion	Reduction		
X	12	1		1911-4505-01	Skruv	Screw		
X	13	1		1911-4509-01	Låsring	Snap ring		
	14	1		1911-4137-01	Gaswire	Throttle wire		
	15	1		1911-4127-01	Kabel	Cable		
	16	1		1911-4132-01	Jordkabel	Ground cable		
X	17	1		1911-4164-01	Kabelhölje	Wire sheath		
X	18	1		1911-4434-01	Skruv	Screw		
	19	1		1911-4184-01	Handtag- hö	Handgrip- RH		
	20	1		1911-4170-01	Säkerhetsspärr	Safety lever		
X	21	1		1911-4169-01	Gasreglage	Throttle lever		
X	22	1		1911-4508-01	Brytare	Switch		
	23	1		1911-4173-01	Fjäder	Spring		
X	24	1		1911-4185-01	Handtag- vä	Handgrip- LH		
X	25	4		1911-4433-01	Skruv	Screw		
	26	1		1911-4152-01	Värmeisolering	Heat insulator		
	27	1		1911-4165-01	Handtag- främre	Handle- front		
X	28	2		1911-4504-01	Mutter	Nut		
X	29	2		1911-4464-01	Bricka	Washer		
X	30	2		1911-4436-01	Skruv	Screw		
X	31	1		1911-4522-01	Transmissionsrör	Transmission tube		
X	32	1		1911-4440-01	Drivaxel	Transmission shaft		
X	33	1		1911-4483-01	Axelhylsa	Shaft sleeve		
X	35	1		1911-4519-01	Rörkoppling kpl	Joint	Inkl. pos 36 - 38	
X	36	1		9997-0640-12	• Skruv	• Screw		
X	37	1		1911-4480-01	• Låsratt	• Knob		
X	38	1		1911-4231-01	• Mutter	• Nut		
X	39	1		1911-4524-01	Transmissionsrör	Transmission tube	Inkl. pos 40	
X	40	1		1911-4442-01	• Drivaxel	• Transmission shaft		
X	41	1		1911-4509-01	Låsring	Snap ring		
X	42	1		1911-4437-01	Skruv	Screw		
X	43	1		1911-4462-01	Bricka	Washer		
X	44	1		1911-4502-01	Mutter	Nut		
X	45	1		1911-4125-01	Transmissionshus	Gear case		
X	46	1		1911-4434-01	Skruv	Screw		
X	47	1		1911-4113-01	Kullager	Ball bearing		
X	48	1		1911-4506-01	Kullager	Ball bearing		
X	49	1		1911-4115-01	Axel	Head shaft		
X	50	1		1911-4510-01	Ringmutter- övre	Ring nut- upper		
	55	1		1911-4149-01	Skärhuvud kpl	Nylon head assy		
	55A	1		1911-9008-04	Skärtråd (2.4 mm)	Cutting line (2.4 mm)	0.45 kg (90 m)	
	55A	1		1911-9008-08	Skärtråd (2.4 mm)	Cutting line (2.4 mm)	15 m	
X	56	2		1911-4512-01	• Bussning	• Bushing		
X	57	1		1911-4174-01	• Fjäder	• Spring		
X	61	1		1911-4216-01	Skyddskåpa kpl	Safety cover assy	Inkl. pos 62	
X	62	1		1911-4511-01	• Kniv	• Line cutter		
X	63	2		1911-4465-01	Bricka	Washer		
X	64	2		1911-4433-01	Skruv	Screw		
	99	1		1911-3212-01	Skyddsglasögon	Protective goggles	Tillbehör/accessory	