


Genuine Spare Parts



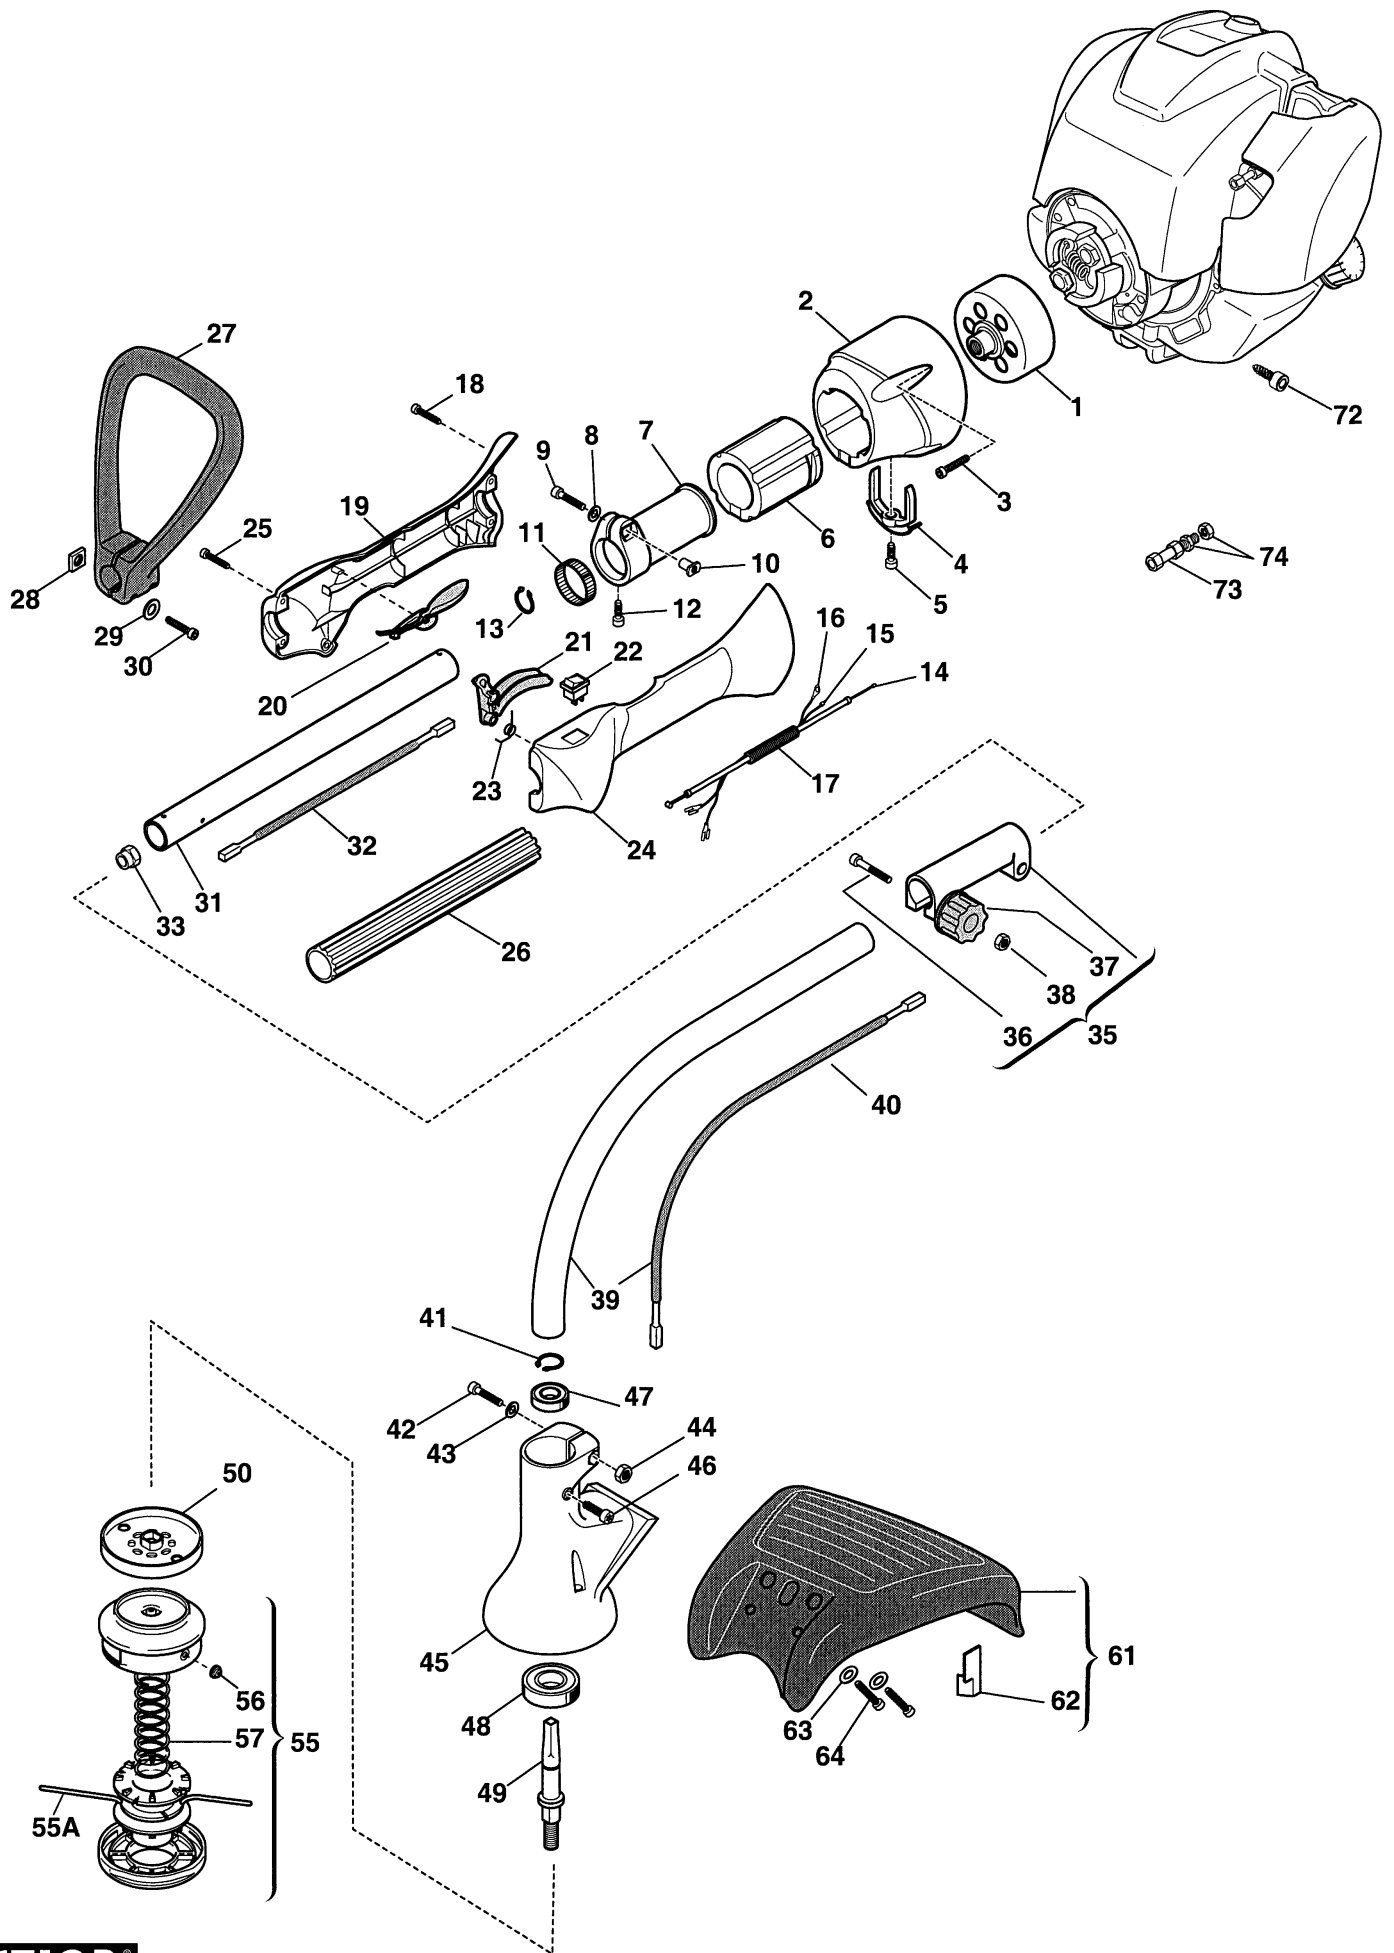

Utgåva Issue		Bildnr Picture No		ST 425J TRIMMER		ST 425J TRIMMER		Sida Page	
2006- 12		2152						280	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1042 -11								
1	1				1911-4206-01	Kopplingstrumma.....	Clutch drum		
2	1				1911-4189-01	Transmissionsstöd	Transmission support		
3	4				1911-4438-01	Skruv	Screw		
4	1				1911-4154-01	Gaffel	Fork		
5	1				1911-3002-01	Skruv	Screw		
6	1				1911-4155-01	Hylsa	Grommet		
7	1				1911-4188-01	Stöd	Support		
8	1				1911-4463-01	Bricka	Washer		
9	1				1911-4435-01	Skruv	Screw		
10	1				1911-4513-01	Bussning	Bushing		
11	1				1911-4507-01	Reduktion	Reduction		
12	1				1911-4505-01	Skruv	Screw		
13	1				1911-4509-01	Låsring	Snap ring		
14	1				1911-4134-01	Gaswire	Throttle wire		
15	1				1911-4127-01	Kabel	Cable		
16	1				1911-4130-01	Jordkabel	Ground cable		
17	1				1911-4164-01	Kabelhölje	Wire sheath		
18	1				1911-4434-01	Skruv	Screw		
19	1				1911-4184-01	Handtag- hö	Handgrip- RH		
20	1				1911-4170-01	Säkerhetsspärr	Safety lever		
21	1				1911-4169-01	Gasreglage	Throttle lever		
22	1				1911-4508-01	Brytare	Switch		
23	1				1911-4173-01	Fjäder	Spring		
24	1				1911-4185-01	Handtag- vä	Handgrip- LH		
25	4				1911-4433-01	Skruv	Screw		
26	1				1911-4152-01	Värmeisolering	Heat insulator		
27	1				1911-4165-01	Handtag- främre	Handle- front		
28	2				1911-4504-01	Mutter	Nut		
29	2				1911-4464-01	Bricka	Washer		
30	2				1911-4436-01	Skruv	Screw		
31	1				1911-4522-01	Transmissionsrör	Transmission tube		
32	1				1911-4440-01	Drivaxel	Transmission shaft		
33	1				1911-4483-01	Axelhylsa	Shaft sleeve		
35	1				1911-4519-01	Rörkoppling kpl	Joint		Inkl. pos 36 - 38
36	1				9997-0640-12	• Skruv	• Screw		
37	1				1911-4480-01	• Låsraff	• Knob		
38	1				1911-4231-01	• Mutter	• Nut		
39	1				1911-4524-01	Transmissionsrör	Transmission tube		Inkl. pos 40
40	1				1911-4442-01	• Drivaxel	• Transmission shaft		
41	1				1911-4509-01	Låsring	Snap ring		
42	1				1911-4437-01	Skruv	Screw		
43	1				1911-4462-01	Bricka	Washer		
44	1				1911-4502-01	Mutter	Nut		
45	1				1911-4125-01	Transmissionshus	Gear case		
46	1				1911-4434-01	Skruv	Screw		
47	1				1911-4113-01	Kullager	Ball bearing		
48	1				1911-4506-01	Kullager	Ball bearing		
49	1				1911-4115-01	Axel	Head shaft		
50	1				1911-4510-01	Ringmutter- övre	Ring nut- upper		
55	1				1911-4149-01	Skärhuvud kpl	Nylon head assy		
55A	1				1911-9008-04	Skärtråd (2.4 mm)	Cutting line (2.4 mm)		0.45 kg (90 m)
55A	1				1911-9008-08	Skärtråd (2.4 mm)	Cutting line (2.4 mm)		15 m
56	2				1911-4512-01	• Bussning	• Bushing		
57	1				1911-4174-01	• Fjäder	• Spring		
61	1				1911-4216-01	Skyddskåpa kpl	Safety cover assy		Inkl. pos 62
62	1				1911-4511-01	• Kniv	• Line cutter		
63	2				1911-4465-01	Bricka	Washer		
64	2				1911-4433-01	Skruv	Screw		
72	1				1911-3261-01	Skruv	Screw		
73	1				1911-3998-01	Wirejustering	Throttle cable adjust		
74	2				1911-4503-01	Mutter	Nut		
99	1				1911-3212-01	Skyddsglasögon	Protective goggles		Tillbehör/accessory