

Genuine Spare Parts

www.stiga.com

SBK 45 F


- Use GLOBAL GARDEN PRODUCT Genuine Spare Parts specified in the parts list for repair and/or replacement.
- The contents described in the parts list may change due to improvement.
- The drawings of the spare parts are only indicative and might not represent the part in question exactly.
- The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair and/or replacement, make sure that the illustrated parts list is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.

© Copyright 2013 Global Garden Products


All content is subject to copyright by Global Garden Products and may not be reproduced in whole or in part by any means, electronic or otherwise, without prior written approval.

THIS INFORMATION IS NOT INTENDED FOR SALE OR RESALE, AND THIS NOTICE MUST REMAIN ON ALL COPIES.




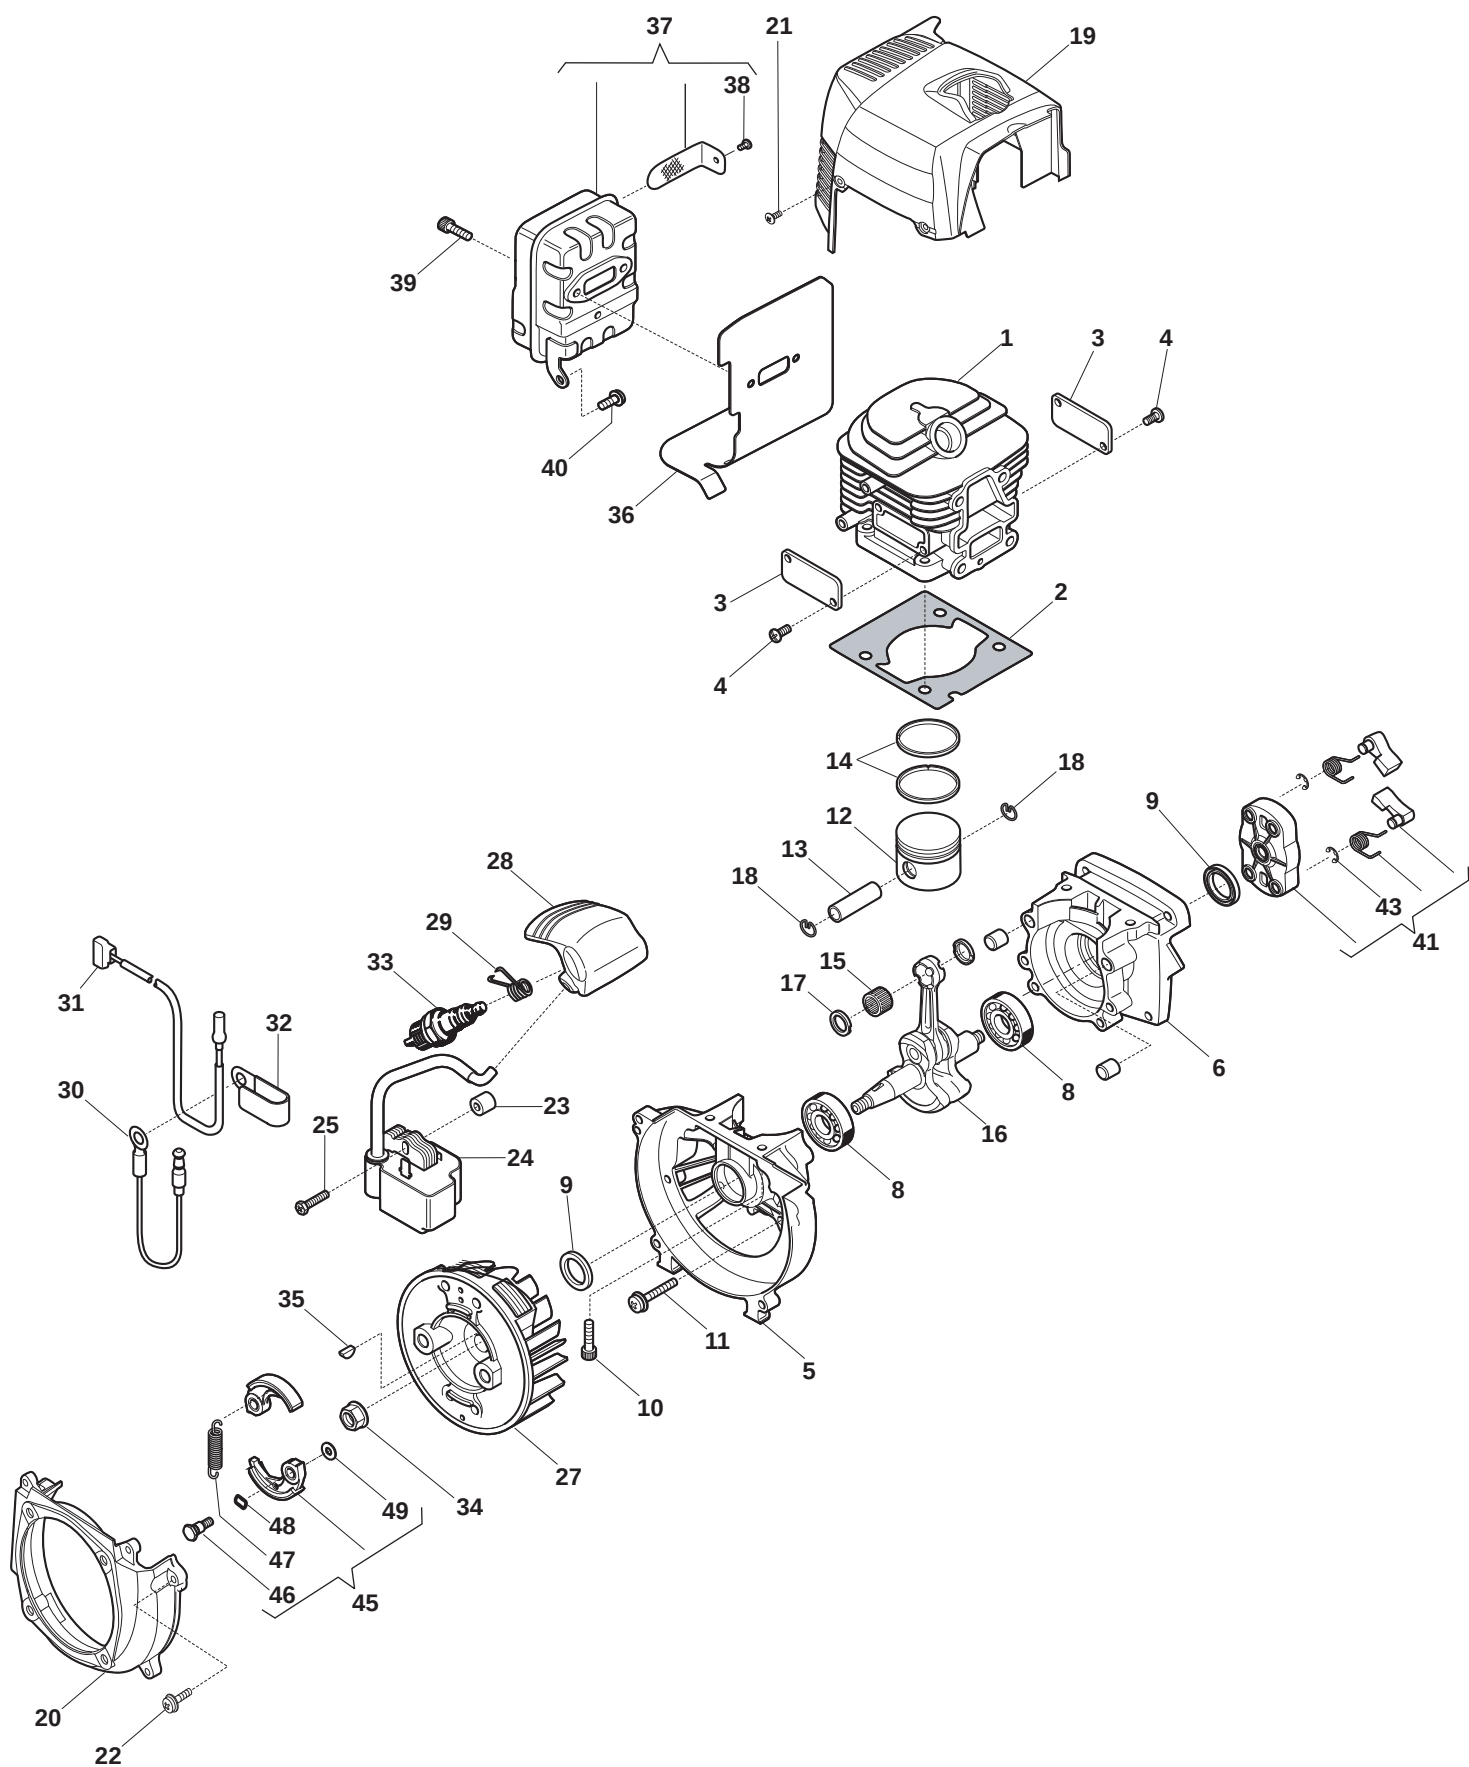


POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	118801959/0	1	Cylinder	
2	118801777/0	1	Cylinder Gasket	
3	118801815/0	2	Plate	
4	123878020/0	4	Screw	
5	118801822/0	1	Crankcase	
6	118801983/0	1	Crankcase	
8	119216048/0	2	Bearing	
9	118801922/0	2	Seal Ring	
10	2135030	4	Screw	
11	112789210/0	4	Screw	
12	118801793/0	1	Piston	
13	118801798/0	1	Piston Pin	
14	118801803/0	1	Piston Ring	
15	118801808/0	1	Needle Bearing	
16	118801887/0	1	Crankshaft	
17	118801909/0	2	Spacer	
18	118801914/0	2	Washer, Piston Pin	
19	118802006/0	1	Cylinder Cover Yellow	
20	118801897/0	1	Housing	
21	123878020/0	2	Screw	
22	2135040	4	Screw	
23	118801830/0	2	Insulator	
24	118801848/0	1	Electronic Coil	
25	112728685/0	2	Screw	
27	118801839/0	1	Flywheed	
28	118801843/0	1	Spark Plug Cover	
29	3657050	1	Terminal	
30	118801851/0	1	Earth Cable	
31	118801986/0	1	Coil-Switch Cable	
32	118801942/0	1	Clamp	
33	3210024	1	Spark Plug	
34	2432050	1	Nut	
35	3151010	1	Flywheel Key	
36	118801778/0	1	Muffler Gasket	
37	118801870/0	1	Muffler	
38	118801906/0	1	Screw	
39	2135040	2	Screw	
40	2135010	1	Screw	
41	118801873/0	1	Starter Pulley	
43	118801912/0	2	Snap Ring	
45	118801811/0	1	Clutch Ass.Y	
46	118801918/0	2	Pin	
47	118801932/0	1	Spring	
48	118801956/0	2	Washer	
49	2312080	2	Washer	

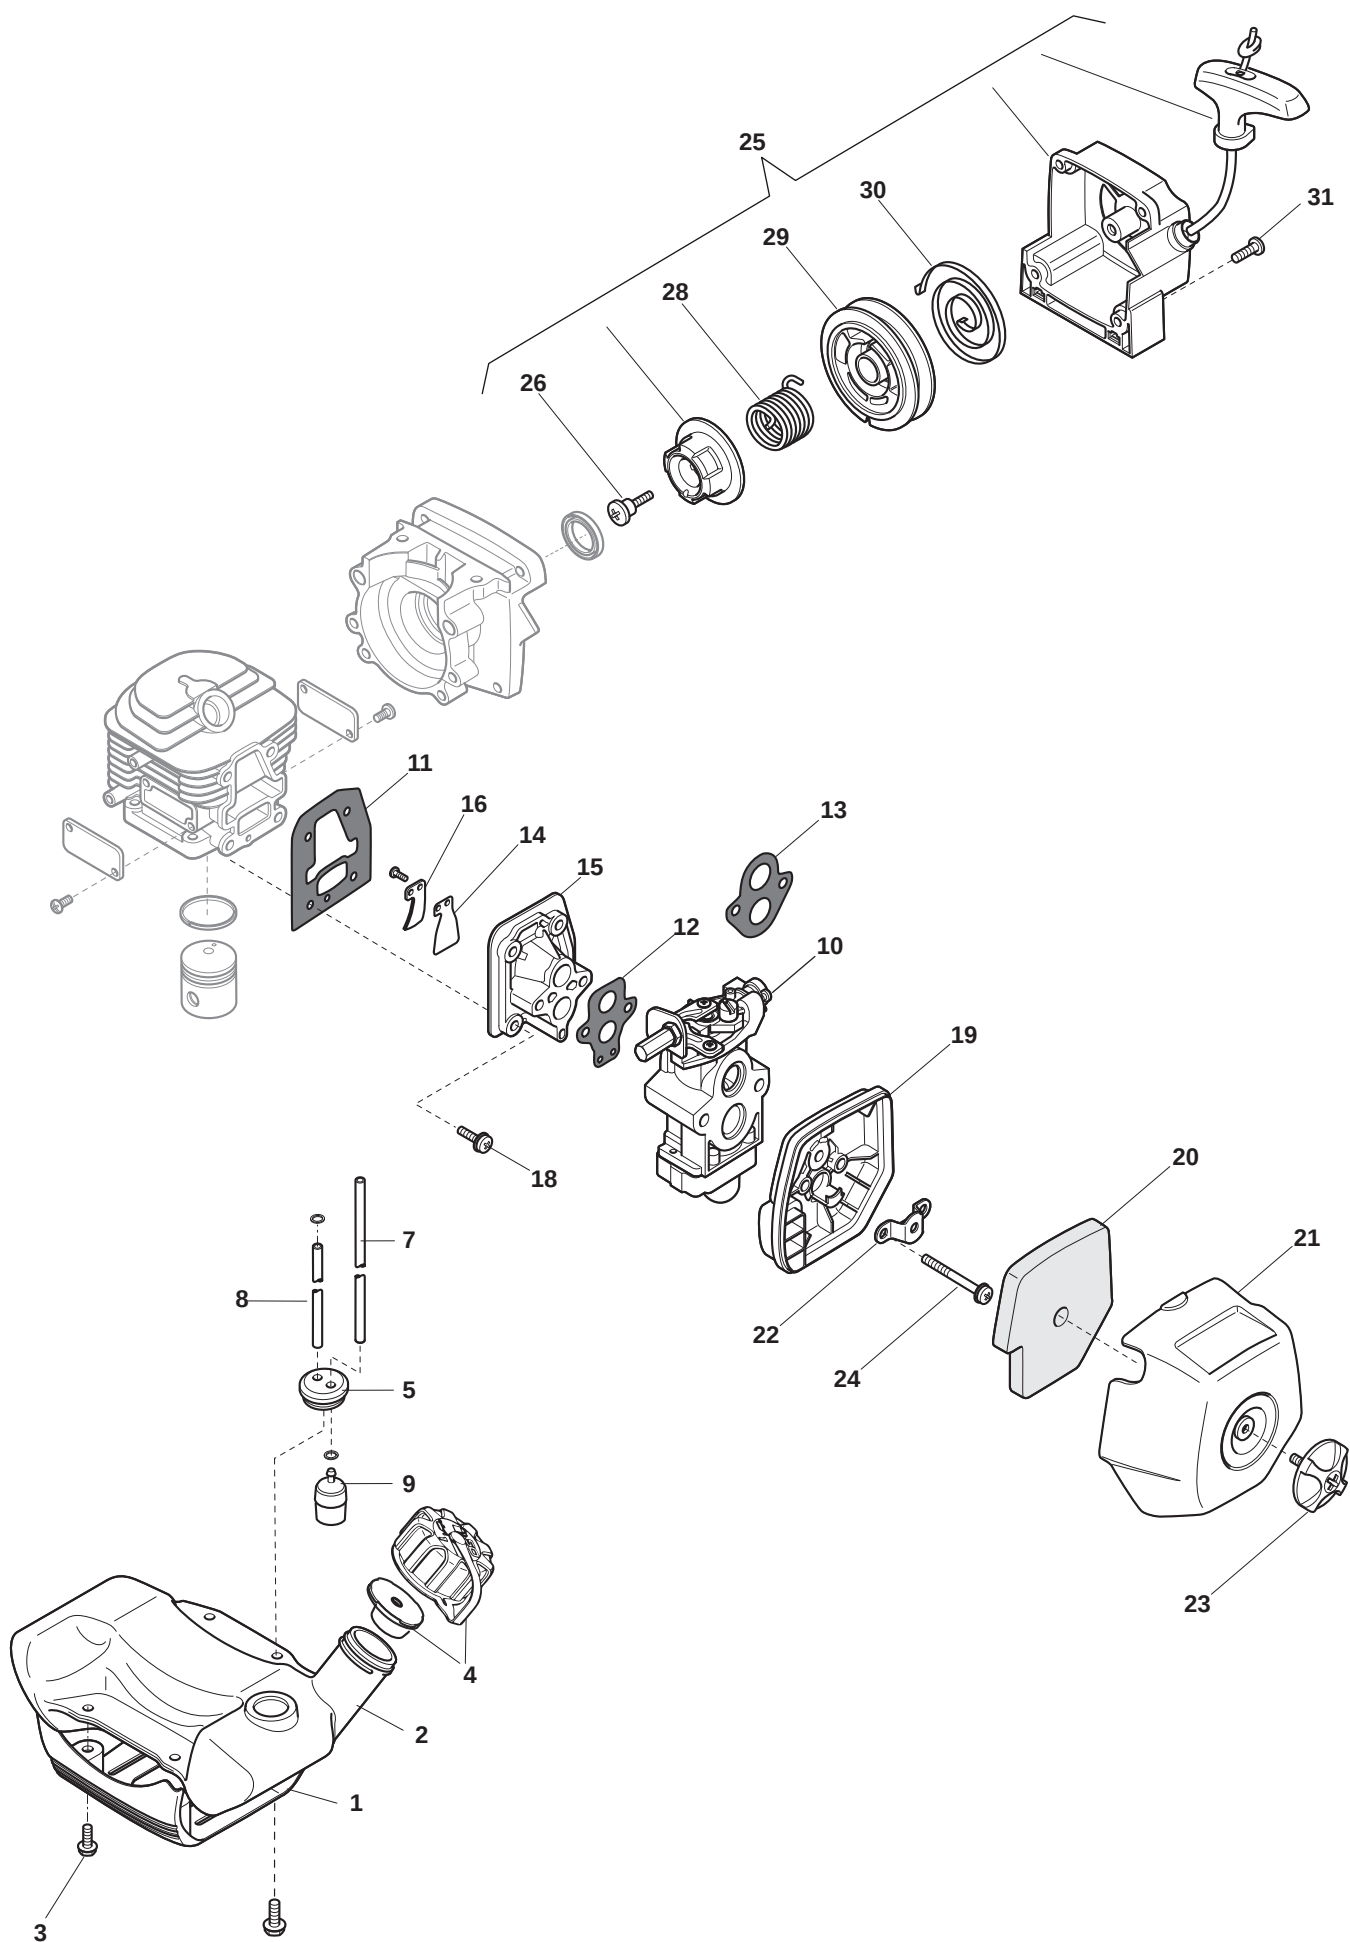


POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	118801857/0	1	Tank Support	
2	118801892/0	1	Tank	
3	2135030	4	Screw	
4	118801957/0	1	Oil Cap	
5	118801926/0	1	Grommet	
7	118801949/0	1	Fuel Line	
8	118801954/0	1	Tube	
9	183520004/0	1	Intake	
10	118801827/0	1	Carburettor	
11	118801973/0	1	Cylinder Gasket	
12	118801967/0	1	Carburetor Gasket	
13	118801971/0	1	Gasket	
14	118801791/0	1	Breather Valve Ass.Y	
15	118801832/0	1	Insulator	
16	118801854/0	1	Stopper	
18	2135060	4	Screw	
19	118801765/0	1	Air Cleaner Base	
20	118801769/0	1	Air Filter	
21	118801785/0	1	Yellow Filter Cover	
22	118801834/0	1	Deflector	
23	118801939/0	1	Screw	
24	2135250	2	Screw	
25	118801878/0	1	Starter Assy Black	
26	118801945/0	1	Screw	
28	118801998/0	1	Spring	
29	118801902/0	1	Starter Pulley	
30	118801937/0	1	Spring	
31	2135030	4	Screw	

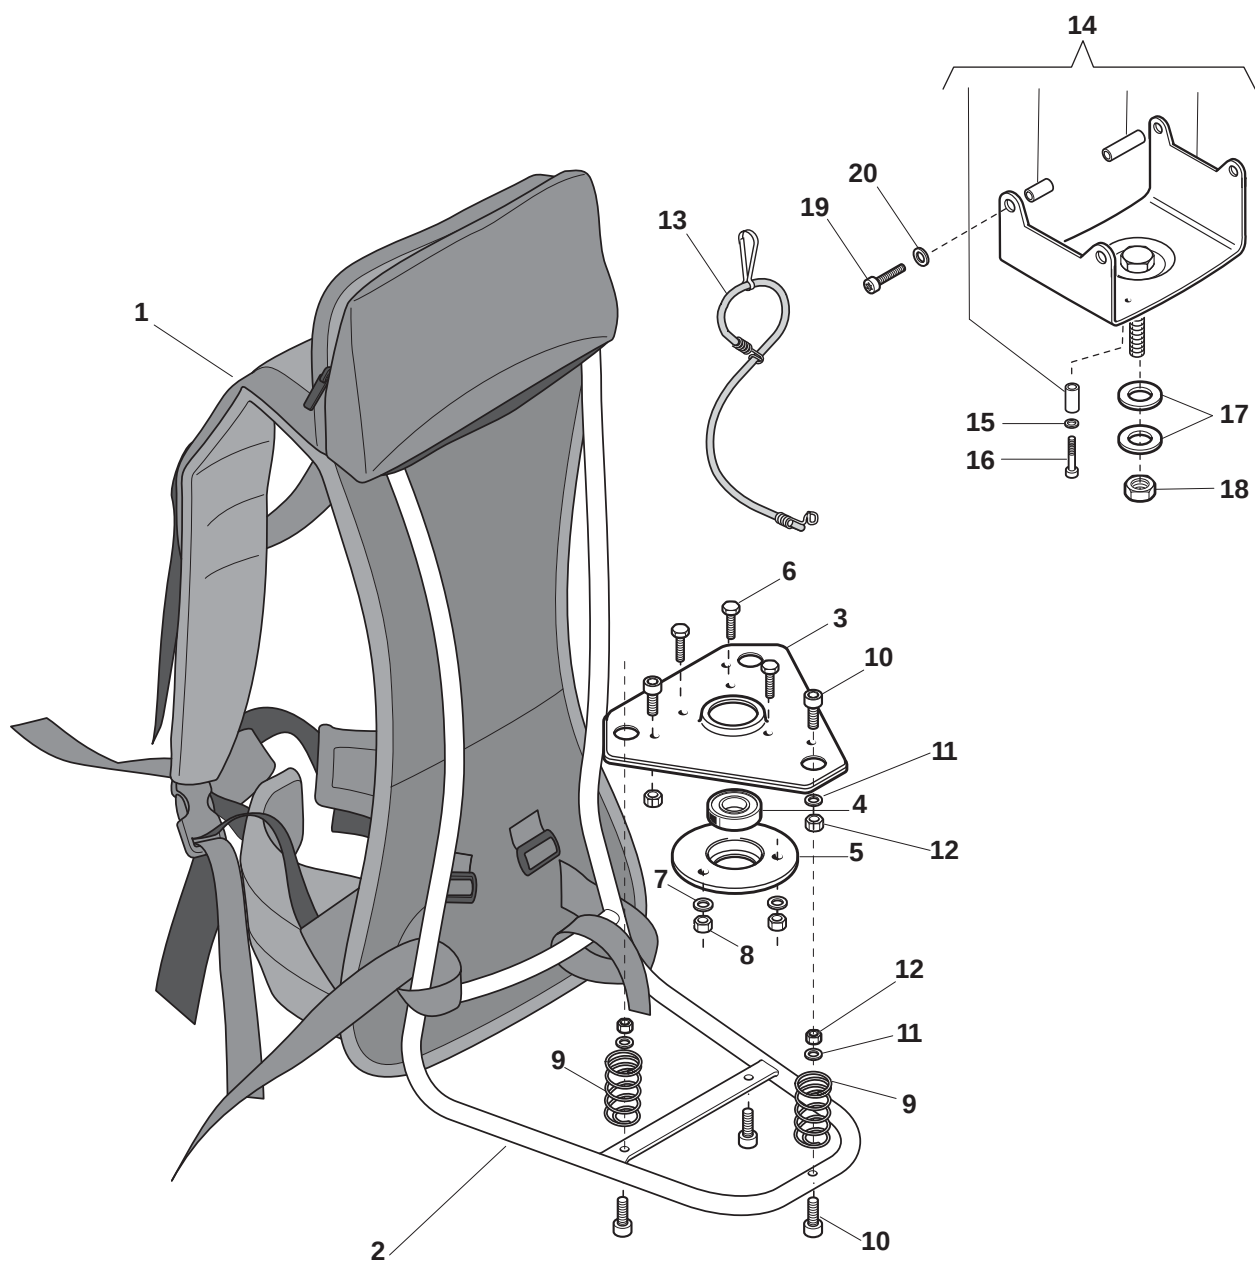

POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	123046003/0	1	Harness	
2	383801101/0	1	Knap Sack Frame Ass.Y	
3	4612280	1	Engine Support	
4	3112170	1	Ball Bearing	
5	4612020	1	Bearing Flange	
6	2112260	3	Screw	
7	2312090	3	Washer	
8	2432040	3	Nut	
9	3654360	3	Spring	
10	2132110	6	Screw	
11	2312130	6	Washer	
12	2432030	6	Nut	
13	4252430	1	Elastic Cord	
14	383990009/0	1	Engine Support	
15	2312090	2	Washer	
16	2135200	2	Screw	
17	2330060	2	Washer	
18	2412180	1	Nut	
19	2135200	2	Screw	
20	2312090	2	Washer	

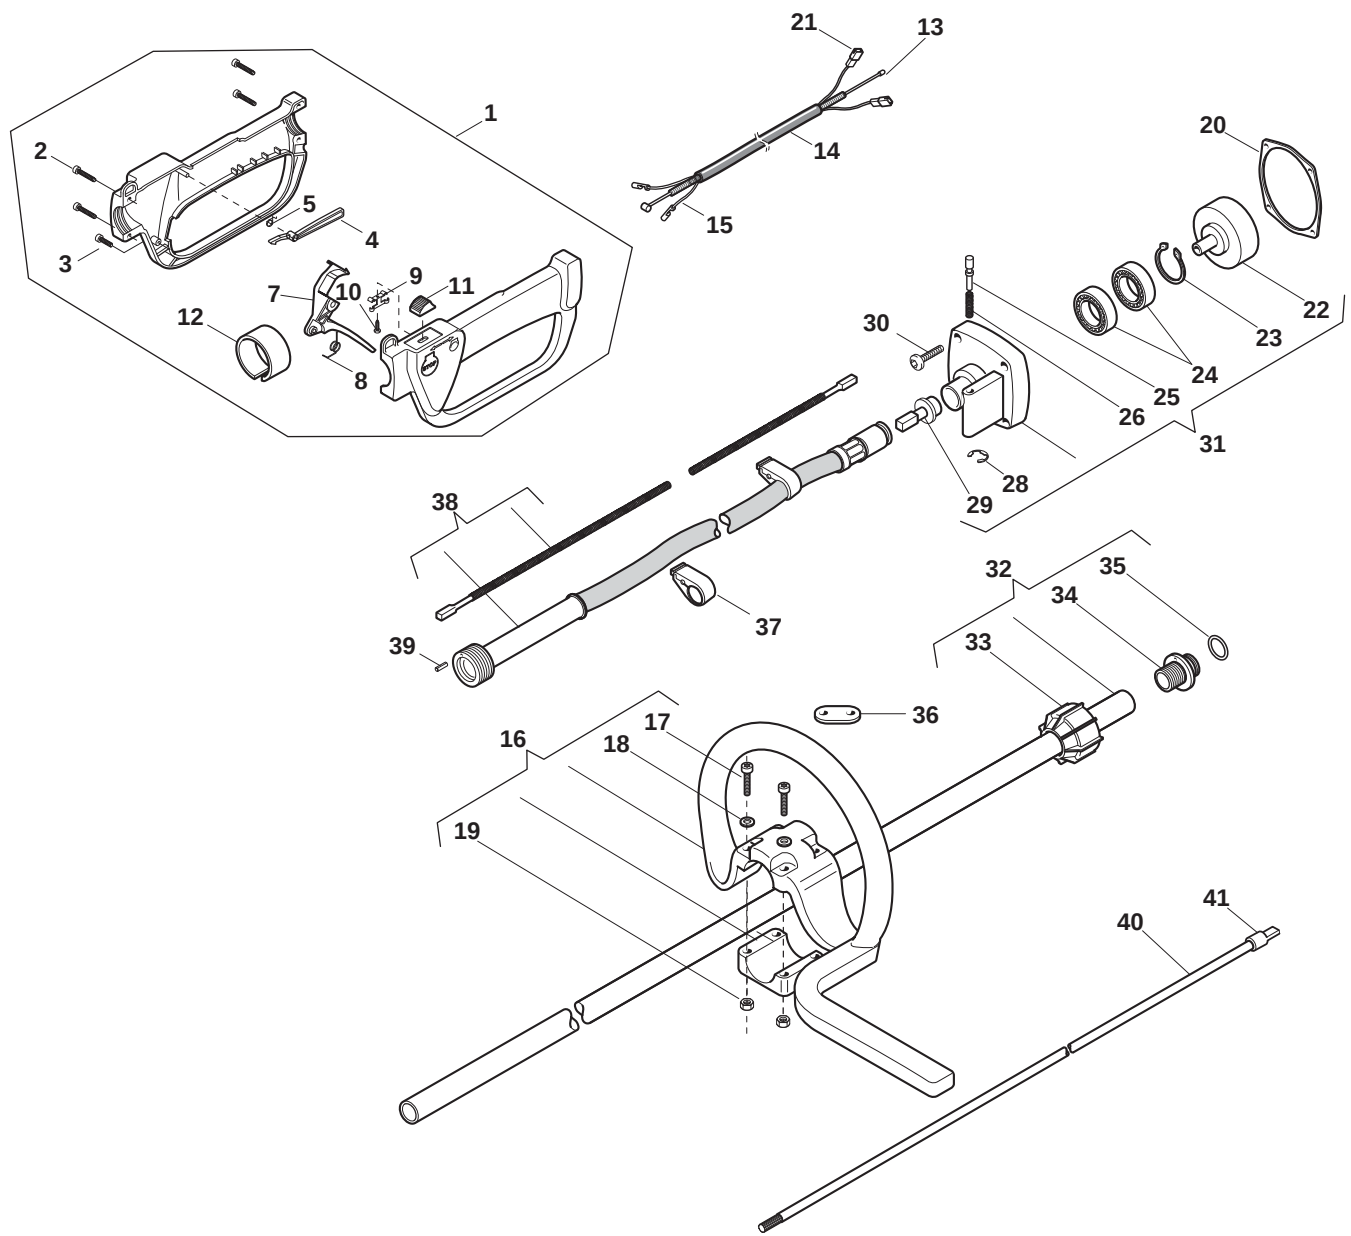

POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	3L8562620/1	1	Handle Assy	
2	2123030	4	Screw	
3	2123100	2	Screw	
4	3743475	1	Safety Lever	
5	3654300	1	Spring	
7	3743465	1	Throttle Lever	
8	1L3654270/1	1	Throttle Lever Spring	
9	3612710	1	Stop Plate	
10	2123070	1	Screw	
11	3749270	1	Stop Knob	
12	3750290	2	Reduction	
13	123066033/0	1	Wire Ass.Y	
14	5322280	1	Wire Sheath	
15	123065047/0	1	Spark Plug Cable	
16	8563600	1	Front Handgrip Assy	
17	2135050	4	Screw	
18	2312090	4	Washer	
19	2412030	4	Nut	
20	323208406/0	3	Flange	
21	123065039/0	1	Ground Terminal	
22	3L4121861/1	1	Clutch Drum Assy	
23	3353080	1	Ring	
24	3112170	2	Ball Bearing	
25	3642420	1	Pin	
26	3654170	1	Spring	
28	3351050	1	Circlip	
29	3642430	1	Hub	
30	2135160	2	Screw	
31	8540910	1	Support Transmission Assy	
32	4252390	1	Trasmission Pipe Ass.Y	
33	3750270	1	Plate For Handle Fixing	
34	3643220	1	Coupling	
35	3721540	1	Or Ring	
36	3614980	1	Handle-Hole For Elastic Cord	
37	3749310	1	Clip	
38	3L4122110/2	1	Flexible Shaft	
39	3314040	1	Centring Pin	
40	3642290	1	Flex Joint	
41	4630150	1	Trasmission Shaft	

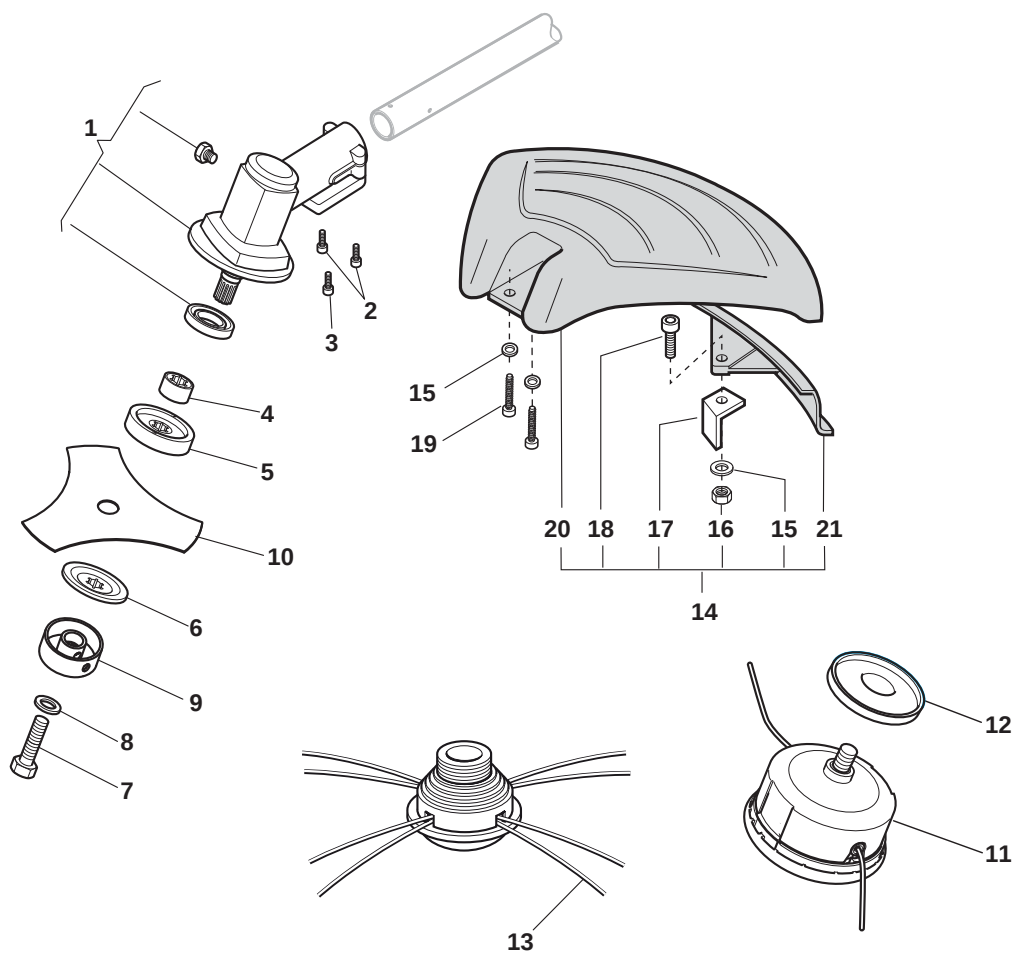

POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	3L4252790/1	1	Gear Case Assy	
2	2135050	2	Screw	
3	2653090	4	Screw	
4	1L3641700/1	1	Collar	
5	3641640	1	Upper Ring Nut	
6	3612640	1	Lower Ring Nut	
7	6810050	1	Screw	
8	2321060	1	Washer	
9	3615300	1	Stabilizer	
10	4611880	4	4 Teeth Disck	
11	383820508/0	1	2 Hedges Nylon Head	
12	3614950	2	Plate	
13	6031080	1	F8 Spool	Only 55cc
14	3L8563570/1	1	Safety Cover Ass.Y	
15	2312150	3	Washer	
16	2432040	1	Nut	
17	3615000	1	Line Cutter Blade	
18	2135030	1	Screw	
19	2135060	2	Screw	
20	3L4563577/1	1	Safety Cover	
21	3L4563580/1	1	Splash Guard Lower Protection	