

Genuine Spare Parts

www.stiga.com

SBK 53 F


- Use GLOBAL GARDEN PRODUCT Genuine Spare Parts specified in the parts list for repair and/or replacement.
- The contents described in the parts list may change due to improvement.
- The drawings of the spare parts are only indicative and might not represent the part in question exactly.
- The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair and/or replacement, make sure that the illustrated parts list is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.

© Copyright 2013 Global Garden Products


All content is subject to copyright by Global Garden Products and may not be reproduced in whole or in part by any means, electronic or otherwise, without prior written approval.

THIS INFORMATION IS NOT INTENDED FOR SALE OR RESALE, AND THIS NOTICE MUST REMAIN ON ALL COPIES.




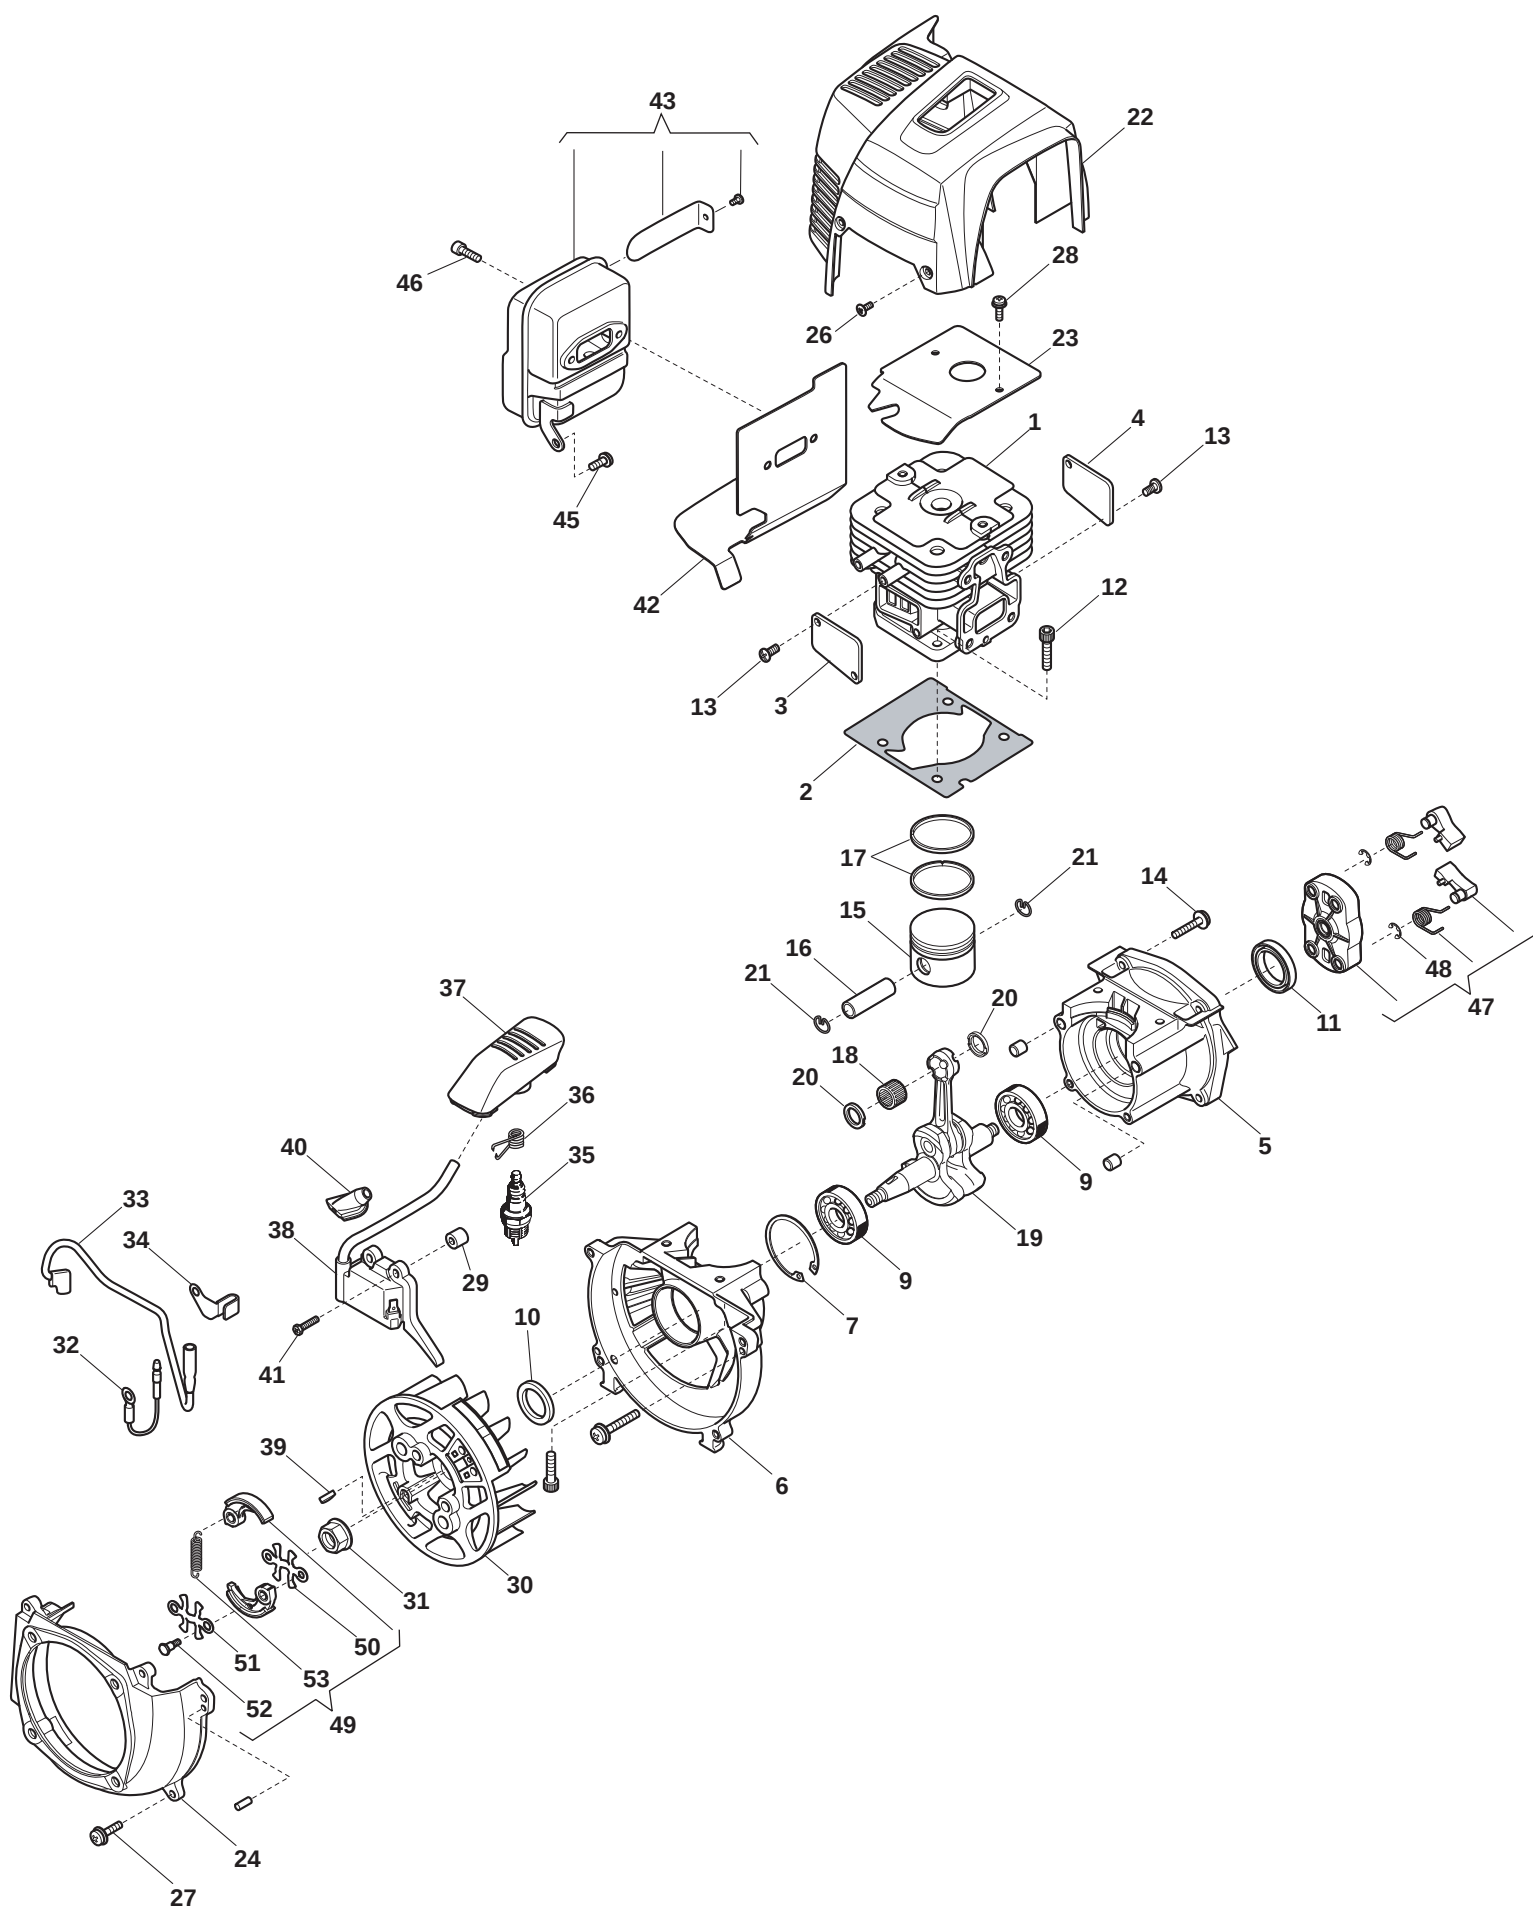


POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	118801960/0	1	Cylinder	
2	118801779/0	1	Cylinder Gasket	
3	118801818/0	1	Plate	
4	118801979/0	1	Plate	
5	118801823/0	1	Crankcase	
6	118801984/0	1	Crankcase	
7	118801915/0	1	Washer, Piston Pin	
9	118801919/0	2	Bearing	
10	118801923/0	1	Seal Ring	
11	118801995/0	1	Seal Ring	
12	118801940/0	4	Screw	
13	118801946/0	4	Screw	
14	2135120	4	Screw	
15	118801794/0	1	Piston	
16	118801799/0	1	Piston Pin	
17	118801804/0	1	Piston Ring	
18	118801808/0	1	Bearing	
19	118801888/0	1	Crankshaft	
20	118801910/0	2	Spacer	
21	118801916/0	2	Washer, Piston Pin	
22	118802007/0	1	Cylinder Cover Yellow	
23	118801992/0	1	Cylinder Plate	
24	118801898/0	1	Housing	
26	123878020/0	2	Screw	
27	2135040	4	Screw	
28	2135180	2	Screw	
29	118801831/0	2	Insulator	
30	118801840/0	1	Flywheed	
31	123120005/0	1	Nut	
32	118801852/0	1	Earth Cable	
33	118801987/0	1	Coil-Switch Cable	
34	118801948/0	1	Clamp	
35	3210024	1	Spark Plug	
36	3657050	1	Terminal	
37	118801844/0	1	Spark Plug Cover	
38	118801849/0	1	Electronic Coil	
39	3151050	1	Flywheel Key	
40	118801927/0	1	Grommet	
41	2132510	2	Screw	
42	118801780/0	1	Muffler Gasket	
43	118801874/0	1	Muffler	
45	2135010	1	Screw	
46	2135040	2	Screw	
47	118801871/0	1	Starter Pulley	
48	118801912/0	2	Snap Ring	
49	118801977/0	1	Clutch Ass.Y	
50	118801813/0	1	Plate	
51	118801978/0	1	Plate	
52	118801918/0	2	Pin	
53	118801933/0	1	Spring	

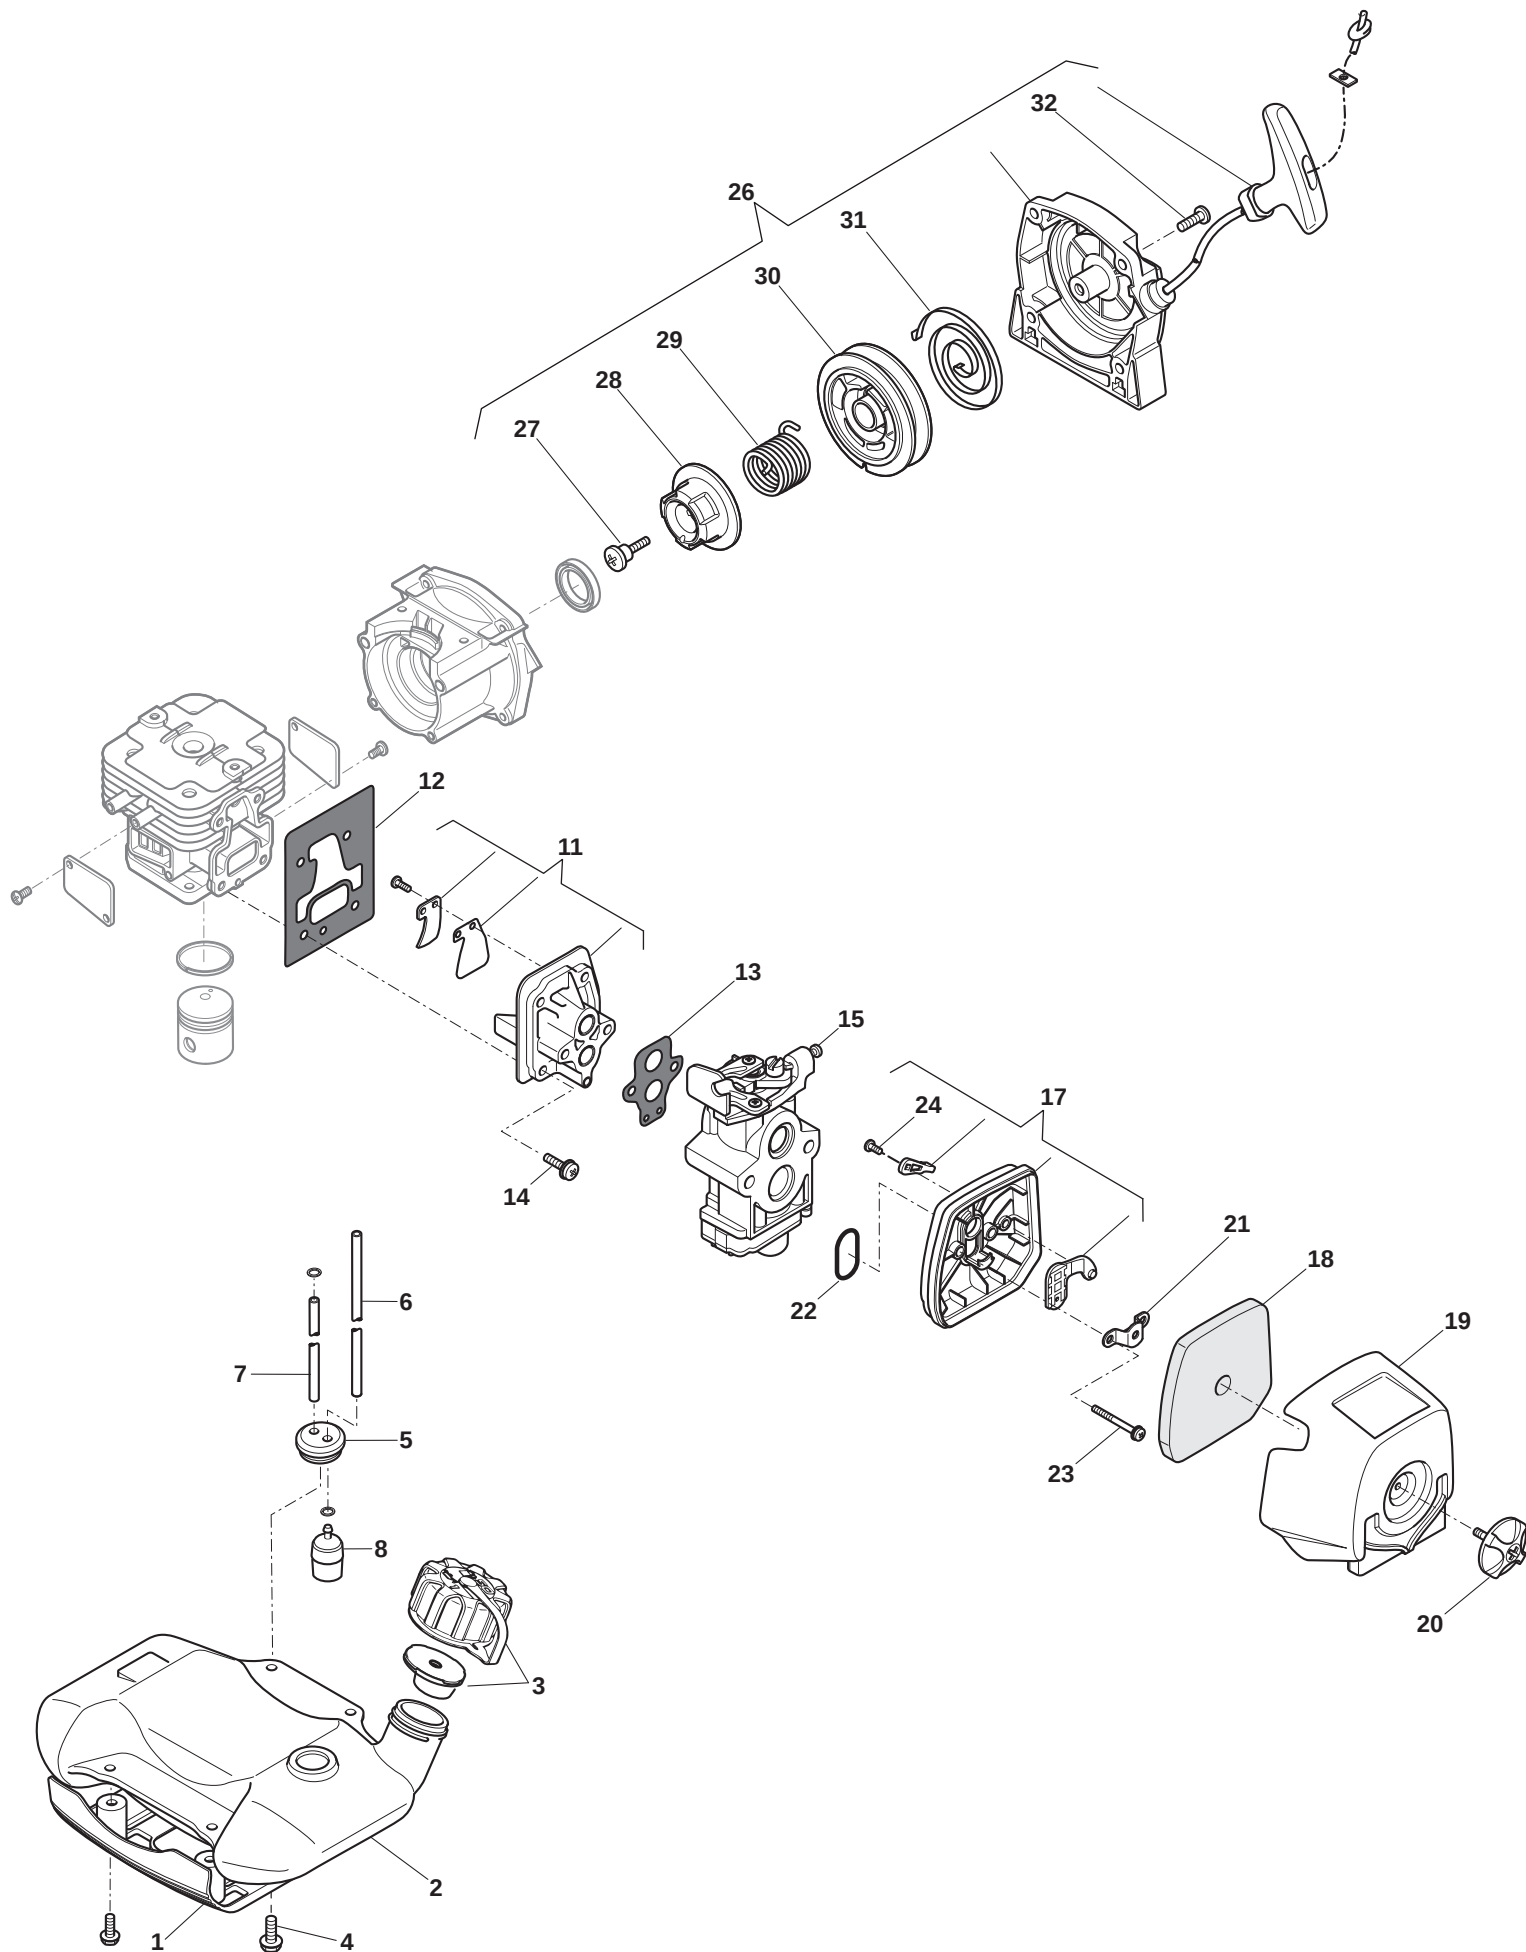


POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	118801858/0	1	Tank Support	
2	118801893/0	1	Tank	
3	118801894/0	1	Oil Cap	
4	2135030	4	Screw	
5	118801925/0	1	Grommet	
6	118801949/0	1	Fuel Line	
7	118802000/0	1	Tube	
8	183520004/0	1	Intake	
11	118801790/0	1	Breather Valve Ass.Y	
12	118801781/0	1	Cylinder Gasket	
13	118801972/0	1	Carburetor Gasket	
14	2135060	4	Screw	
15	118801828/0	1	Carburettor	
17	118801770/0	1	Air Cleaner Base	
18	118801963/0	1	Air Filter	
19	118801786/0	1	Yellow Filter Cover	
20	118801941/0	1	Screw	
21	118801835/0	1	Deflector	
22	118801924/0	1	Or Ring	
23	2135250	2	Screw	
24	112727810/0	1	Screw	
26	118801879/0	1	Starter Assy Black	
27	118801947/0	1	Screw	
28	118801866/0	1	Cam	
29	118801997/0	1	Spring	
30	118801903/0	1	Starter Pulley	
31	118801938/0	1	Starter Spring	
32	2132180	4	Screw	

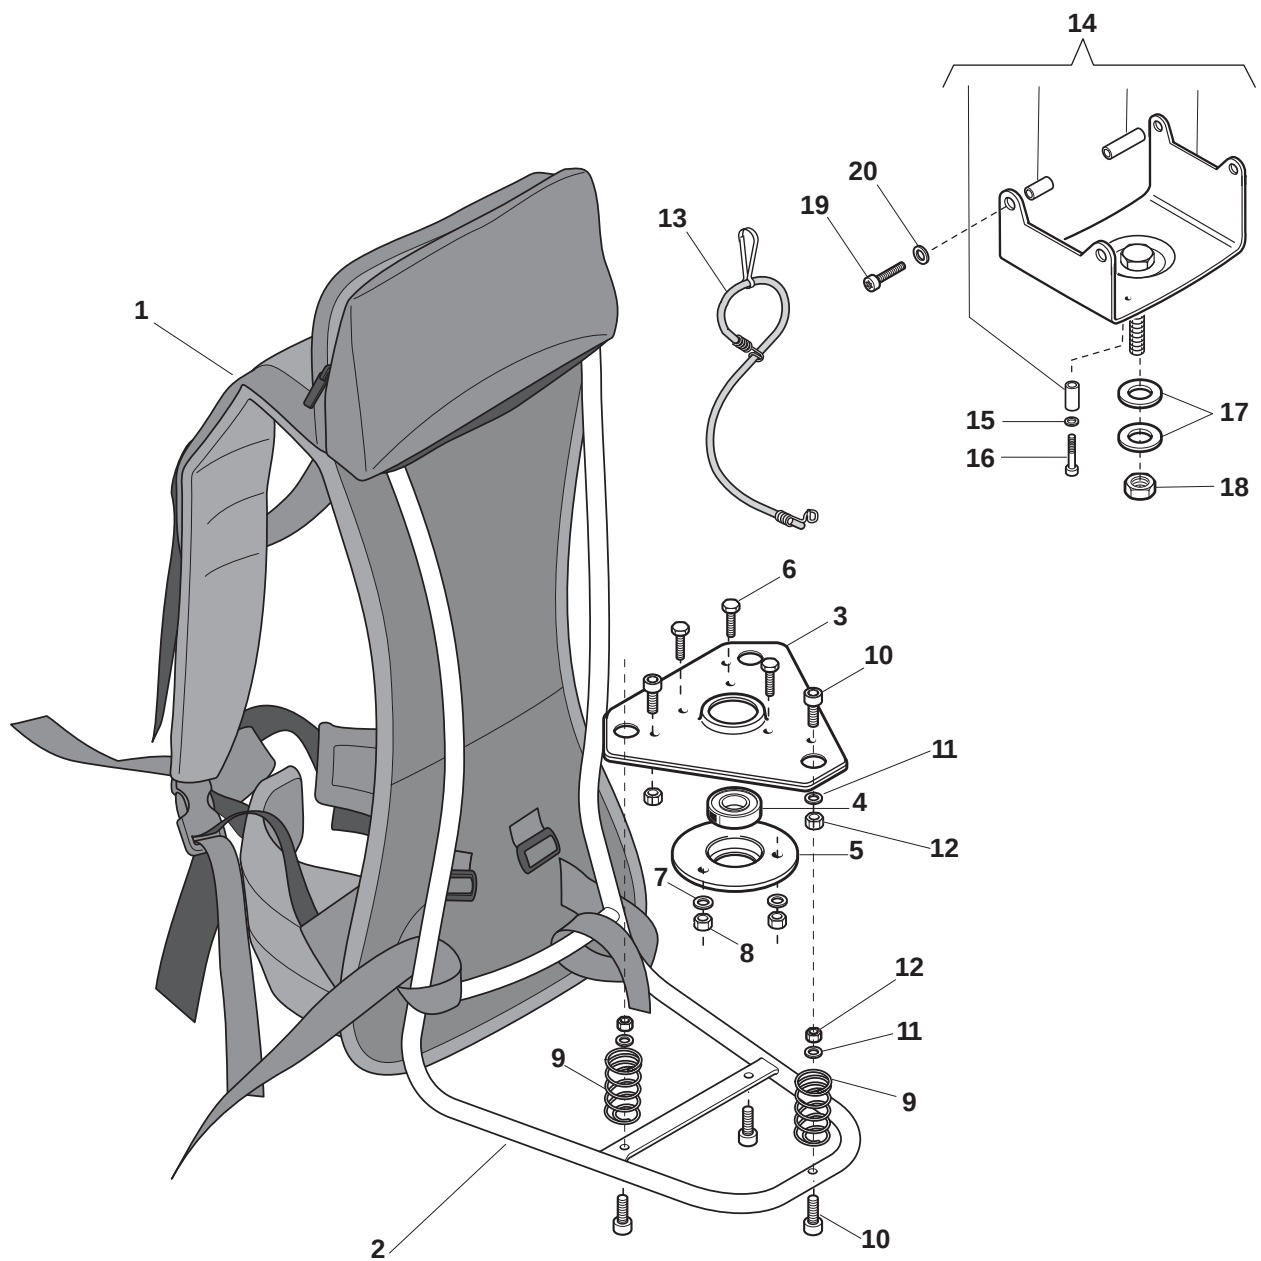

POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	123046003/0	1	Harness	
2	383801101/0	1	Knap Sack Frame Ass.Y	
3	4612280	1	Engine Support	
4	3112170	1	Ball Bearing	
5	4612020	1	Bearing Flange	
6	2112260	3	Screw	
7	2312090	3	Washer	
8	2432040	3	Nut	
9	3654360	3	Spring	
10	2132110	6	Screw	
11	2312130	6	Washer	
12	2432030	6	Nut	
13	4252430	1	Elastic Cord	
14	383990010/0	1	Engine Support	
15	2312090	2	Washer	
16	2135250	2	Screw	
17	2330060	2	Washer	
18	2412180	1	Nut	
19	2135200	2	Screw	
20	2312090	2	Washer	

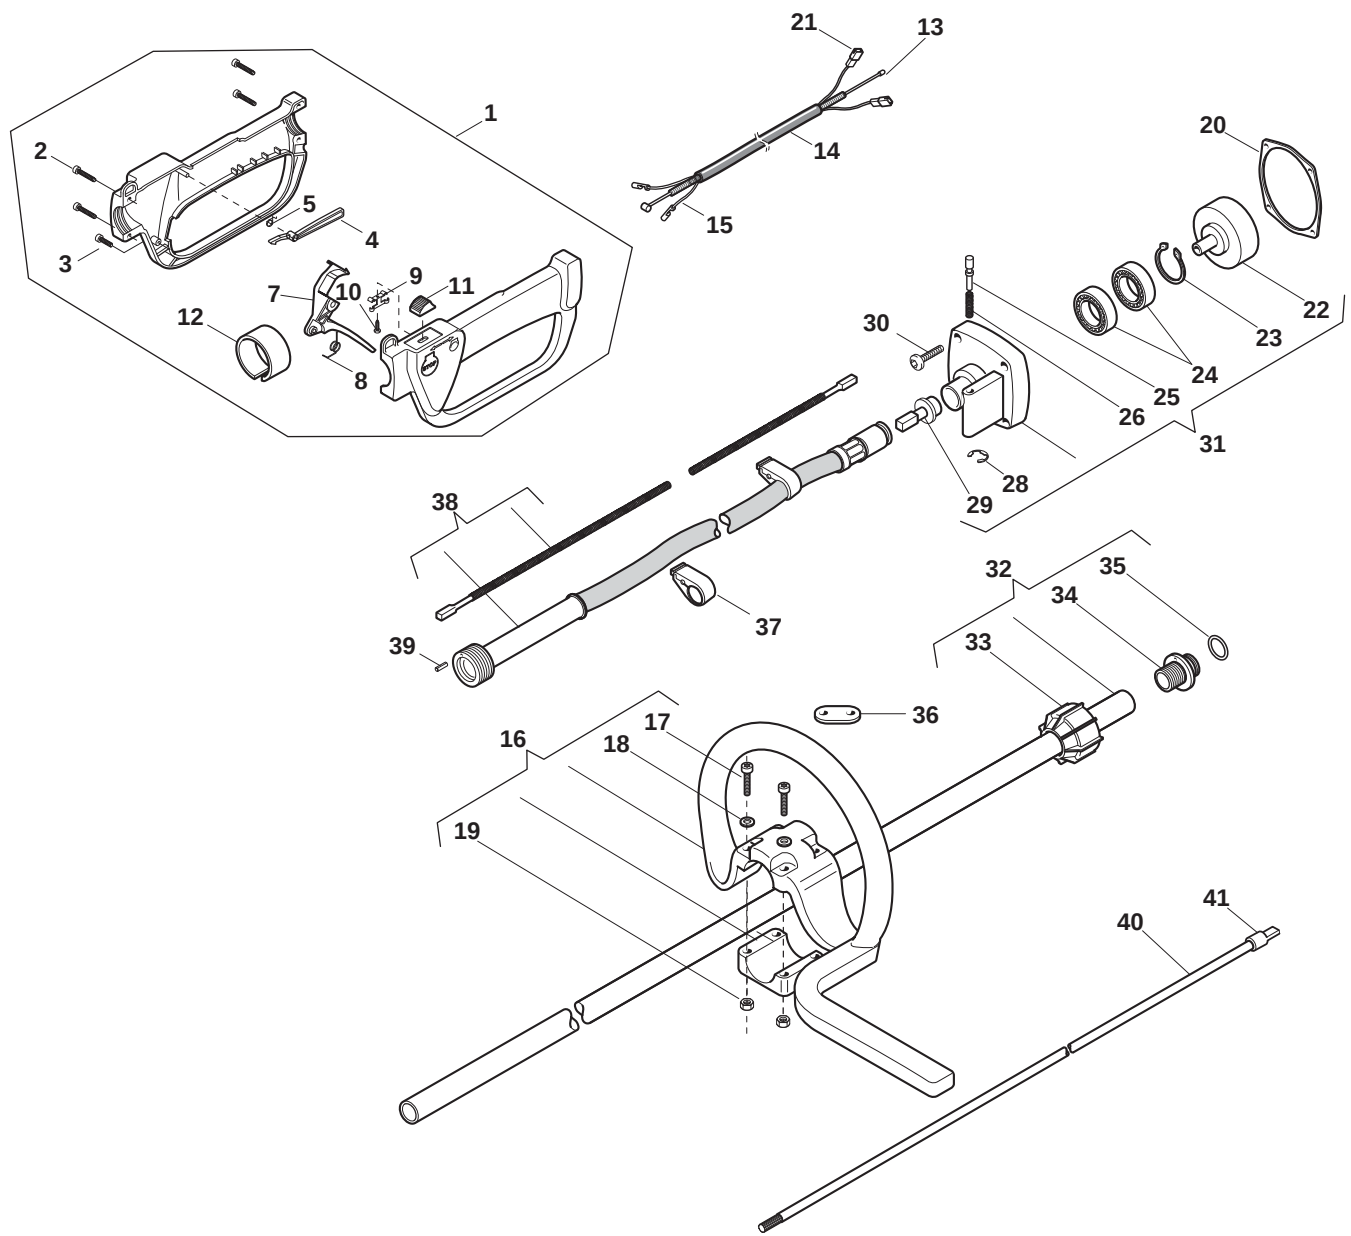

POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	3L8562620/1	1	Handle Assy	
2	2123030	4	Screw	
3	2123100	2	Screw	
4	3743475	1	Safety Lever	
5	3654300	1	Spring	
7	3743465	1	Throttle Lever	
8	1L3654270/1	1	Throttle Lever Spring	
9	3612710	1	Stop Plate	
10	2123070	1	Screw	
11	3749270	1	Stop Knob	
12	3750290	2	Reduction	
13	123066033/0	1	Wire Ass.Y	
14	5322280	1	Wire Sheath	
15	123065047/0	1	Spark Plug Cable	
16	8563600	1	Front Handgrip Assy	
17	2135050	4	Screw	
18	2312090	4	Washer	
19	2412030	4	Nut	
20	323208406/0	3	Flange	
21	123065039/0	1	Ground Terminal	
22	3L4121861/1	1	Clutch Drum Assy	
23	3353080	1	Ring	
24	3112170	2	Ball Bearing	
25	3642420	1	Pin	
26	3654170	1	Spring	
28	3351050	1	Circlip	
29	3642430	1	Hub	
30	2135160	2	Screw	
31	8540910	1	Support Transmission Assy	
32	4252390	1	Trasmission Pipe Ass.Y	
33	3750270	1	Plate For Handle Fixing	
34	3643220	1	Coupling	
35	3721540	1	Or Ring	
36	3614980	1	Handle-Hole For Elastic Cord	
37	3749310	1	Clip	
38	3L4122110/2	1	Flexible Shaft	
39	3314040	1	Centring Pin	
40	3642290	1	Flex Joint	
41	4630150	1	Trasmission Shaft	

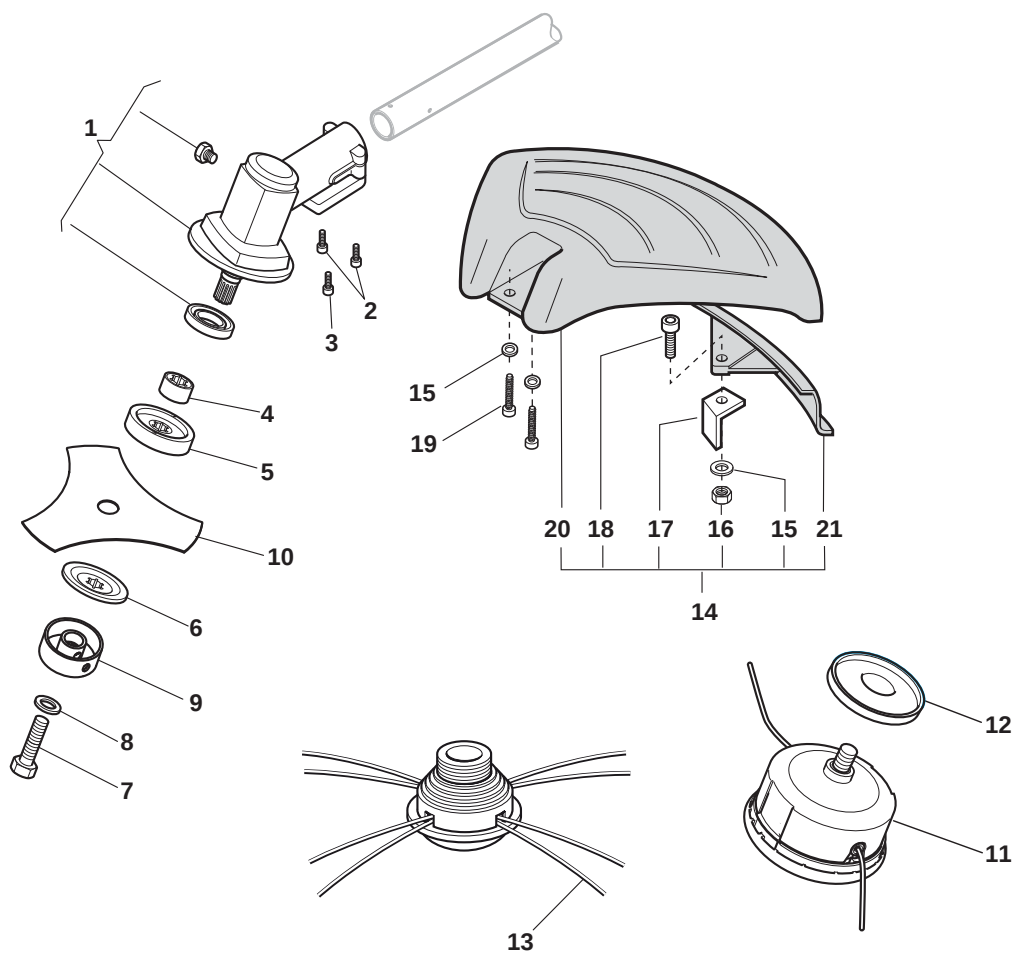

POSITION	PART No.	Q.Ty	DESCRIPTION	NOTES
1	3L4252790/1	1	Gear Case Assy	
2	2135050	2	Screw	
3	2653090	4	Screw	
4	1L3641700/1	1	Collar	
5	3641640	1	Upper Ring Nut	
6	3612640	1	Lower Ring Nut	
7	6810050	1	Screw	
8	2321060	1	Washer	Only 45cc model
9	3615300	1	Stabilizer	Only 45cc model
10	123155010/0	1	3 Teeth Disc	Only 45cc model
10	4611880	1	4 Teeth Disc	
11	383820508/0	1	2 Hedges Nylon Head	
12	3614950	2	Plate	
13	6031080	1	F8 Spool	
14	3L8563570/1	1	Safety Cover Ass.Y	
15	2312150	3	Washer	
16	2432040	1	Nut	
17	3615000	1	Line Cutter Blade	
18	2135030	1	Screw	
19	2135060	2	Screw	
20	3L4563577/1	1	Safety Cover	
21	3L4563580/1	1	Splash Guard Lower Protection	