

# Genuine Spare Parts

www.stiga.com

## VILLA (Manual Gear) Model Year 2011/2012

includes:

- 13-2717-15 Villa 12
- 13-2717-35 Villa 12 (FR)
- 13-2717-55 Villa 105
- 13-2714-75 Villa Classic Green line









- Use GLOBAL GARDEN PRODUCT Genuine Spare Parts specified in the parts list for repair and/or replacement.
- The contents described in the parts list may change due to improvement.
- The drawings of the spare parts are only indicative and might not represent the part in question exactly.
- The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair and/or replacement, make sure that the illustrated parts list is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.

COPYRIGHT by GLOBAL GARDEN PRODUCTS

All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from GLOBAL GARDEN PRODUCTS.




21

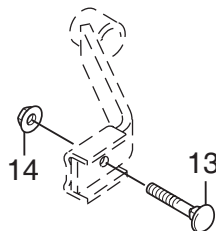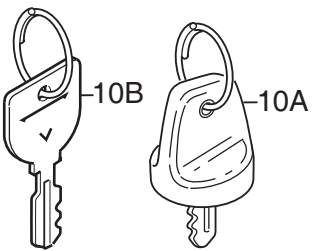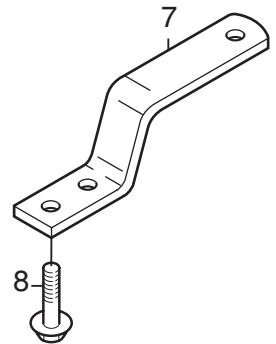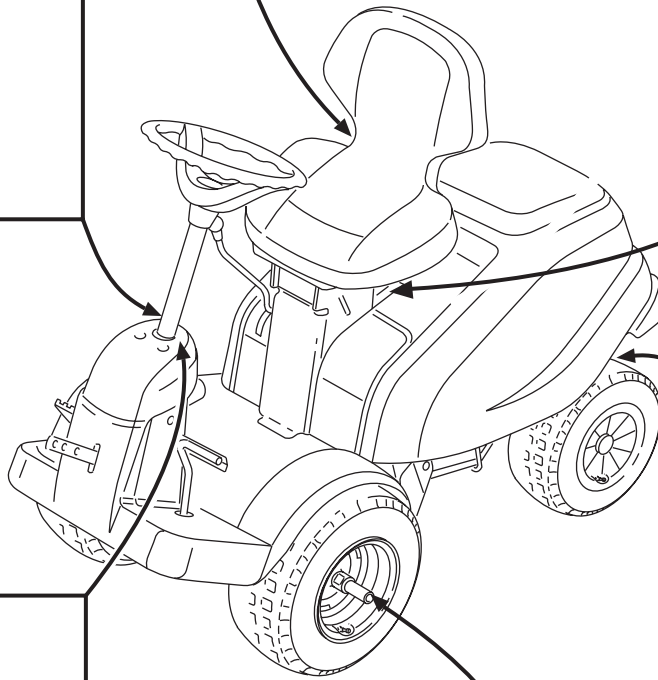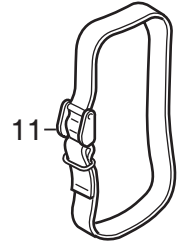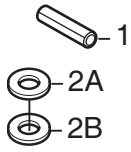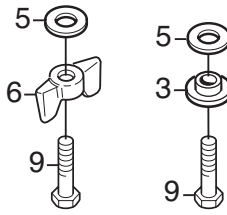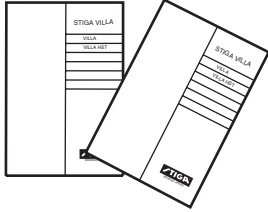


12


(x 2)

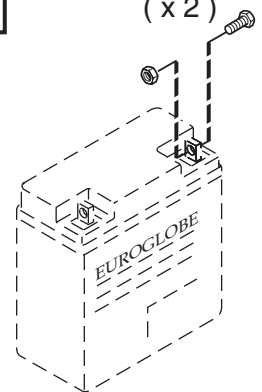


Utgåva Issue		Bildnr Picture No		VILLA MONTERINGSDETALJER		VILLA ASSEMBLY PARTS		Sida Page	
2011-11		2196A						260	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2717 -15 -55	2717 -35							
1	1	1		9595-0262-00	Spännstift .....	Locating pin .....			
2A	1	1		9699-0103-02	Shims .....	Flat washer .....		0.5 mm	
2B	1	1		9699-0114-02	Shims .....	Flat washer .....		1.0 mm	
3	2	2		1134-4185-01	Ansatsbricka .....	Flange washer .....			
5	4	4		9699-0056-02	Planbricka .....	Flat washer .....			
6	2	2		1134-4481-01	Vingmutter .....	Wing nut .....			
7	1	1		1134-4627-01	Dragögla .....	Tow bar .....			
8	2	2		9959-0820-16	Skruv .....	Screw .....			
9	4	4		9997-0820-16	Skruv .....	Screw .....			
10A	1	1		1134-4734-01	Tändningsnyckel .....	Ignition key .....			
10B	1	1		1134-6125-01	Tändningsnyckel .....	Ignition key .....			
11	1	1		1134-5245-01	Batterirem .....	Battery strap .....			
12	1	1		1134-6113-01	Batteriskruvar .....	Battery screws .....			
13	2	2		9898-1035-16	Skruv .....	Screw .....			
14	2	2		9739-1031-22	Mutter .....	Nut .....			
X X X X X X	21	1		8211-0011-10	Bruksanvisning .....	Owner's manual .....			
	21	1		8211-0049-10	Bruksanvisning .....	Owner's manual .....		France	
	21	1		8211-0603-10	Monteringsanvisning .....	Assy instructions .....			
	21	1		8211-0701-10	Säkerhetsföreskrifter .....	Safety regulations .....			
	21	1	1	8211-0960-10	Garantikort .....	Warranty card .....			

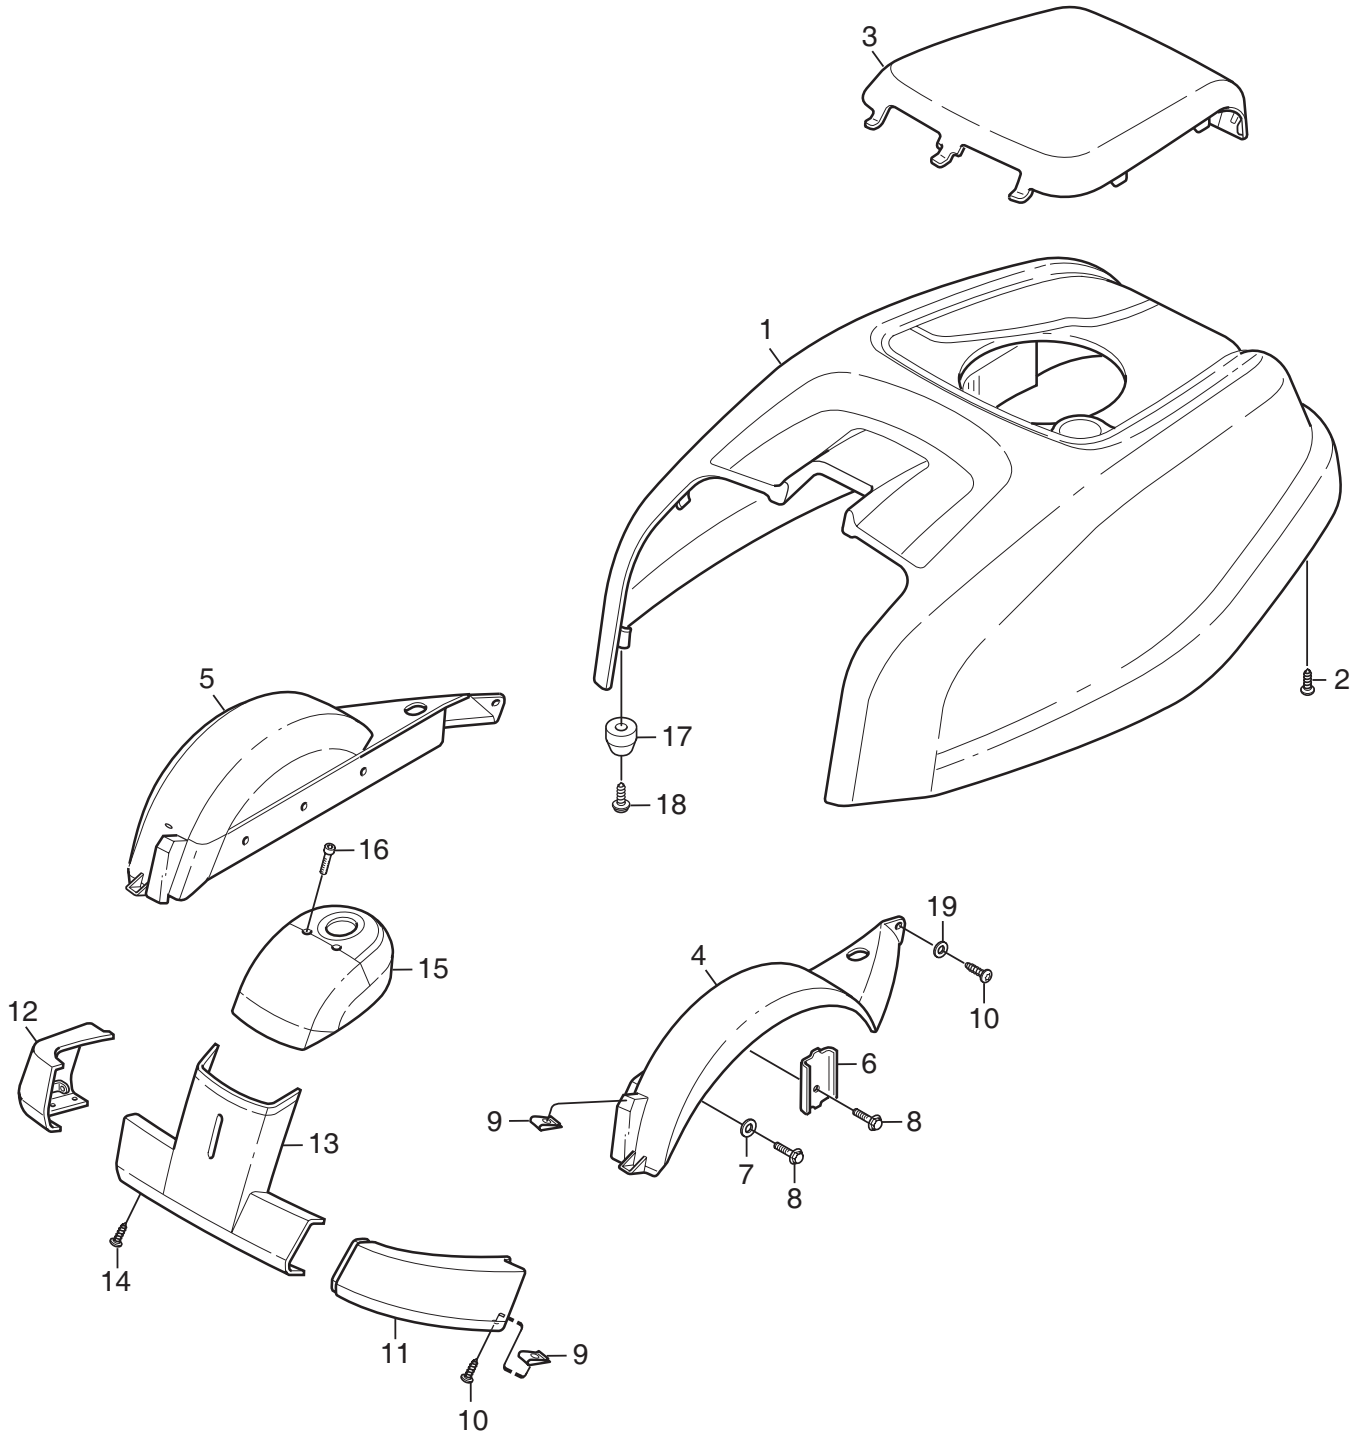

Utgåva Issue		Bildnr Picture No		VILLA KAROSS		VILLA BODY WORK		Sida Page	
2011-11		1641A						262	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
1	1				1134-5283-02	Motorhuv- gul .....	Engine hood- yellow .....		
2	7				9838-9530-12	Skruv .....	Screw .....		
3	1				1134-5284-02	Motorlucka- grå .....	Engine cover- grey .....		
4	1				1134-5307-01	Stänkskärm- vä, grå .....	Mud guard- LH, grey .....		
5	1				1134-5307-02	Stänkskärm- hö, grå .....	Mud guard- RH, grey .....		
6	2				1137-0088-01	Stödplåt .....	Support plate .....		
7	4				9699-0056-02	Planbricka .....	Flat washer .....		
8	6				9945-0816-16	Skruv .....	Screw .....		
9	4				1134-4176-01	Clips .....	Clips .....		
10	4				9893-0616-16	Skruv .....	Screw .....		
11	1				1134-5306-01	Stötfångare, front- vä .....	Bumper, front- LH .....		
12	1				1134-5306-02	Stötfångare, front- hö .....	Bumper, front- RH .....		
13	1				1134-5305-01	Front- nedre .....	Front plate- lower .....		
14	6				9893-0616-16	Skruv .....	Screw .....		
15	1				1134-5304-01	Front- övre .....	Front- upper .....		
16	2				9946-0525-16	Skruv .....	Screw .....		
17	2				1134-4790-02	Styrning .....	Hood guide .....		
18	2				9838-9530-12	Skruv .....	Screw .....		
19	2				9699-0060-02	Planbricka .....	Flat washer .....		
99	1				1134-6426-01	Dekalsats .....	Label kit .....		Villa 12


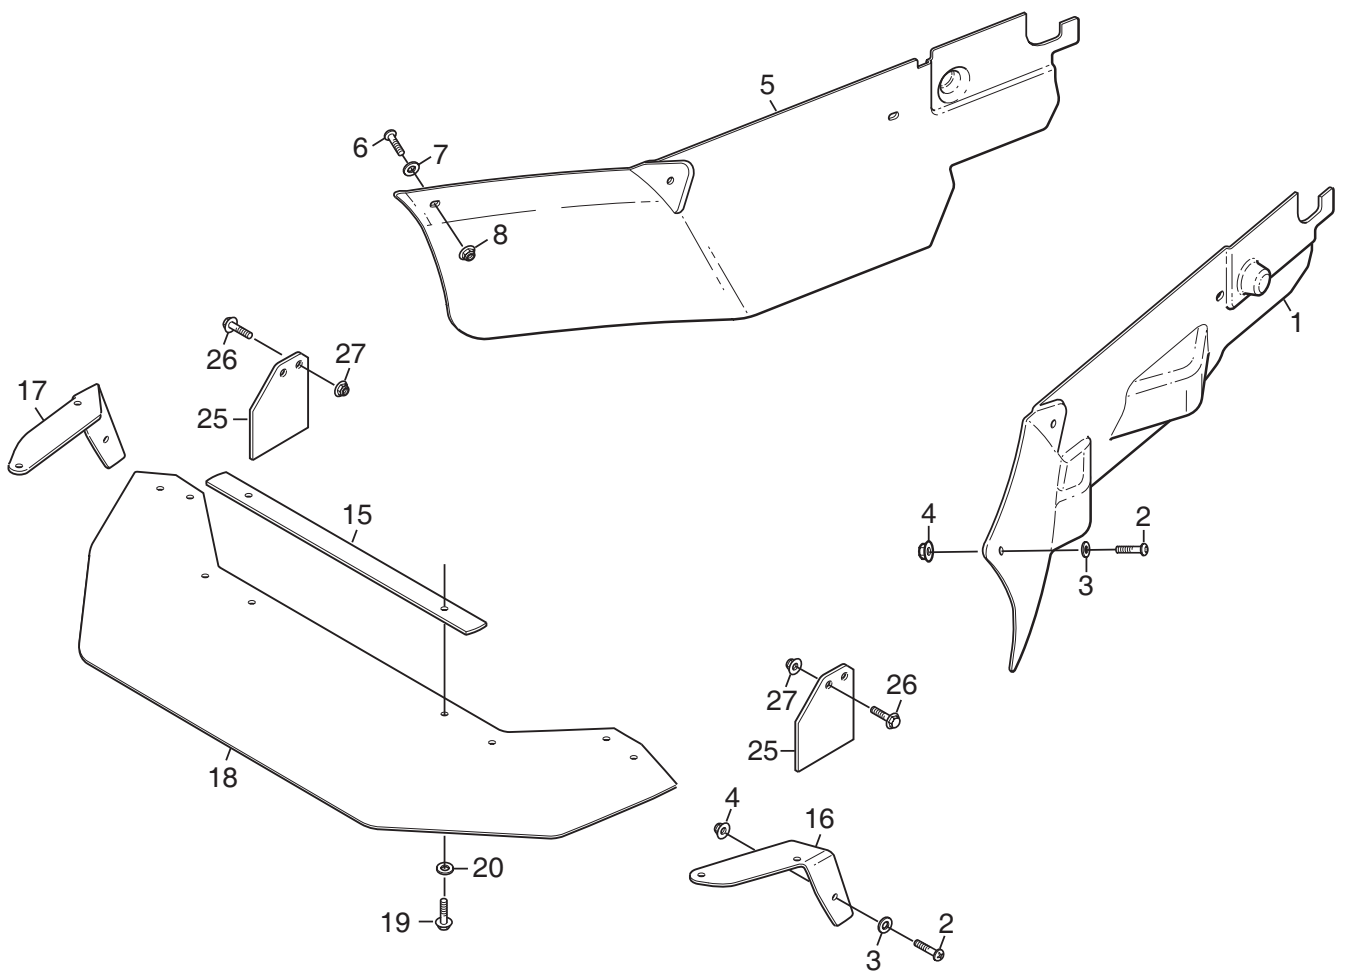


Utgåva Issue 2011-11		Bildnr Picture No 2819		VILLA KAROSS (Frankrike)		VILLA BODY WORK (France)		Sida Page 264	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717 -35								
X	1	1			1137-0226-02	Sidoskydd-vä .....	Side guard- LH .....		
	2	2			9893-0616-16	Skruv .....	Screw .....		
	3	2			9699-0060-02	Planbricka .....	Flat washer .....		
	4	2			9739-0631-22	Mutter .....	Nut .....		
X	5	1			1137-0248-02	Sidoskydd-hö .....	Side guard- RH .....		
	6	2			9893-0616-16	Skruv .....	Screw .....		
	7	2			9699-0060-02	Planbricka .....	Flat washer .....		
	8	2			9739-0631-22	Mutter .....	Nut .....		
X	15	1			1137-0229-01	Fäste .....	Bracket .....		
X	16	1			1137-0230-01	Fäste-vä .....	Bracket- LH .....		
X	17	1			1137-0230-02	Fäste-hö .....	Bracket- RH .....		
X	18	1			1137-0228-02	Gummiduk .....	Rubber sheet .....		
	19	2			9959-0620-16	Skruv .....	Screw .....		
	20	2			9699-0060-02	Planbricka .....	Flat washer .....		
X	25	2			1137-0231-01	Skydd .....	Guard .....		
	26	2			9959-0820-16	Skruv .....	Screw .....		
	27	2			9739-0831-22	Mutter .....	Nut .....		

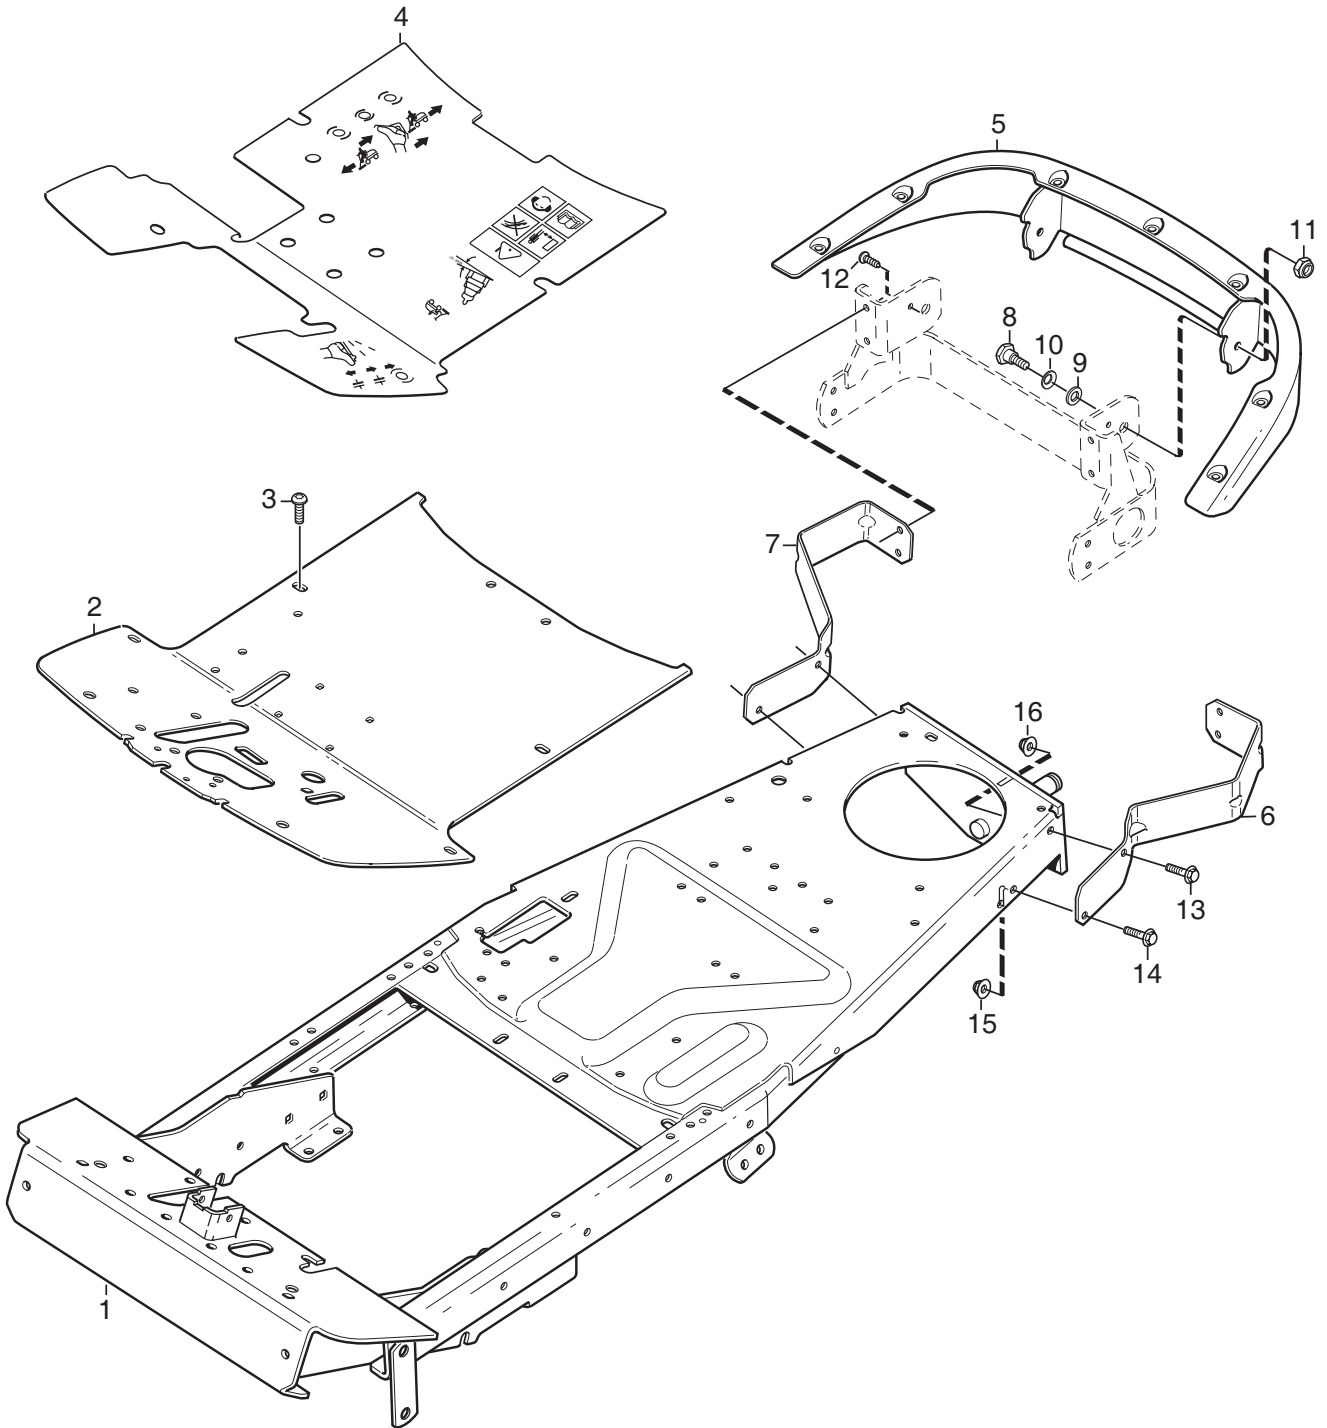





Utgåva Issue		Bildnr Picture No		VILLA RAM		VILLA FRAME		Sida Page	
2011-11		1642B						266	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
1	1				1134-6635-01 Ram.....	Frame.....			
2	1				1134-5293-01 Durk.....	Floor plate.....			
3	2				9893-0616-16 Skruv.....	Screw.....			
4	1				1134-5338-03 Durkmatta.....	Floor mat.....			
5	1				1134-5453-03 Stötfångare- bak, grå.....	Bumper- rear, grey.....			
6	1				1134-6630-01 Stag- vä.....	Attachment- LH.....			
7	1				1134-6630-02 Stag- hö.....	Attachment- RH.....			
8	2				1134-0240-00 Ansatskruv.....	Shoulder screw.....			
9	2				1134-4242-01 Distansbricka.....	Spacer washer.....			
10	2				9694-0001-00 Fjäderbricka.....	Washer.....			
11	2				9747-0831-02 Mutter.....	Lock nut.....			
12	2				9943-0516-16 Skruv.....	Screw.....			
13	2				9959-0820-16 Skruv.....	Screw.....			L = 20 mm
14	2				9959-0825-16 Skruv.....	Screw.....			L = 25 mm
15	1				9739-0831-22 Mutter.....	Nut.....			
16	3				9739-0831-22 Mutter.....	Nut.....			

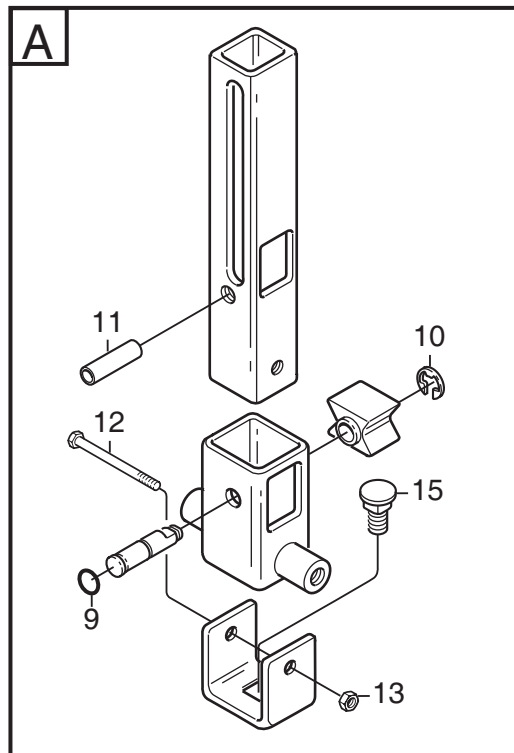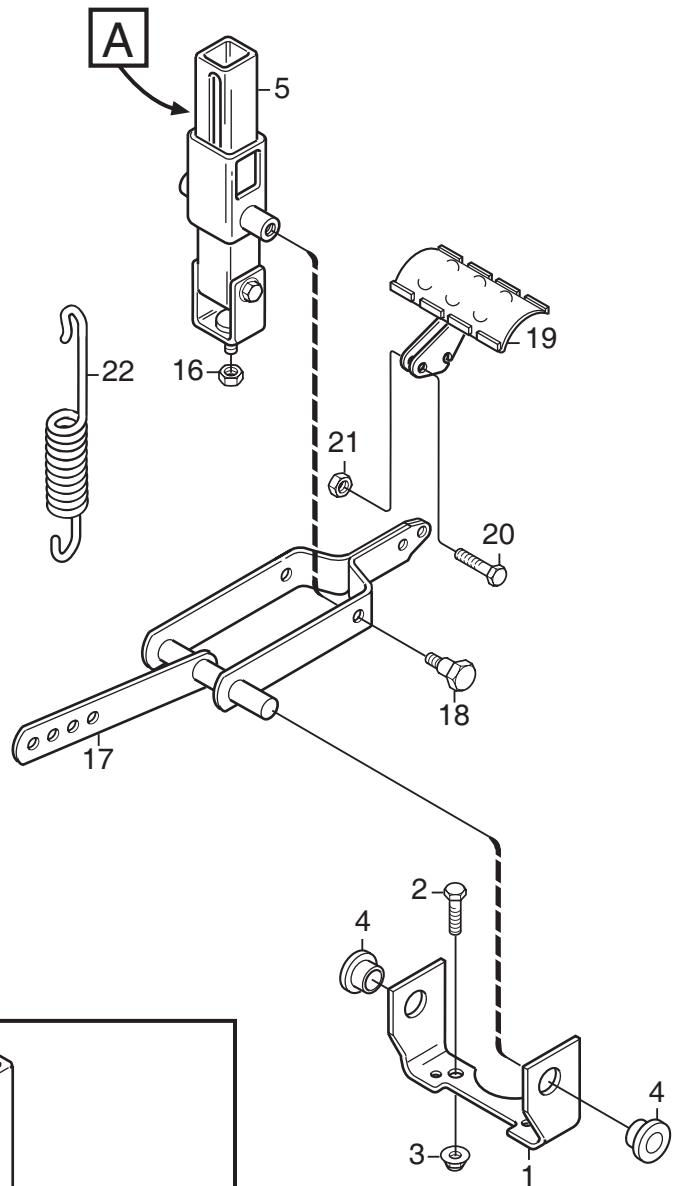


Utgåva Issue		Bildnr Picture No		VILLA REDSKAPSLYFT		VILLA LIFTING DEVICE		Sida Page	
2011-11		1151C						268	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
1	1				1134-4117-01 Fäste .....	Bracket .....			
2	2				9959-1025-16 Skruv .....	Screw .....			
3	2				9739-1031-22 Mutter .....	Nut .....			
4	2				1134-2684-01 Lager .....	Bearing .....			
5	1				1134-4945-01 Lyftspärr kpl .....	Lift catch assy .....			
9	1				9404-0027-01 • O-ring .....	• O-ring .....			
10	1				9650-0039-04 • Seegersäkring .....	• Lock ring .....			
11	1				9595-0276-01 • Spännstift .....	• Locating pin .....			
12	1				9997-0640-12 • Skruv .....	• Screw .....			
13	1				9747-0631-02 • Låsmutter .....	• Lock nut .....			
15	1				9897-0820-16 • Skruv .....	• Screw .....			
16	1				9747-0831-02 Mutter .....	Lock nut .....			
17	1				1134-4860-01 Lyftgaffel .....	Lift fork .....			
18	2				1134-0240-00 Ansätsskruv .....	Shoulder screw .....			
19	1				1134-4938-01 Lyftpedal .....	Lift pedal .....			
20	2				9997-0625-16 Skruv .....	Screw .....			
21	2				9739-0631-22 Mutter .....	Nut .....			
22	1				4231-0013-00 Fjäder .....	Spring .....			

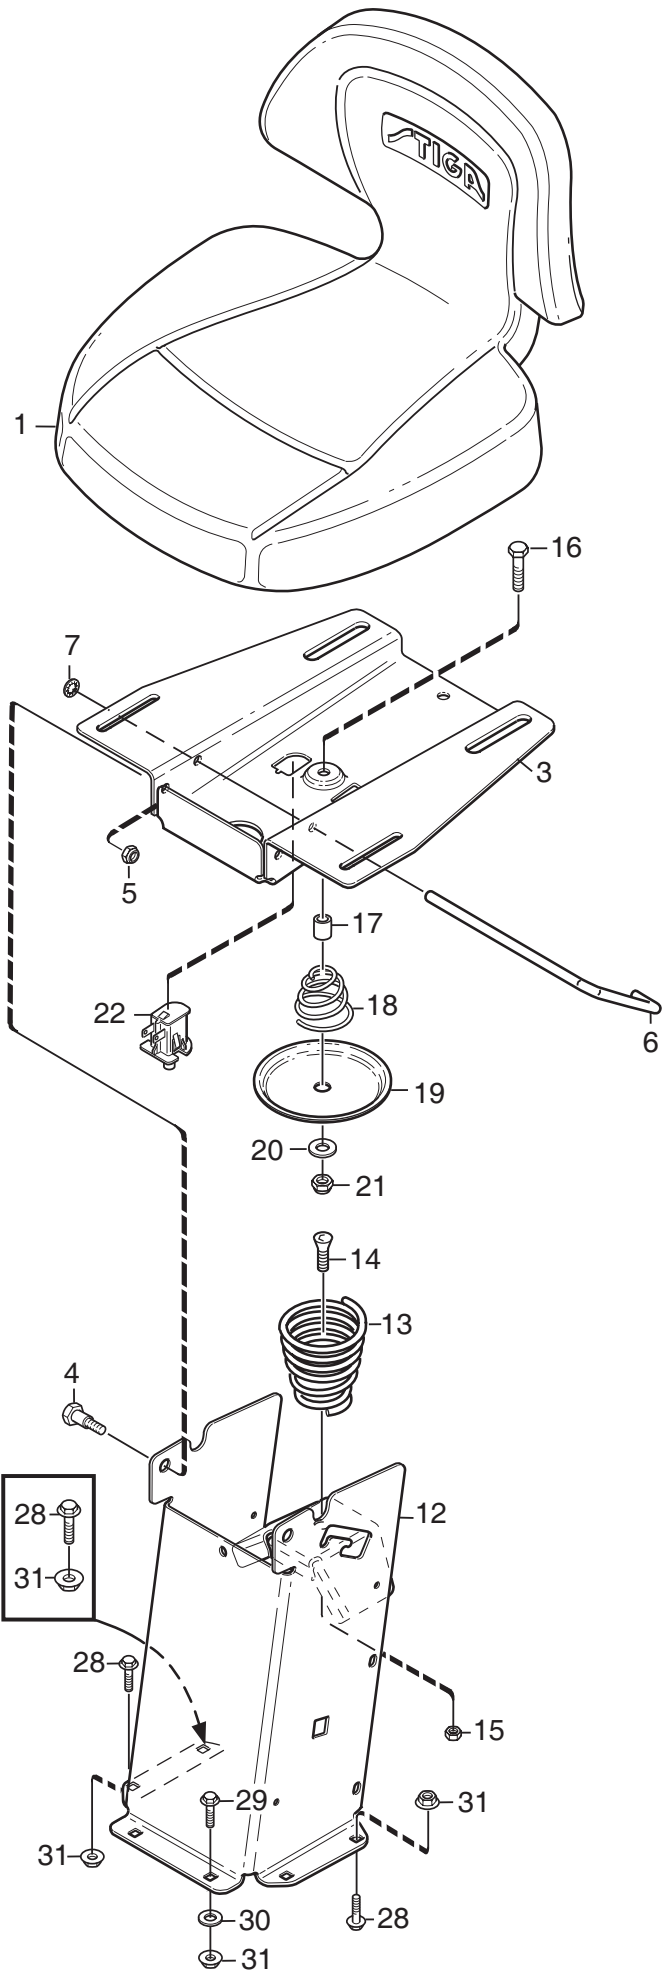

Utgåva Issue		Bildnr Picture No		VILLA SITS		VILLA SEAT		Sida Page	
2011- 11		1652A						270	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
1	1				1134-5506-01 Sits .....	Seat .....			
3	1				1134-5301-01 Sitsplatta .....	Seat plate .....			
4	2				1134-0240-00 Ansatsskruv .....	Shoulder screw .....			
5	2				9747-0831-02 Mutter .....	Lock nut .....			
6	1				1134-5454-01 Spärr .....	Catch .....			
7	1				9675-0012-02 Starlock .....	Locking washer .....			
12	1				1134-5296-04 Sitskonsol- gul .....	Seat bracket- yellow .....			
13	1				1134-4256-01 Sitsfjäder .....	Seat spring .....			
14	1				9924-1235-19 Skruv .....	Screw .....			
15	1				9747-1231-02 Låsmutter .....	Lock nut .....			
16	1				9997-0840-12 Skruv .....	Screw .....			
17	1				1134-1565-06 Distans .....	Spacer .....			
18	1				1134-5302-01 Fjäder .....	Spring .....			
19	1				1134-5299-01 Tryckplatta .....	Push plate .....			
20	1				9699-0090-02 Planbricka .....	Flat washer .....			
21	1				9747-0831-02 Mutter .....	Lock nut .....			
22	1				1134-3156-02 Brytare (grå) .....	Switch (grey) .....			
28	4				9959-0820-16 Skruv .....	Screw .....			L = 20 mm
29	2				9959-0825-16 Skruv .....	Screw .....			L = 25 mm
30	2				9699-0056-02 Planbricka .....	Flat washer .....			
31	6				9739-0831-22 Mutter .....	Nut .....			

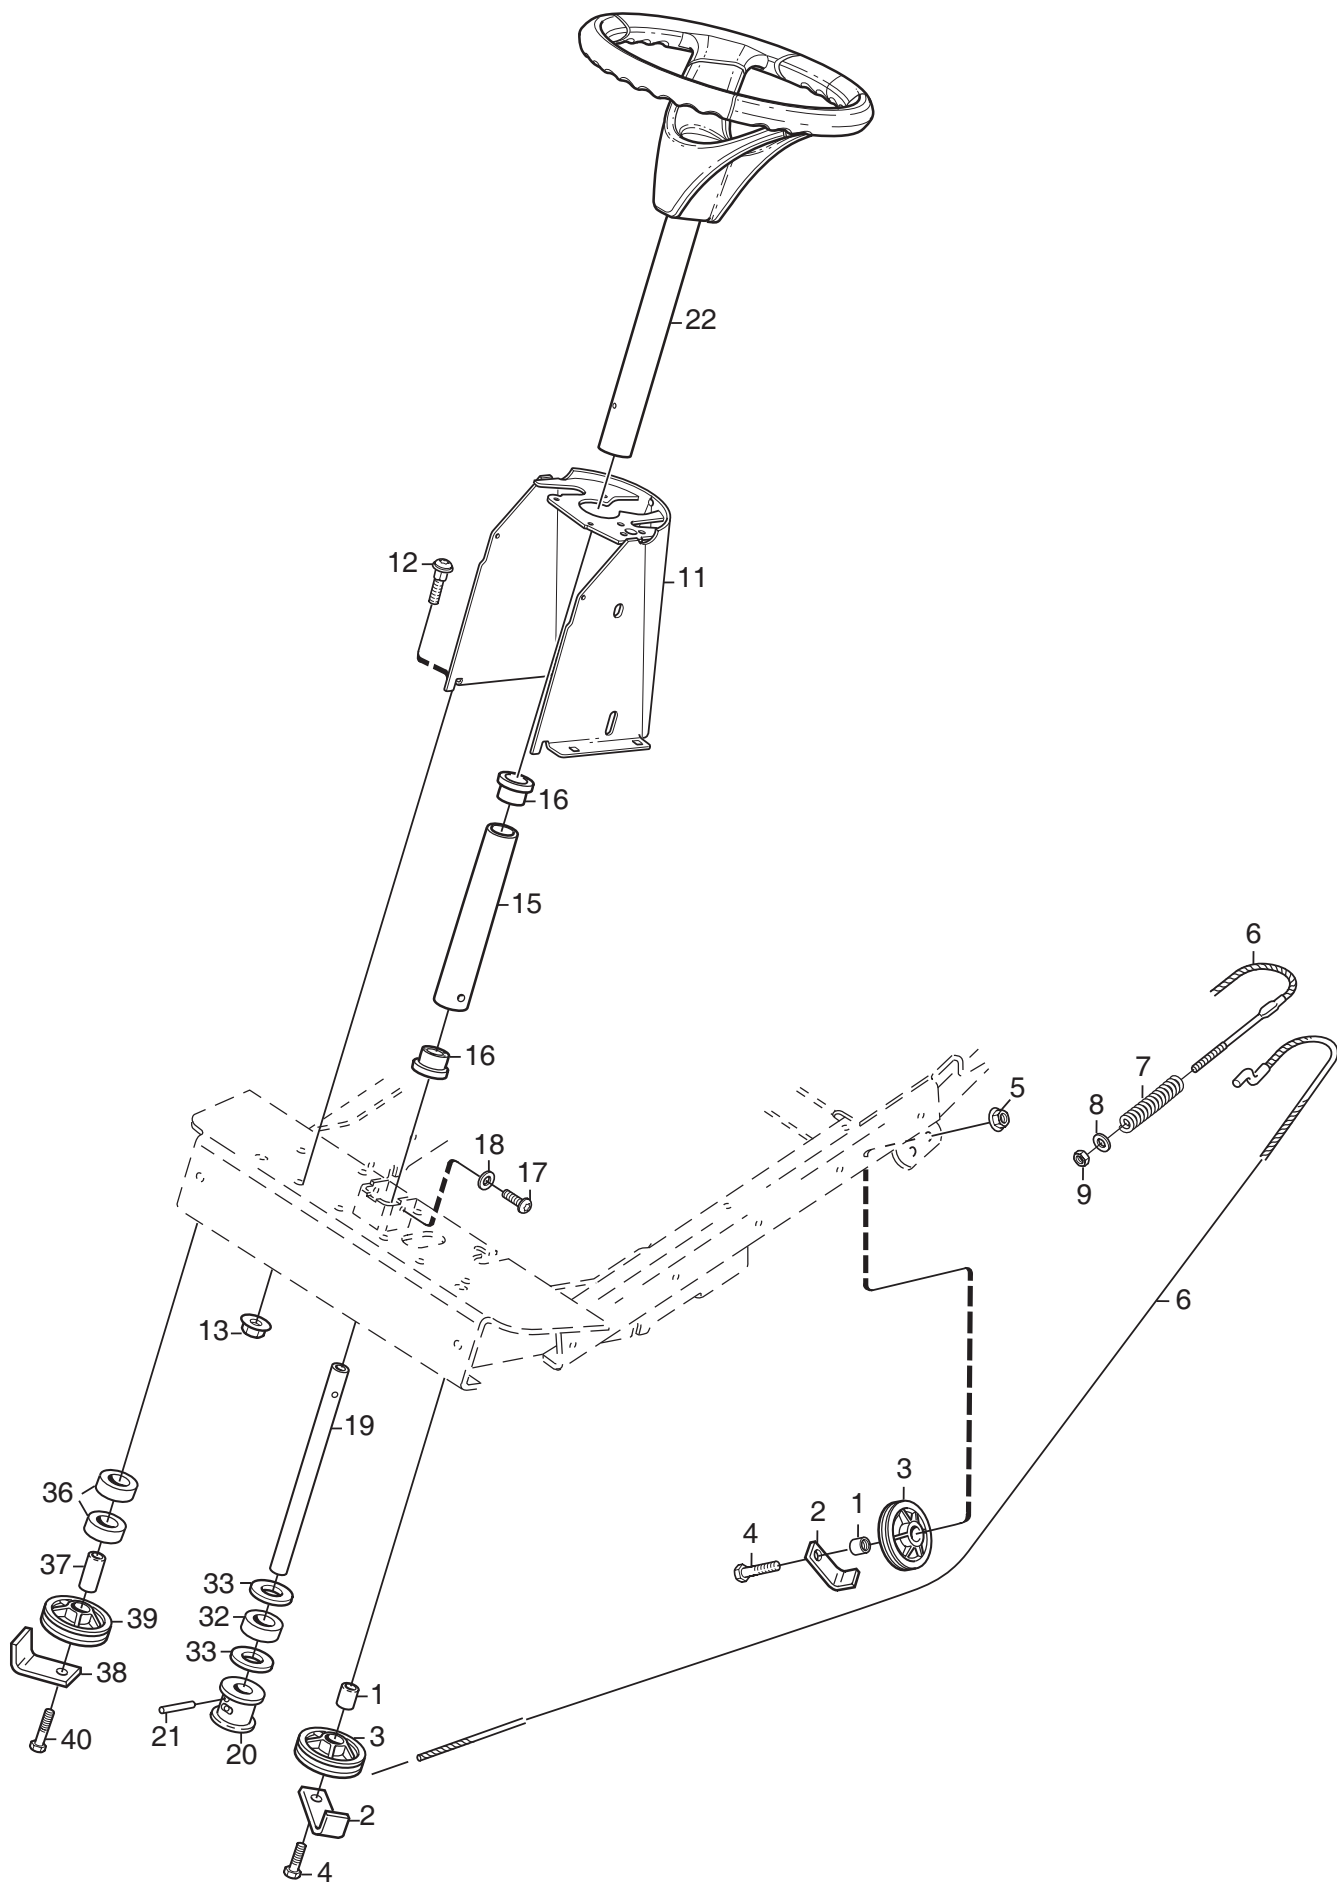


Utgåva Issue		Bildnr Picture No		VILLA STYRNING		VILLA STEERING		Sida Page	
2011- 11		2199A						272	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
1	3				1134-0041-01 Linhjulshylsa .....	Bushing.....			
2	3				1134-0046-00 Linhållare.....	Wire clamp.....			
3	1				1134-9025-01 Linhjul- sats .....	Steering pulley- kit .....			Sats 2 st/kit of 2
4	3				9997-1040-16 Skruv.....	Screw.....			L = 40 mm
5	2				9739-1031-22 Mutter.....	Nut.....			
6	1				1134-9154-01 Styrwire.....	Steering cable .....			
7	1				1134-1310-01 Tryckfjäder.....	Compression spring.....			
8	1				9699-0056-02 Planbricka.....	Flat washer.....			
9	1				9747-0831-02 Mutter.....	Lock nut.....			
11	1				1134-5349-03 Styrkonsol- grå .....	Steering console- grey .....			
12	4				9897-0820-16 Skruv.....	Screw.....			
13	4				9739-0831-22 Mutter.....	Nut.....			
15	1				1134-1305-05 Rattör- nedre .....	Steering column- lower .....			
16	2				1134-1901-01 Lager .....	Bearing.....			
17	2				9893-0616-16 Skruv.....	Screw.....			
18	2				9699-0060-02 Planbricka.....	Flat washer.....			
19	1				1134-5495-01 Rattstång .....	Steering rod .....			
20	1				1134-1933-01 Styrrulle.....	Steering pulley .....			
21	1				9595-0262-00 Spännstift .....	Locating pin .....			
22	1				1134-5496-01 Ratt.....	Steering wheel .....			
32	1				1134-3047-01 Distans .....	Spacer.....			
33	2				9699-0104-02 Bricka .....	Washer.....			
36	2				1134-3047-01 Distans .....	Spacer.....			
37	1				1134-0041-05 Hylsa .....	Bushing.....			
38	1				1134-0046-00 Linhållare.....	Wire clamp.....			
39	1				1134-9025-01 Linhjul- sats .....	Steering pulley- kit .....			Sats 2 st/kit of 2
40	1				9997-1060-12 Skruv.....	Screw.....			L = 60 mm

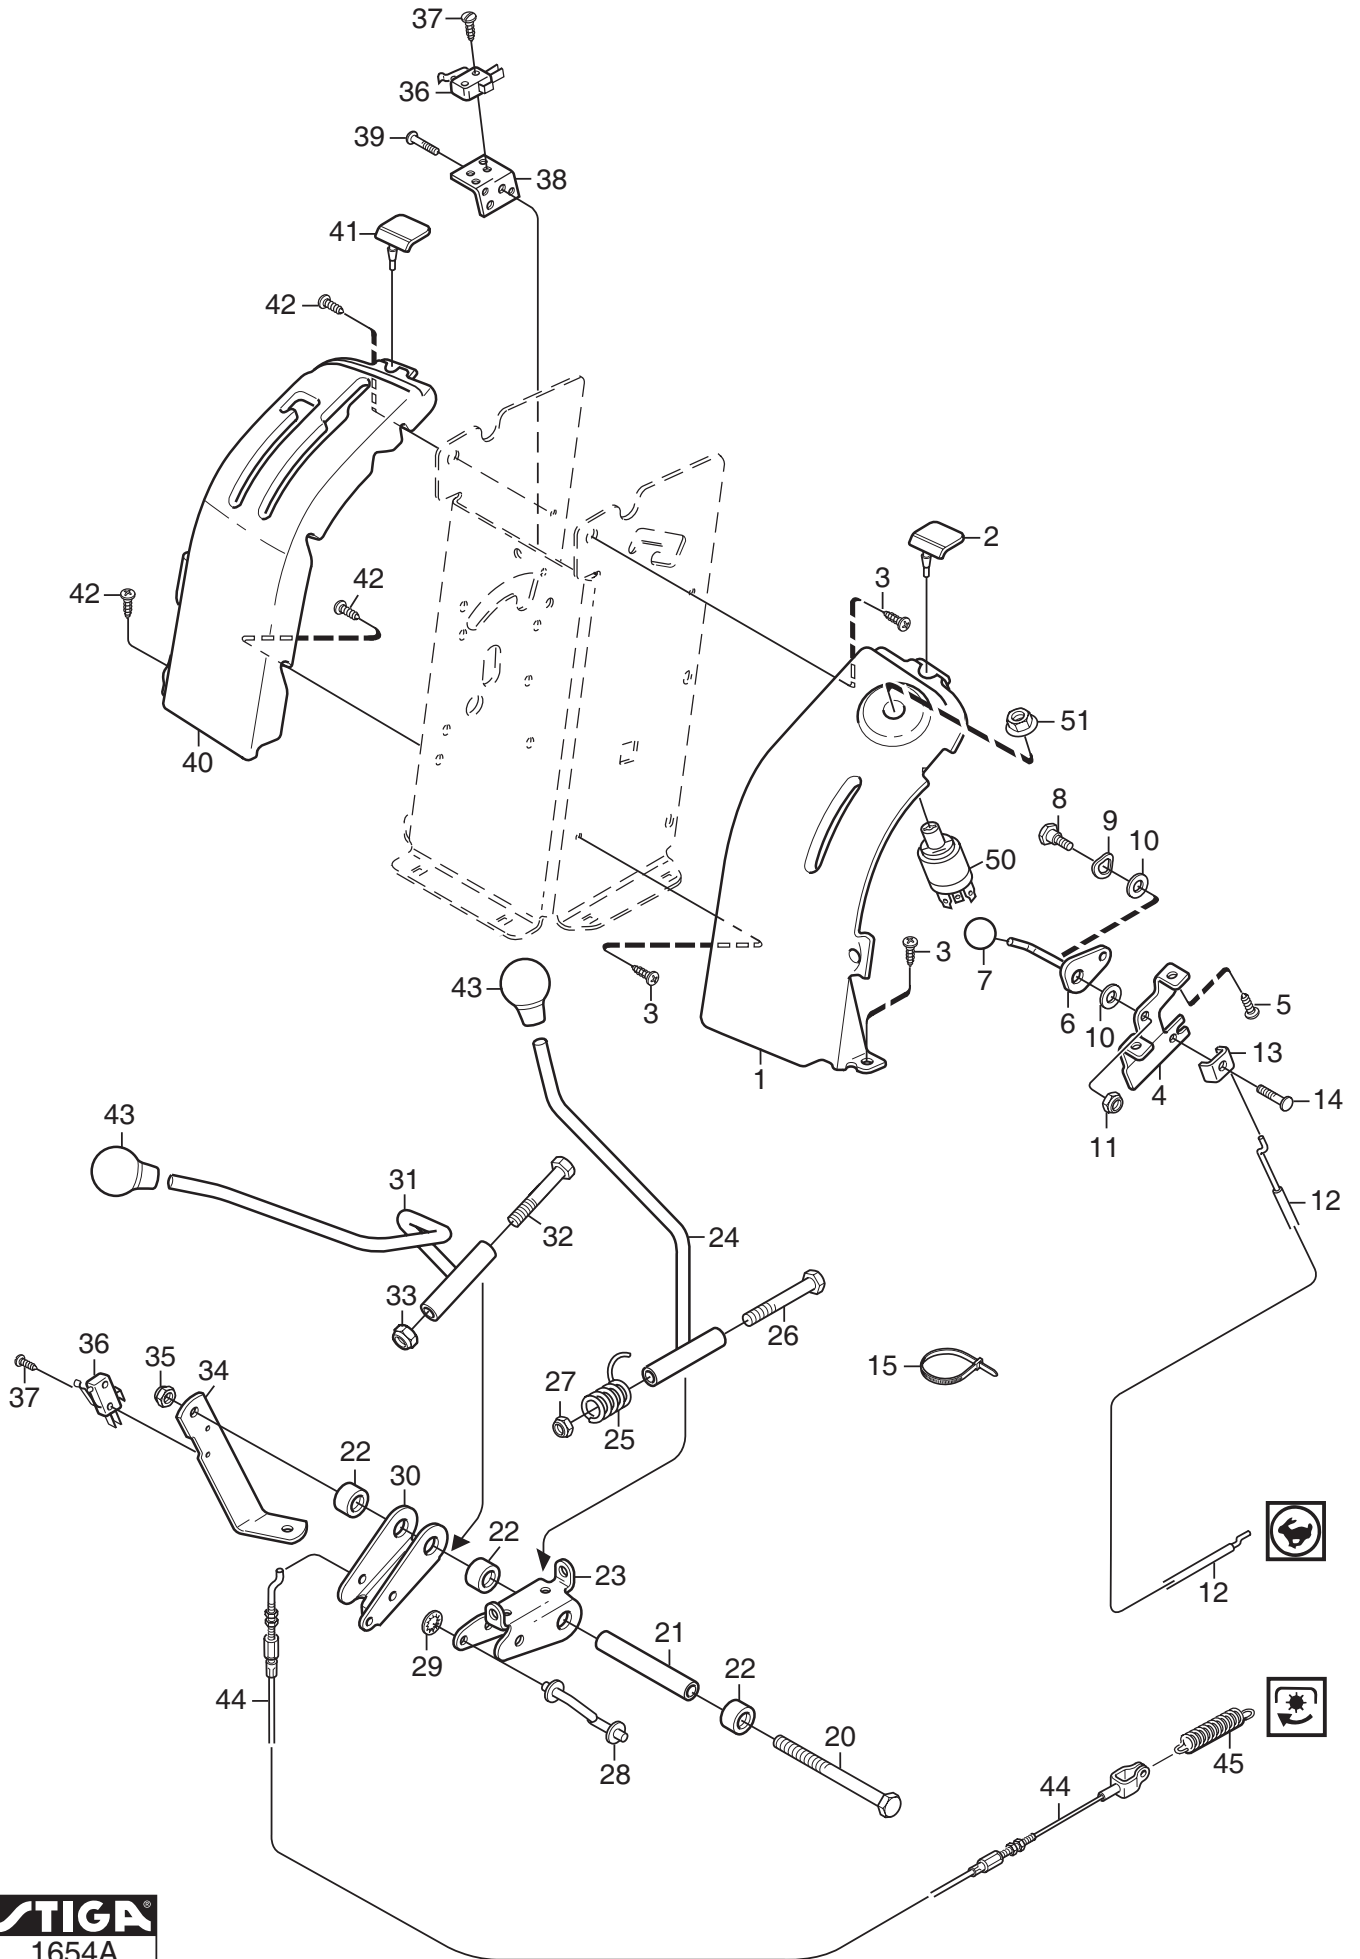








Utgåva Issue		Bildnr Picture No		VILLA HANDREGLAGE	VILLA HAND CONTROLS	Sida Page			
2011-11		1654A				274			
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
1	1			1134-5286-01	Reglagepanel- vä .....	Control panel- LH .....			
2	2			1134-5531-01	Dämpare .....	Absorber .....			
3	3			9893-0616-16	Skruv .....	Screw .....			
4	1			1134-5357-01	Fäste .....	Bracket .....			
5	2			9838-9516-12	Skruv .....	Screw .....			
6	1			1134-4077-01	Gasreglage .....	Throttle control .....			
7	1			1134-4078-01	Knopp .....	Knob .....			
8	1			1134-0240-00	Ansatssskruv .....	Shoulder screw .....			
9	1			9694-0001-00	Fjäderbricka .....	Washer .....			
10	2			1134-4242-01	Distansbricka .....	Spacer washer .....			
11	1			9747-0831-02	Mutter .....	Lock nut .....			
12	1			1134-1597-13	Gaswire .....	Throttle cable .....			
13	1			9500-9991-00	Wireklämma .....	Cable clamp .....			
14	1			9943-0516-16	Skruv .....	Screw .....			
15	1			9579-0003-00	Buntband .....	Cable holder .....			
20	1			9997-0812-02	Skruv .....	Screw .....			
21	1			1134-5274-02	Distans .....	Spacer .....			
22	3			1134-3047-01	Distans .....	Spacer .....			
23	1			1134-5271-01	Reglagefäste .....	Control bracket .....			
24	1			1134-5275-01	Växelspak .....	Gear shift lever .....			
25	1			1134-5535-01	Fjäder .....	Spring .....			
26	1			9997-0890-12	Skruv .....	Screw .....			
27	1			9747-0831-02	Mutter .....	Lock nut .....			
28	1			1134-5268-01	Stag .....	Shifter rod .....			
29	1			9675-0009-02	Starlock .....	Starlock .....			
30	1			1134-5271-01	Reglagefäste .....	Control bracket .....			
31	1			1134-5276-01	Reglagespak .....	Control lever .....			
32	1			9997-0890-12	Skruv .....	Screw .....			
33	1			9747-0831-02	Mutter .....	Lock nut .....			
34	1			1134-5356-01	Stag .....	Strut .....			
35	1			9747-0831-02	Mutter .....	Lock nut .....			
36	2			9400-0360-01	Mikrobrytare .....	Micro switch .....			
37	4			9840-7716-16	Skruv .....	Screw .....			
38	1			1134-5358-01	Brytarfäste .....	Switch bracket .....			
39	2			9943-0516-16	Skruv .....	Screw .....			
40	1			1134-5285-01	Reglagepanel- hö .....	Control panel- RH .....			
41	2			1134-5531-01	Dämpare .....	Absorber .....			
42	4			9893-0616-16	Skruv .....	Screw .....			
43	2			1134-2551-01	Reglageknopp .....	Knob .....			
44	1			1134-3573-06	Krafttuttagswire .....	PTO cable .....			
45	1			1134-1242-02	Fjäder .....	Spring .....			
50	1			1134-4093-01	Tändningslås .....	Ignition switch .....			
51	1			1134-4749-01	Mutter .....	Nut .....			


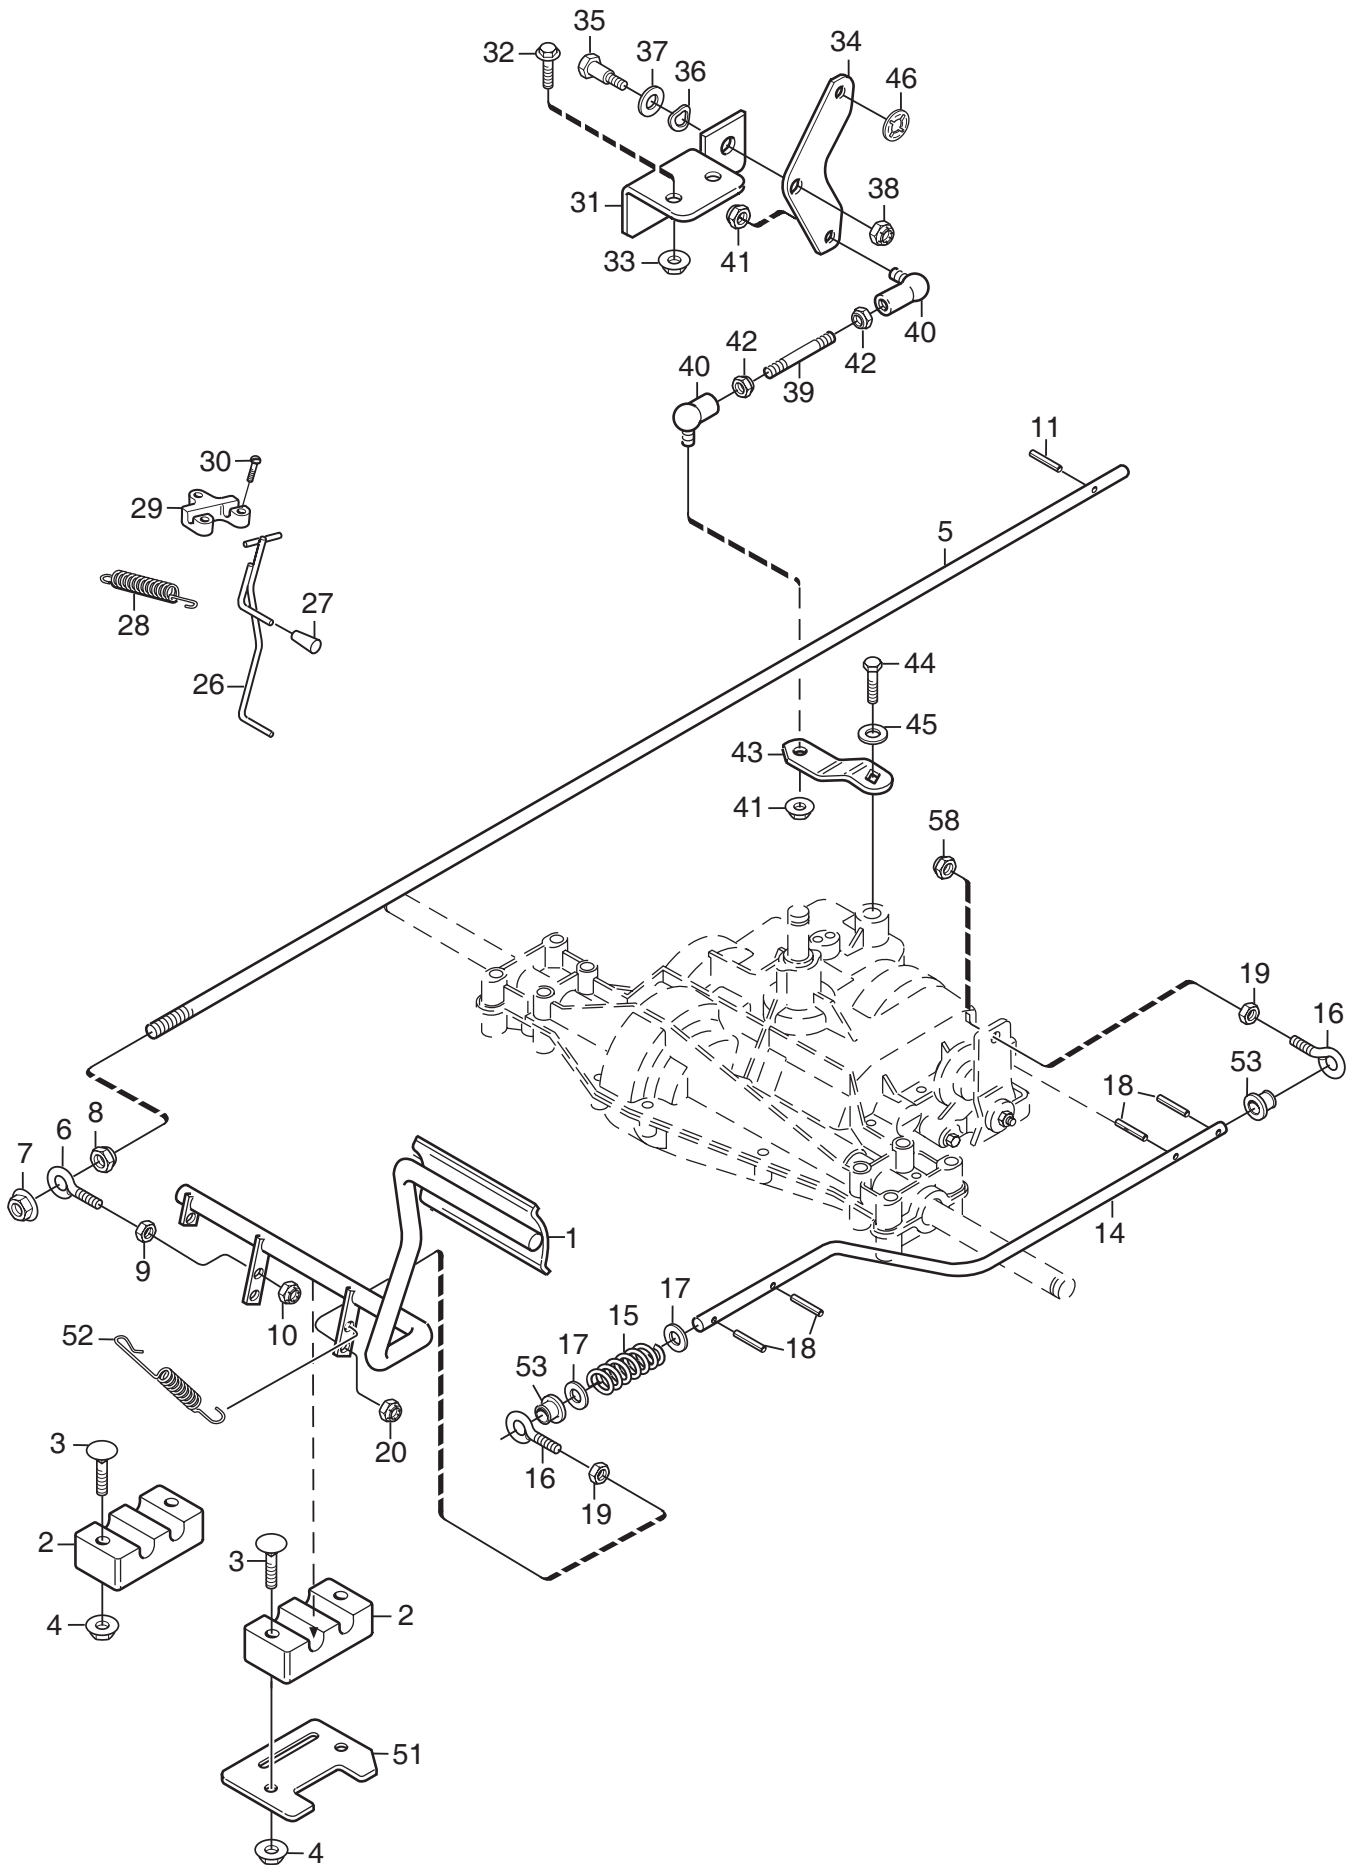


Utgåva Issue		Bildnr Picture No		VILLA FOTREGLAGE	VILLA FOOT CONTROLS	Sida Page			
2011- 11		1644B				276			
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
1	1			1134-4802-01	Pedal .....	Pedal .....			
2	2			1134-4624-01	Lager .....	Bearing .....			
3	4			9897-0640-12	Skruv .....	Screw .....			
4	4			9739-0631-22	Mutter .....	Nut .....			
5	1			1134-4795-01	Kopplingsstång .....	Clutch rod .....			
6	1			1134-2138-01	Skruvögla .....	Eye bolt .....			
7	1			9739-1031-22	Mutter .....	Nut .....			
8	1			9731-1031-22	Mutter .....	Nut .....			
9	1			9739-0831-22	Mutter .....	Nut .....			
10	1			9747-0831-02	Mutter .....	Lock nut .....			
11	1			9595-0208-00	Spännstift .....	Locating pin .....			
14	1			1134-4777-01	Bromsstag .....	Brake rod .....			
15	1			1134-4617-01	Fjäder .....	Spring .....			
16	2			1134-2138-01	Skruvögla .....	Eye bolt .....			
17	2			9699-0035-02	Planbricka .....	Flat washer .....			
18	4			9595-0208-00	Spännstift .....	Locating pin .....			
19	2			9739-0831-22	Mutter .....	Nut .....			
20	1			9747-0831-02	Mutter .....	Lock nut .....			
26	1			1134-5353-01	Bromsstång .....	Brake rod .....			
27	1			1134-2786-01	Plastknopp .....	Plastic knob .....			
28	1			1131-1497-01	Fjäder .....	Spring .....			
29	1			1134-4002-01	Fäste .....	Brake rod attachment .....			
30	3			9838-9516-12	Skruv .....	Screw .....			
31	1			1134-4714-01	Fästvinkel .....	Angle bracket .....			
32	2			9959-0820-16	Skruv .....	Screw .....			
33	2			9739-0831-22	Mutter .....	Nut .....			
34	1			1134-4715-01	Triangel .....	Triangular plate .....			
35	1			1134-0240-00	Ansatsskruv .....	Shoulder screw .....			
36	1			9694-0001-00	Fjäderbricka .....	Washer .....			
37	1			9699-0036-02	Planbricka .....	Flat washer .....			
38	1			9747-0831-02	Mutter .....	Lock nut .....			
39	1			1134-4717-02	Gångstång .....	Threaded rod .....			
40	2			9570-0004-00	Vinkellänk .....	Elbow link .....			
41	2			9747-0631-02	Låsmutter .....	Lock nut .....			
42	2			9739-0631-22	Mutter .....	Nut .....			
43	1			1134-6351-01	Växelarm .....	Shift lever .....			
44	1			9987-5016-16	Skruv .....	Screw .....			
45	1			9699-0060-02	Planbricka .....	Flat washer .....			
46	1			9675-0009-02	Starlock .....	Starlock .....			
51	1			1134-4793-01	Stopplåt .....	Stop plate .....			
52	1			4231-0013-00	Fjäder .....	Spring .....			
53	2			1134-4779-01	Plastbussning .....	Plastic bushing .....			
58	1			9747-0831-02	Mutter .....	Lock nut .....			

Dana 6800-7

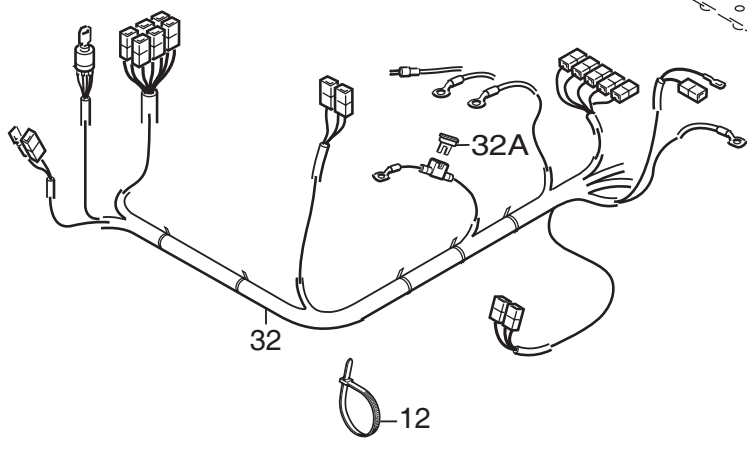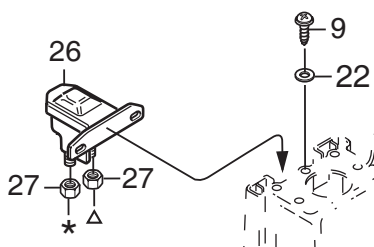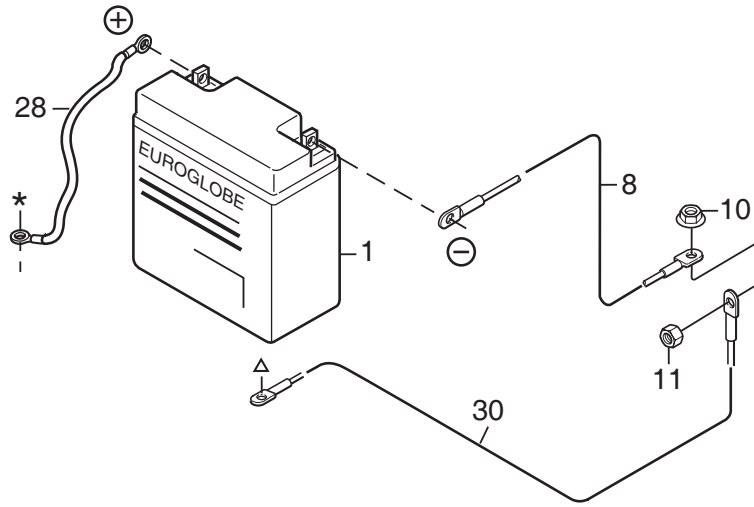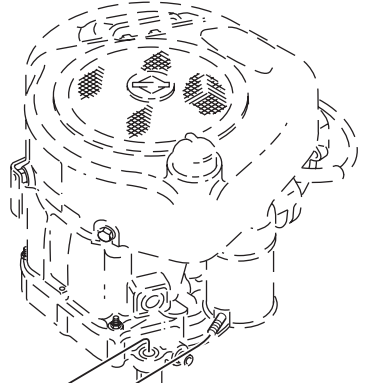
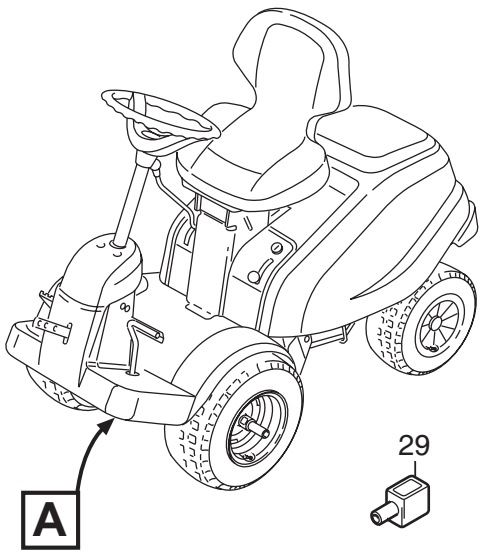


Utgåva Issue 2011-11		Bildnr Picture No 1650D		VILLA ELUTRUSTNING		VILLA EL. EQUIPMENT		Sida Page 278	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
1	1				1134-4804-01	Batteri.....	Battery .....		
8	1				1134-2042-02	Kabel- svart.....	Cable- black.....		L = 350 mm
9	1				9838-9516-12	Skruv.....	Screw .....		
10	1				9747-0831-02	Mutter.....	Lock nut .....		
11	1				9739-0631-22	Mutter.....	Nut .....		M6
11	1				9795-3531-02	Mutter.....	Nut .....		1/4 UNC
12	3				9579-0003-00	Buntband.....	Cable holder .....		
22	1				9699-0060-02	Planbricka.....	Flat washer.....		
26	1				1134-2962-01	Solenoid kpl .....	Solenoid assy.....		
27	2				9794-5131-02	• Mutter.....	• Nut .....		
28	1				1134-0234-02	Batterikabel ( + ).....	Battery cable ( + ).....		L = 395 mm
29	1				1134-2310-01	Batteriskydd.....	Guard cap .....		
30	1				1134-4702-02	Kabel- röd .....	Cable- red.....		L = 480 mm
32	1				1134-7218-01	Kablage.....	Harness.....		
32A	1				1134-3496-06	• Säkring .....	• Fuse .....		20A

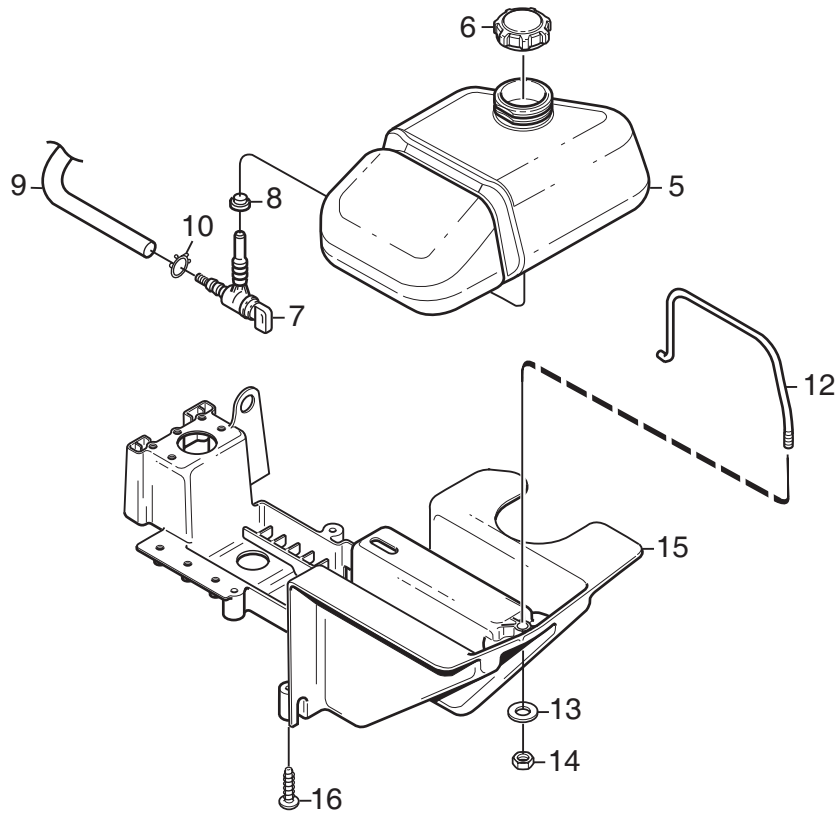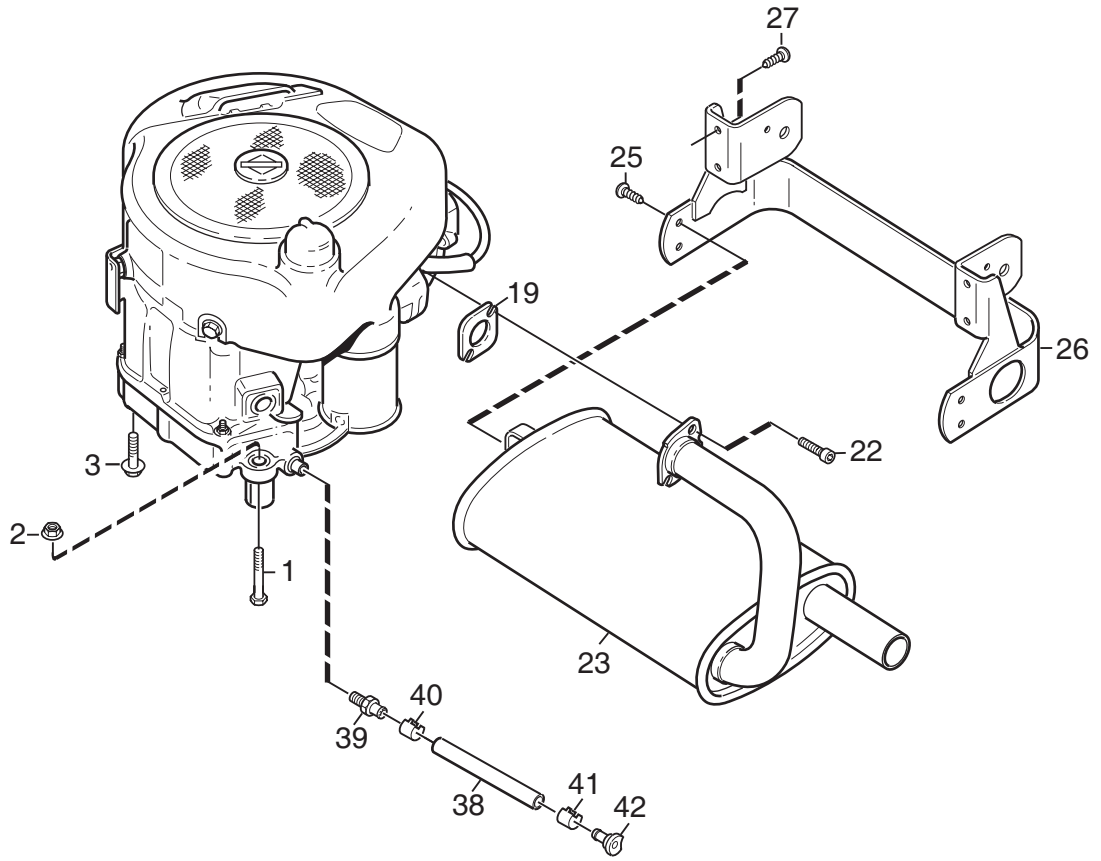



Utgåva Issue		Bildnr Picture No		VILLA MOTOR (B&S)		VILLA ENGINE (B&S)		Sida Page	
2011-11		1651C						280	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2717 -15 -55	2717 -35							
1	1	1		9997-0840-12	Skruv.....	Screw.....		M8 x 40	
2	1	1		9747-0831-02	Mutter.....	Lock nut.....			
3	3	3		9955-3725-16	Skruv.....	Screw.....		3/8" x 25	
5	1	1		1134-6626-01	Bränsletank.....	Fuel tank.....			
6	1	1		1134-5532-01	Tanklock.....	Fuel tank cap.....			
7	1	1		1134-3224-01	Bensinkran.....	Fuel shut-off valve.....			
8	1	1		1134-3225-01	Gummibussning.....	Grommet.....			
9	0,46	0,46		9505-0001-01	Bensinslang (meter).....	Fuel line (metre).....		Per meter	
10	2	2		9578-0023-02	Slangklämma.....	Hose clamp.....			
12	1	1		1134-4808-01	Tankbygel.....	Tank clamp.....			
13	1	1		9699-0060-02	Planbricka.....	Flat washer.....			
14	1	1		9747-0631-02	Låsmutter.....	Lock nut.....			
15	1	1		1134-4807-02	Tank/batterihylla.....	Tank/battery shelf.....			
16	4	4		9838-8822-19	Skruv.....	Screw.....			
19	1	1		1134-0433-00	Ljuddämparpackning.....	Muffler gasket.....			
22	2	2		1134-4930-01	Skruv.....	Screw.....			
23	1	1		1134-7781-01	Ljuddämpare.....	Muffler.....			
25	2	2		9893-0616-16	Skruv.....	Screw.....			
26	1	1		1134-6699-01	Värmskydd.....	Heat guard.....			
27	4	4		9893-0616-16	Skruv.....	Screw.....			
38		1		1134-5827-05	Oljeavtappning kpl.....	Oil drain assy.....		Inkl. pos 39-42	
39		1		1134-5825-01	• Nippel.....	• Nipple.....			
40		1		9578-0023-04	• Slangklämma.....	• Hose clamp.....			
41		1		1134-3499-02	• Slangklämma.....	• Hose clamp.....			
42		1		1134-5826-01	• Plugg.....	• Plug.....			

X



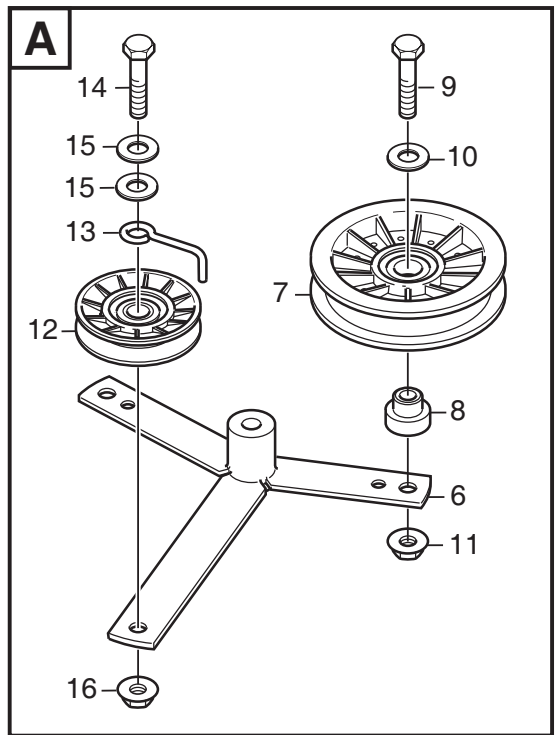
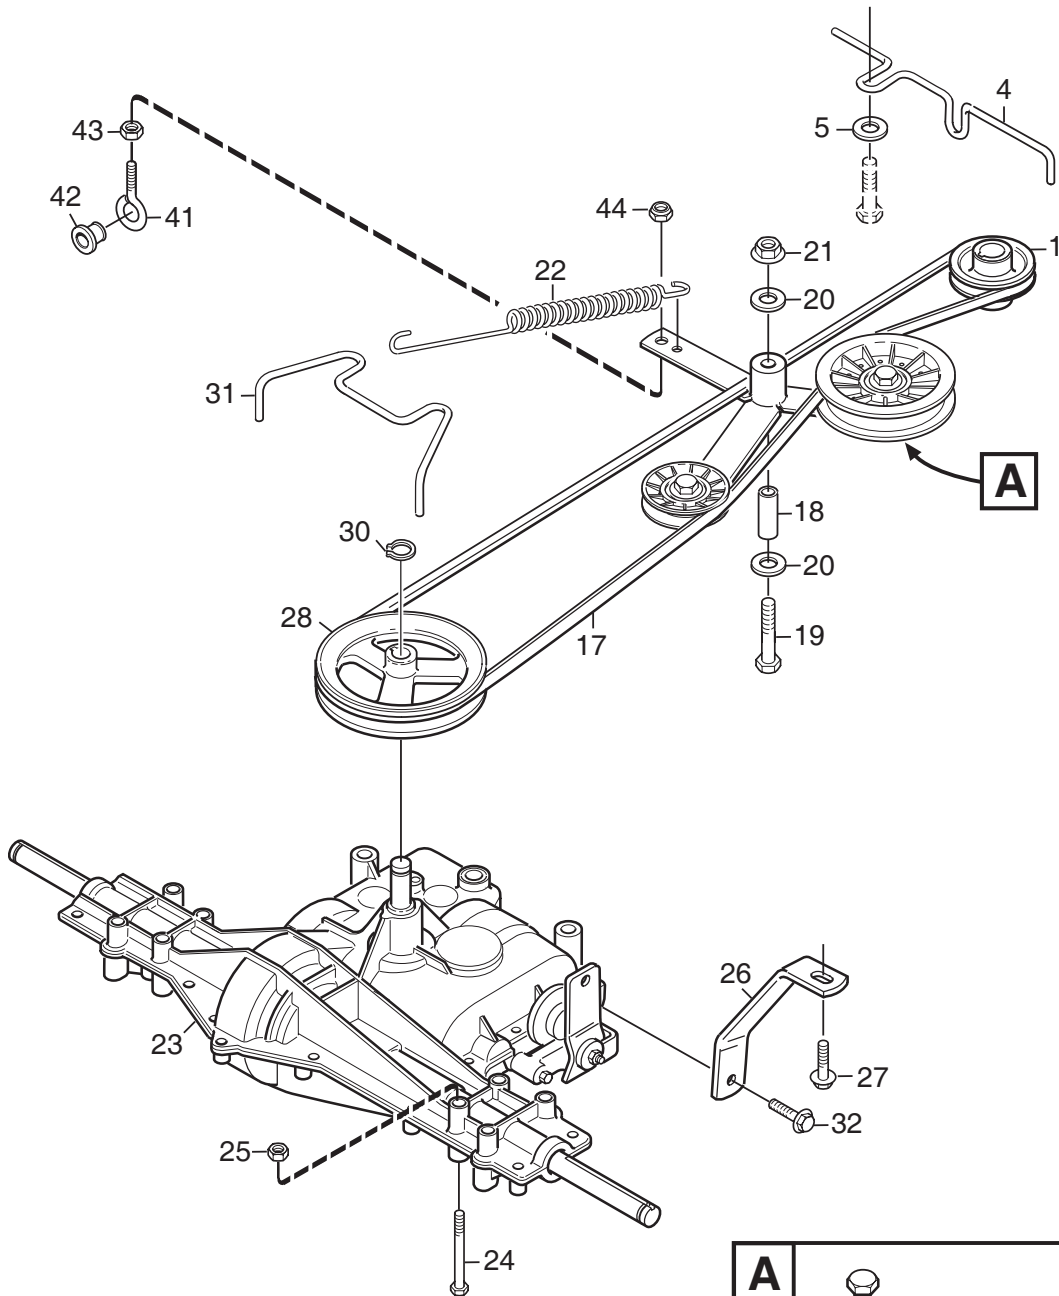




Utgåva Issue		Bildnr Picture No		VILLA TRANSMISSION		VILLA TRANSMISSION		Sida Page	
2011- 11		1643B						282	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
X	1	1			1137-0002-01	Motorremskiva .....	Engine belt pulley .....		
	4	1			1134-6637-01	Remstyrning .....	Belt guide .....		
	5	1			9699-0056-02	Planbricka .....	Flat washer .....		
	6	1			1134-4519-01	Spännarm .....	Tension arm .....		
	7	1			1134-9091-01	Spännrulle .....	Tension roller .....		
	8	1			1134-4614-01	Ansats .....	Shoulder spacer .....		
	9	1			9997-1040-16	Skruv .....	Screw .....		
	10	1			9699-0035-02	Planbricka .....	Flat washer .....		
	11	1			9739-1031-22	Mutter .....	Nut .....		
	12	1			1134-9027-02	Spännrulle- grå .....	Tension roller- grey .....		
	13	1			1134-1795-01	Rembygel .....	Belt stirrup .....		
	14	1			9997-1040-16	Skruv .....	Screw .....		
	15	2			9699-0035-02	Planbricka .....	Flat washer .....		
	16	1			9739-1031-22	Mutter .....	Nut .....		
	17	1			1134-9065-01	Drivrem (polyester) .....	Drive belt .....		= 9585-0124-01
X	17	1			1134-9164-01	Drivrem (Kevlar) .....	Drive belt .....		= 9585-0209-01
	18	1			1134-1565-08	Distans .....	Spacer .....		
	19	1			9997-0870-16	Skruv .....	Screw .....		
	20	2			9699-0056-02	Planbricka .....	Flat washer .....		
	21	1			9739-0831-22	Mutter .....	Nut .....		
	22	1			1134-5214-01	Fjäder .....	Spring .....		
	23	1			1134-6338-01	Transaxel kpl. ....	Transaxle assy .....		Dana 6800-7
	24	4			9960-0860-12	Skruv .....	Screw .....		
	25	4			9747-0831-02	Mutter .....	Lock nut .....		
	26	1			1134-4687-01	Momentstag .....	Strut .....		
	27	1			9945-0816-16	Skruv .....	Screw .....		
X	28	1			1137-0006-01	Remskiva .....	Belt pulley .....		Ø = 154 mm
	30	1			9650-0016-04	Spårring .....	Lock ring .....		
	31	1			1134-4707-01	Remstyrning .....	Belt guide .....		
	32	1			9942-0820-16	Skruv .....	Screw .....		
	41	1			1134-2138-01	Skruvögla .....	Eye bolt .....		
	42	1			1134-4779-01	Plastbussning .....	Plastic bushing .....		
	43	1			9739-0831-22	Mutter .....	Nut .....		
	44	1			9747-0831-02	Mutter .....	Lock nut .....		

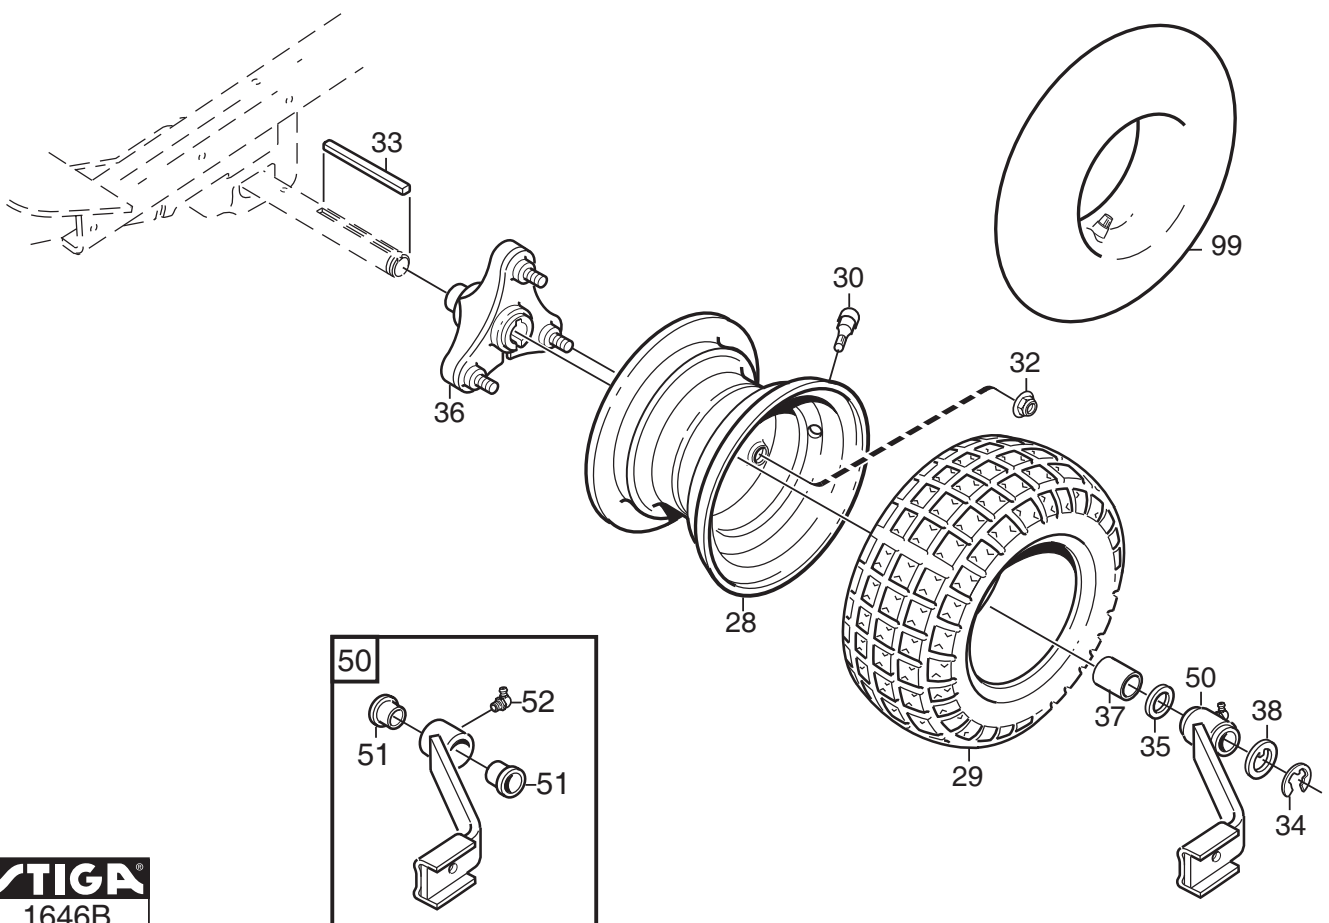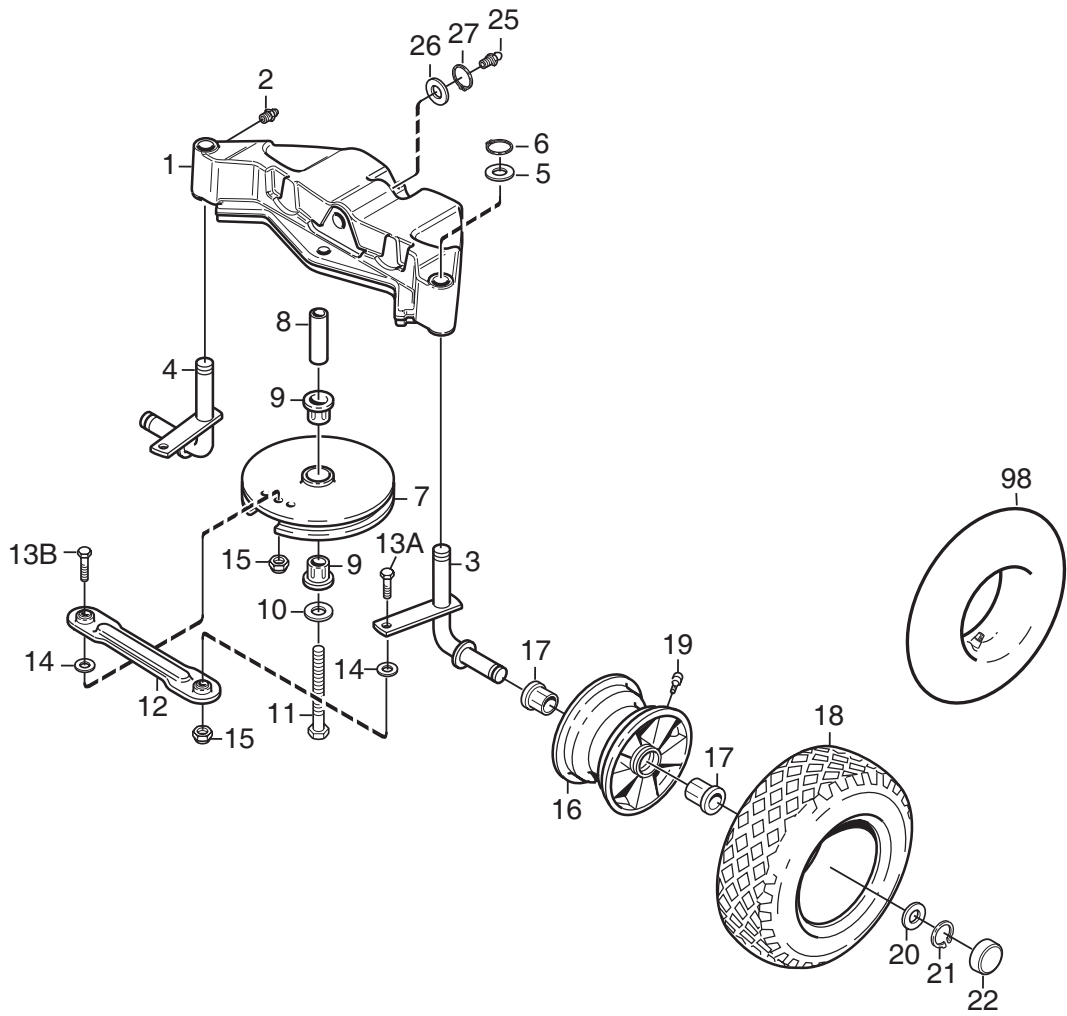

Utgåva Issue		Bildnr Picture No		VILLA HJUL		VILLA WHEELS		Sida Page	
2011- 11		1646B						284	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2717								
1	1				1134-6703-01	Bakaxel .....	Rear axle .....		
2	2				9501-0500-00	Smörjnippel .....	Grease joint .....		
3	1				1134-5009-02	Spindel- vä .....	Spindle- LH .....		
4	1				1134-5009-01	Spindel- hö .....	Spindle- RH .....		
5	2				9699-0088-02	Planbricka .....	Flat washer .....		
6	2				9650-0020-04	Spårring .....	Circlip .....		
7	1				1137-0090-01	Styrskiva .....	Steering pulley .....		
8	1				1134-5575-01	Distans .....	Spacer .....		
9	1				1134-9024-01	Lager .....	Bearing .....	Sats 4 st/kit of 4	
10	1				9699-0104-02	Bricka .....	Washer .....		
11	1				9997-1680-12	Skruv .....	Screw .....		
12	2				1134-3247-05	Styrstag .....	Tie rod .....		
13A	2				9997-0825-16	Skruv .....	Screw .....	L = 25 mm	
13B	1				9997-0835-12	Skruv .....	Screw .....	L = 35 mm	
14	2				9699-0090-02	Planbricka .....	Flat washer .....		
15	3				9747-0831-02	Mutter .....	Lock nut .....		
16	2				1134-4706-01	Fälg .....	Rim .....		
17	1				1134-9026-01	Lagerbussning .....	Bearing bush kit .....	Sats 4 st/kit of 4	
18	2				9545-0117-00	Däck .....	Tyre .....	13 x 5.00 - 6	
19	2				9545-0500-00	Ventil .....	Valve .....		
20	2				1134-0341-01	Bricka .....	Washer .....		
21	2				9650-0020-04	Spårring .....	Circlip .....		
22	2				1134-4344-01	Navkapsel .....	Hub cap .....		
25	1				9501-0500-00	Smörjnippel .....	Grease joint .....		
26	1				9699-0088-02	Planbricka .....	Flat washer .....		
27	1				9650-0020-04	Spårring .....	Circlip .....		
28	2				1134-5255-01	Fälg .....	Rim .....		
29	2				9545-0126-01	Däck .....	Tyre .....	16 x 6.00 - 8	
30	2				9545-0500-00	Ventil .....	Valve .....		
32	6				9731-1031-22	Mutter .....	Nut .....		
33	2				1134-2471-03	Kil .....	Key .....		
34	2				9653-0001-04	Spårryttare .....	Lock ring .....		
35	2				1134-0341-01	Bricka .....	Washer .....		
36	2				1134-4844-02	Hjulnav .....	Wheel hub .....		
37	2				1134-4845-02	Navhylsa .....	Hub sleeve .....		
38	2				1134-4981-01	Bricka .....	Washer .....		
50	2				1134-6274-01	Redskapsfäste kpl. ....	Attachment assy .....		
51	1				1134-9026-01	• Lagerbussning .....	• Bearing bush kit .....	Sats 4 st/kit of 4	
52	1				9501-0502-00	• Smörjnippel .....	• Grease joint .....		
98					9545-0204-00	Innerslang .....	Inner tube .....	Reservdel/spare part	
99					9545-0203-00	Innerslang .....	Inner tube .....	Reservdel/spare part	

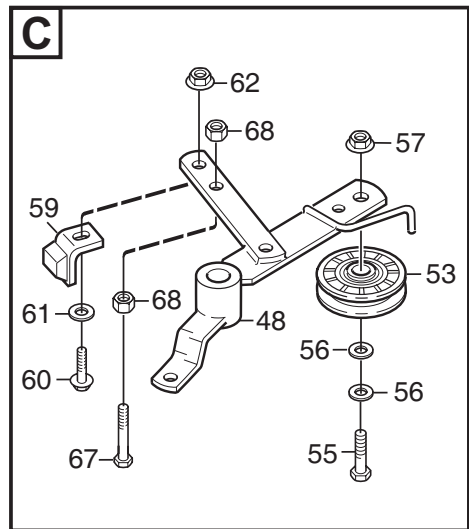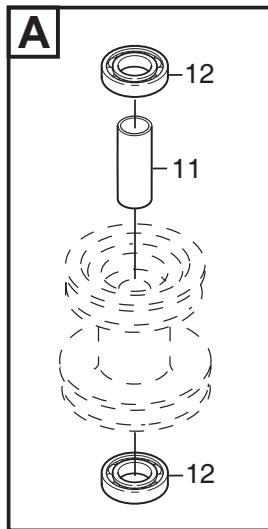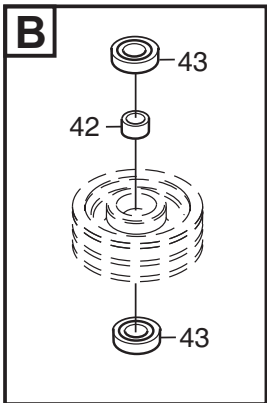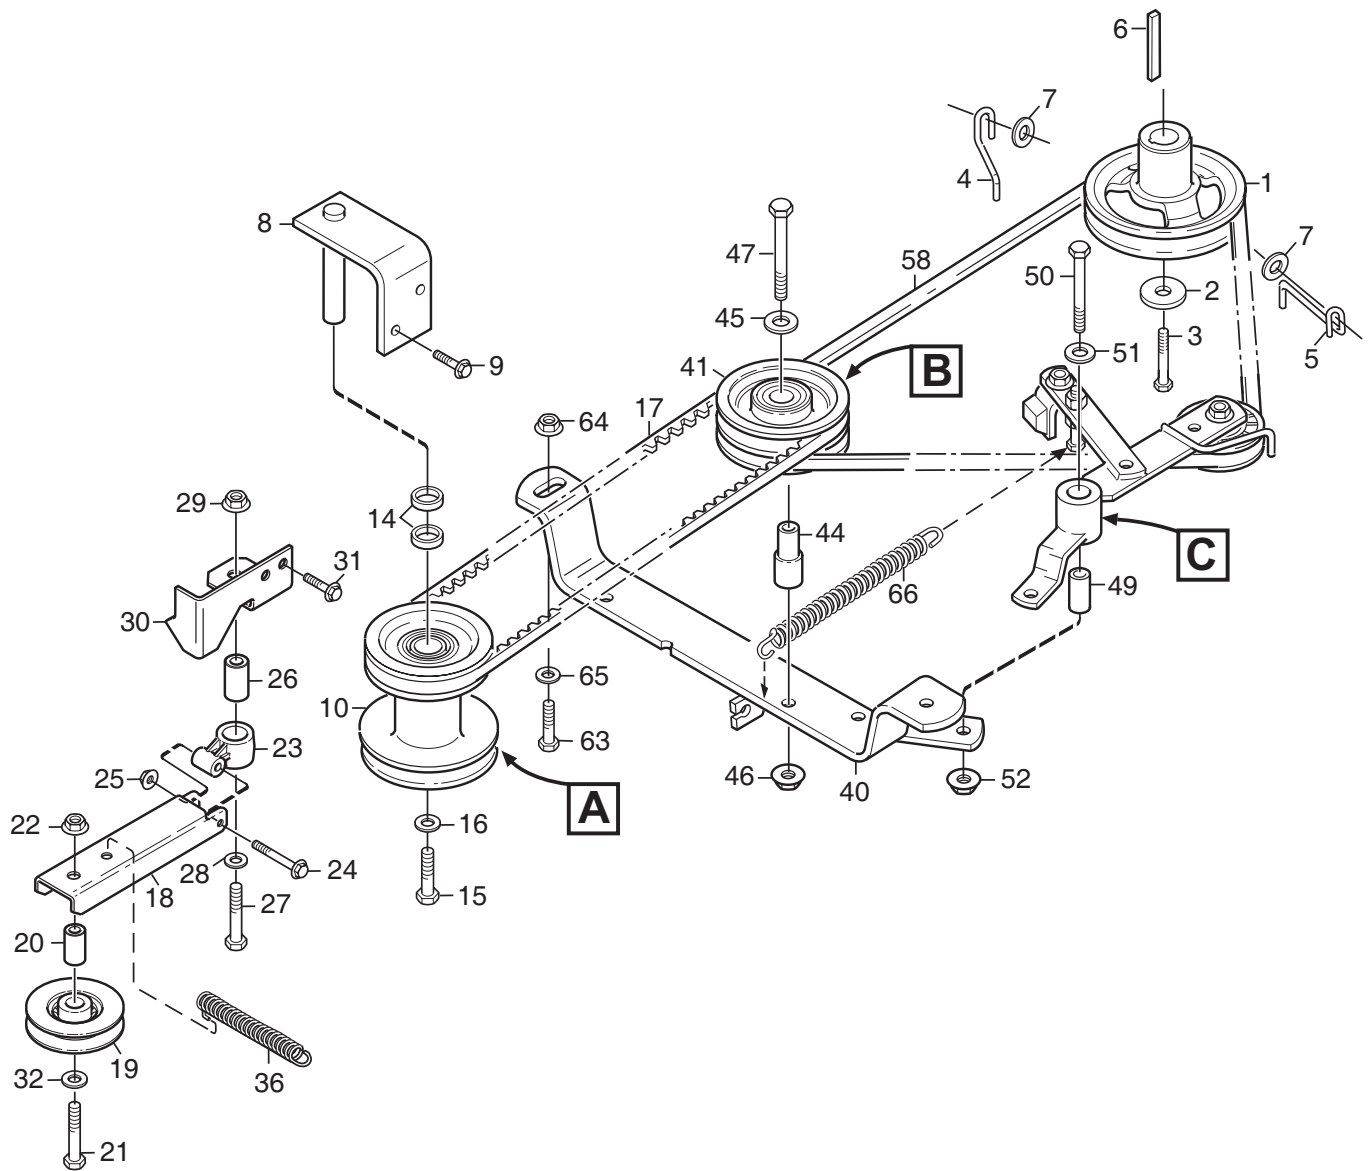

Utgåva Issue		Bildnr Picture No		VILLA KRAFTUTTAG		VILLA POWER TAKE-OFF		Sida Page		
2011-11		1512F						286		
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2717									
X	1	1			1137-0081-01	Motorremskiva .....	Engine belt pulley .....		L = 2 1/2"	
	2	1			1134-5017-01	Bricka .....	Washer .....			
	3	1			9987-5332-16	Skruv .....	Screw .....			
	4	1			1134-5058-01	Remstyrning .....	Belt guide .....			
	5	1			1134-5057-01	Remstyrning .....	Belt guide .....			
	6	1			9600-0251-01	Kil .....	Key .....			
	7	2			9699-0056-02	Planbricka .....	Flat washer .....			
	8	1			1134-4650-01	Monteringsbygel .....	Pulley bracket .....			
	9	2			9945-0816-16	Skruv .....	Screw .....			
X	10	1			1137-0003-01	Mellanremskiva kpl. ....	Intermediate pulley .....		Inkl. pos 11- 12	
	11	1			1134-0051-12	• Distans .....	• Spacer .....			
	12	2			9549-0019-00	• Kullager .....	• Ball bearing .....			
	14	2			1134-0052-00	Lagerdistans .....	Bearing spacer .....			
	15	1			9997-1040-16	Skruv .....	Screw .....			
	16	1			9699-0035-02	Planbricka .....	Flat washer .....			
	17	1			1134-9079-01	Drivrem .....	Drive belt .....	= 9585- 0139- 01		
	18	1			1134-5231-01	Spännarm .....	Tension arm .....			
	19	1			1134-6329-01	Spännrulle .....	Tension roller .....			
	20	1			1134-4619-01	Distans .....	Spacer .....			
	21	1			9997-1060-12	Skruv .....	Screw .....			
	22	1			9747-1031-02	Låsmutter .....	Lock nut .....			
	23	1			1134-6314-01	Spännarmsfäste .....	Attachment .....			
	24	1			9997-0640-12	Skruv .....	Screw .....			
	25	1			9747-0631-02	Låsmutter .....	Lock nut .....			
	26	1			1134-4619-01	Distans .....	Spacer .....			
	27	1			9930-1050-12	Skruv .....	Screw .....			
	28	1			9699-0035-02	Planbricka .....	Flat washer .....			
	29	1			9747-1031-02	Låsmutter .....	Lock nut .....			
	30	1			1134-4708-02	Fäste .....	Bracket .....			
	31	2			9945-0816-16	Skruv .....	Screw .....			
	32	1			9699-0035-02	Planbricka .....	Flat washer .....			
	36	1			1131-1507-00	Fjäder .....	Spring .....			
	40	1			1134-5037-01	Bygel .....	Bracket .....			
	41	1			1137-0004-01	Centrumremskiva kpl. ....	Centre pulley assy .....	Inkl. pos 42- 43		
	42	1			1134-0051-09	• Distans .....	• Spacer .....			
	43	2			9549-0019-00	• Kullager .....	• Ball bearing .....			
	44	1			1134-1839-02	Mellanaxel .....	Shaft .....			
	45	1			9699-0035-02	Planbricka .....	Flat washer .....			
	46	1			9739-1031-22	Mutter .....	Nut .....			
	47	1			9997-1070-12	Skruv .....	Screw .....			
X	48	1			1137-0144-01	Kopplingsarm .....	Clutch lever .....			
	49	1			1134-1565-10	Distans .....	Spacer .....			
	50	1			9997-0860-12	Skruv .....	Screw .....			
	51	1			9699-0056-02	Planbricka .....	Flat washer .....			
	52	1			9739-0831-22	Mutter .....	Nut .....			
	53	1			1134-9027-02	Spännrulle- grå .....	Tension roller- grey .....			
	55	1			9997-1035-16	Skruv .....	Screw .....			
	56	2			9699-0035-02	Planbricka .....	Flat washer .....			
	57	1			9739-1031-22	Mutter .....	Nut .....			
	58	1			1134-9146-01	Drivrem .....	Drive belt .....	= 9585- 0204- 01		
	59	1			1134-4164-03	Bromsklots .....	Brake pad .....			
	60	1			9959-0820-16	Skruv .....	Screw .....			
	61	1			9699-0090-02	Planbricka .....	Flat washer .....			
	62	1			9747-0831-02	Mutter .....	Lock nut .....			
	63	2			9959-0820-16	Skruv .....	Screw .....			
	64	2			9739-0831-22	Mutter .....	Nut .....			
	65	1			9699-0056-02	Planbricka .....	Flat washer .....			
	66	1			1131-1506-00	Fjäder .....	Spring .....			
	67	1			9997-0860-12	Skruv .....	Screw .....			
	68	2			9739-0831-22	Mutter .....	Nut .....			