



Reservdelskatalog Parts Catalogue

Park 720 PW


2F6220620/S15 - Season 2015

- Use GLOBAL GARDEN PRODUCT Genuine Spare Parts specified in the parts list for repair and/or replacement.
 - The contents described in the parts list may change due to improvement.
 - The drawings of the spare parts are only indicative and might not represent the part in question exactly.
 - The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair and/or replacement, make sure that the illustrated parts list is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.





© Copyright 2015 Global Garden Products

All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from GLOBAL GARDEN PRODUCTS.


www.stiga.com

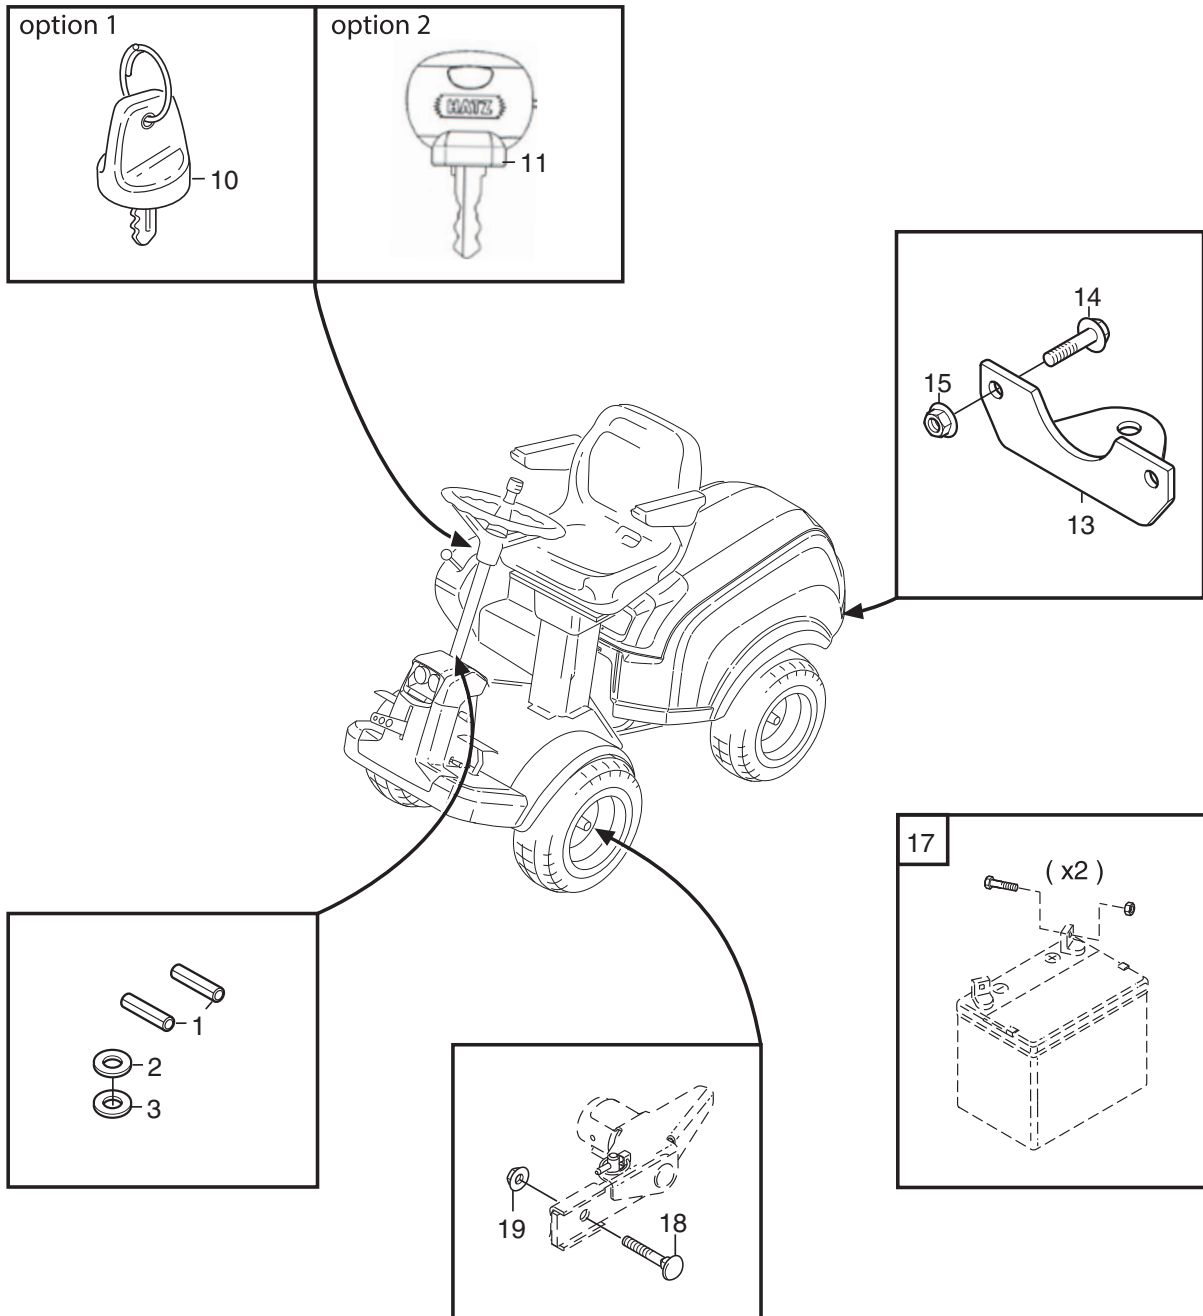


Utgåva Issue 11 - 2015		Monteringsdetaljer Assembly parts			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	2	9595-0262-00	Spännstift	Locating Pin	0.5 mm
2	1	9699-0103-02	Bricka	Washer	1.0 mm
3	1	9699-0114-02	Bricka	Washer	1.0 mm
10	2	1134-4734-01	Tändningsnyckel	Ignition Key	
13	1	1134-5512-01	Dragplat5-01	Towing Plate	
14	2	9959-0820-16	Skruv	Screw	
15	2	112154220/0	Mutter	Nut	
17	1	1134-6113-02	Skruv	Screw	
18	2	9898-1035-16	Skruv	Screw	
19	2	9739-1031-22	Mutter	Nut	

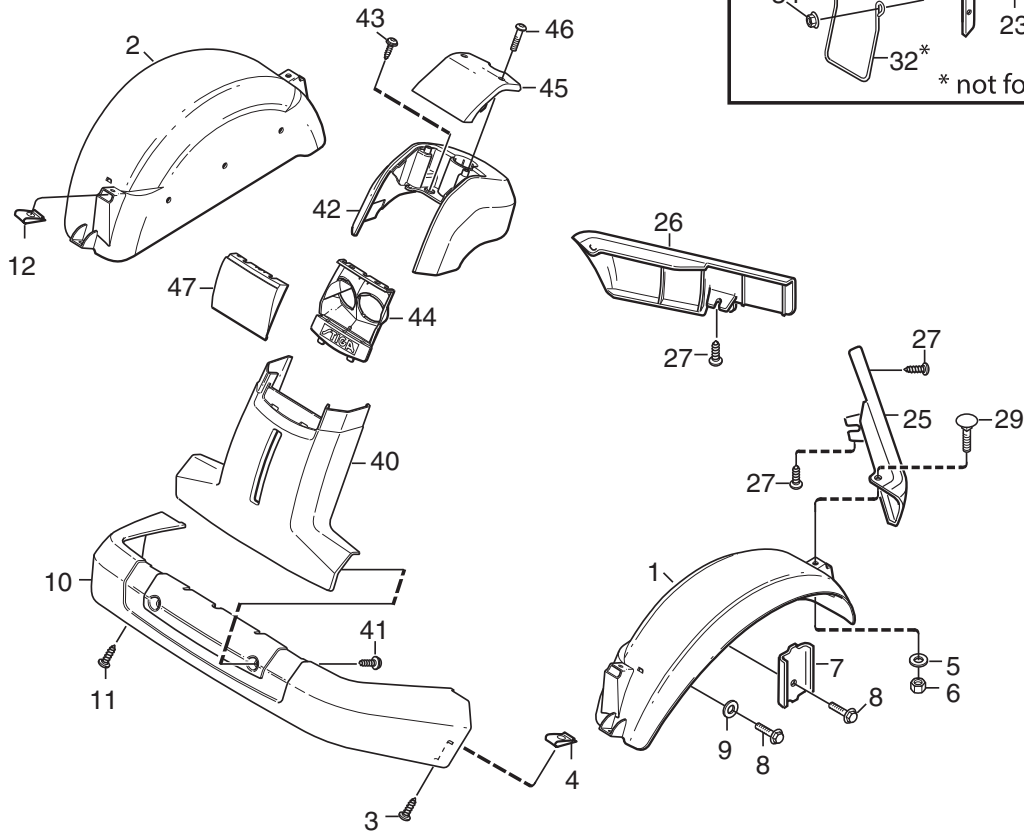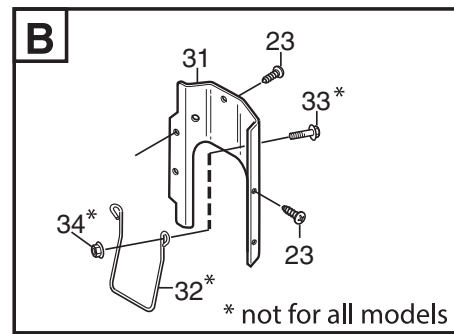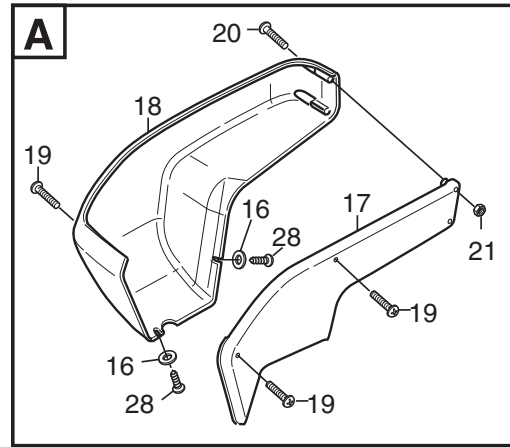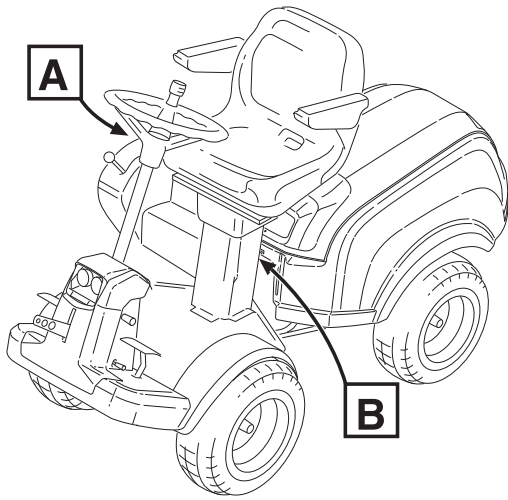



Utgåva Issue 11 - 2015		Kaross Body works			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1137-0048-01	Framskärm-Vä	Mud Guard, Front-Lh	
2	1	1137-0048-02	Framskärm-Hö	Mud Guard, Front-Rh	
3	2	9893-0616-16	Skruv Relä	Screw Relay	
4	2	1134-4176-01	Clips	Clips	
5	2	9699-0060-02	Bricka	Washer	
6	2	112154510/0	Mutter	Nut	
7	2	1137-0088-01	Stödplat	Support Plate	
8	6	9945-0816-16	Skruv	Screw	
9	4	112523060/0	Bricka	Washer	
10	1	1137-0049-01	Stötfangare-Fram	Front Bumper	
11	6	9893-0616-16	Skruv Relä	Screw Relay	
12	2	1134-4176-01	Clips	Clips	
16	2	9699-0099-02	Bricka	Washer	
17	1	1134-4360-01	Kapa-Inre (1-00)	Cover-Inner	
18	1	1134-3979-01	Kapa Yttre1-00	Cover-Outer	
19	3	9946-0525-16	Skruv	Screw	
20	2	9950-0570-12	Skruv	Screw	
21	2	112154330/0	Mutter	Nut	
23	4	9893-0616-16	Skruv Relä	Screw Relay	
25	1	1134-3970-05	Kantlist-Vä (Gra) 7-14	Moulding-Left (Grey)	
26	1	1134-3970-02	Kantlist-Hö (Gra) 7-14	Moulding Right-Grey	
27	4	9893-0616-16	Skruv Relä	Screw Relay	
28	2	9840-8013-16	Skruv	Screw	
29	2	112815200/0	Skruv	Screw	
31	1	1134-6461-01	Bakstycke 1-00	Rear Plate	
32	1	1134-6460-01	Skyddsbygel	Protective Loop	not in all models
33	2	9959-0820-16	Skruv	Screw	not in all models
34	2	112154220/0	Mutter	Nut	not in all models
40	1	1137-0050-01	Frontkapa-Nedre	Front Panel-Lower	
41	2	112728697/0	Skruv	Screw	
42	1	1137-0051-01	Frontkapa-Övre	Front Panel-Upper	
43	2	9946-0525-16	Skruv	Screw	
44	1	1137-0052-01	Lamphallare	Lamp Holder	
45	1	1137-0053-01	Toppkapa	Top Panel	
46	2	112728697/0	Skruv	Screw	
47	1	1137-0054-01	Lampglas	Lamp Glass	

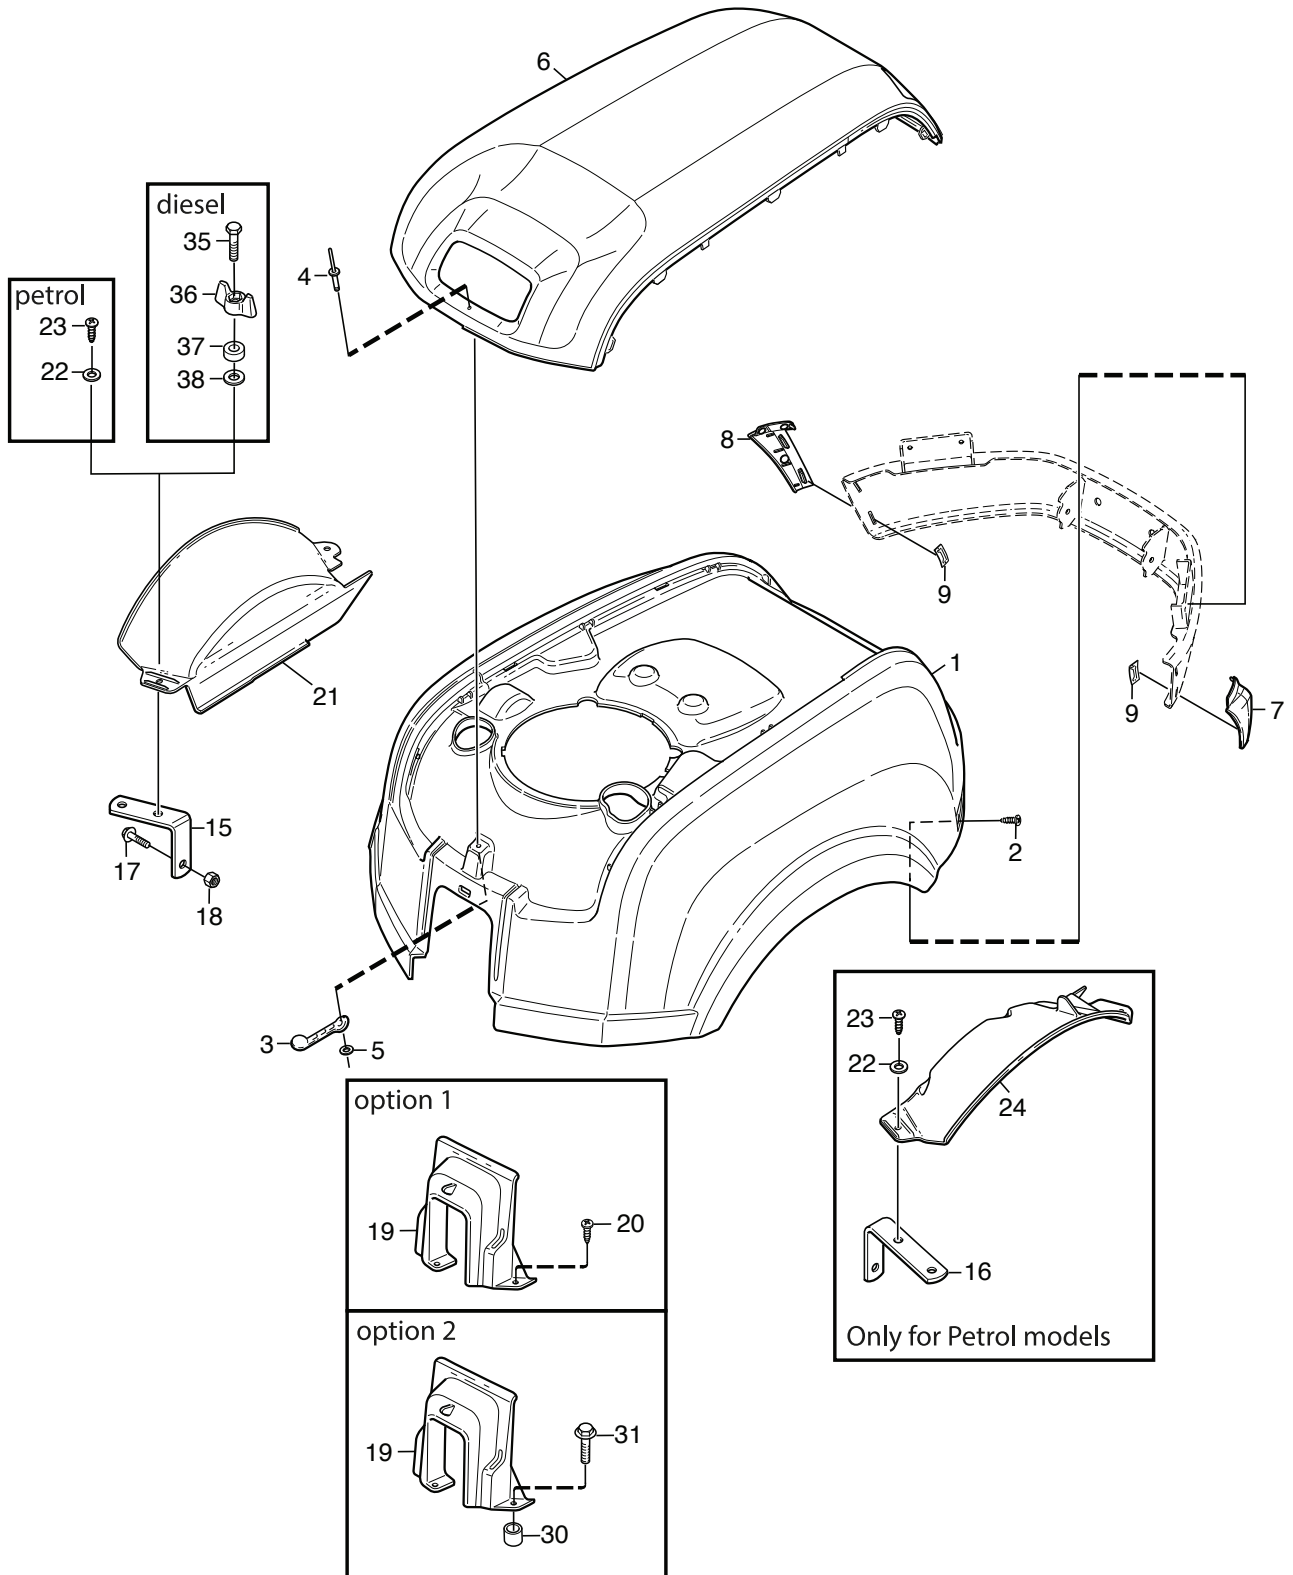


Utgåva Issue 11 - 2015		Kaross Body works			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-6025-01	Motorhuv(1-00)	Engine Hood	
2	4	9893-0616-16	Skruv Relä	Screw Relay	
3	1	1134-9028-01	Gummistropp (3 St)	Rubber Strap (3 Pcs)	Sats 3 st/kit of 3
4	1	9632-0513-00	Popnit1 -0420 Bs [Tap/D Bs] 3,2X20	Pop Rivet	
5	1	9699-0120-02	Bricka	Washer	
6	1	1134-6026-01	Motorlucka (7-14)	Engine Cover	
7	1	1134-6027-01	Ändavslut Stötfangare-Vä	Bumper End-Lh	
8	1	1134-6027-02	Ändavslut Stötfangare-Hö	Bumper End-Rh	
9	4	1134-6310-01	Clips	Clip	
15	1	1134-4012-03	Stöd-Hö	Support, Right	
16	1	1134-4012-04	Stöd-Vä	Support, Left	Not for Diesel models
17	1	9959-0820-16	Skruv	Screw	
18	1	112154220/0	Mutter	Nut	
19	1	112154220/0	Mutter	Nut	
20	3	9893-0616-16	Skruv Relä	Screw Relay	
21	1	1134-4800-01	Innerskärm-Hö (Park)	Inner Mud Guard-Rh (Park)	
22	4	9699-0060-02	Bricka	Washer	Not for Diesel models
23	4	9893-0616-16	Skruv Relä	Screw Relay	Not for Diesel models
24	1	1134-4801-01	Innerskärm-Vä (Park)	Inner Mud Guard-Lh (Park)	Not for Diesel models
30	3	1137-0020-02	Distans	Spacer	Only for models with Vanguard 18
31	3	112735594/0	Skruv	Screw	Only for models with Vanguard 18

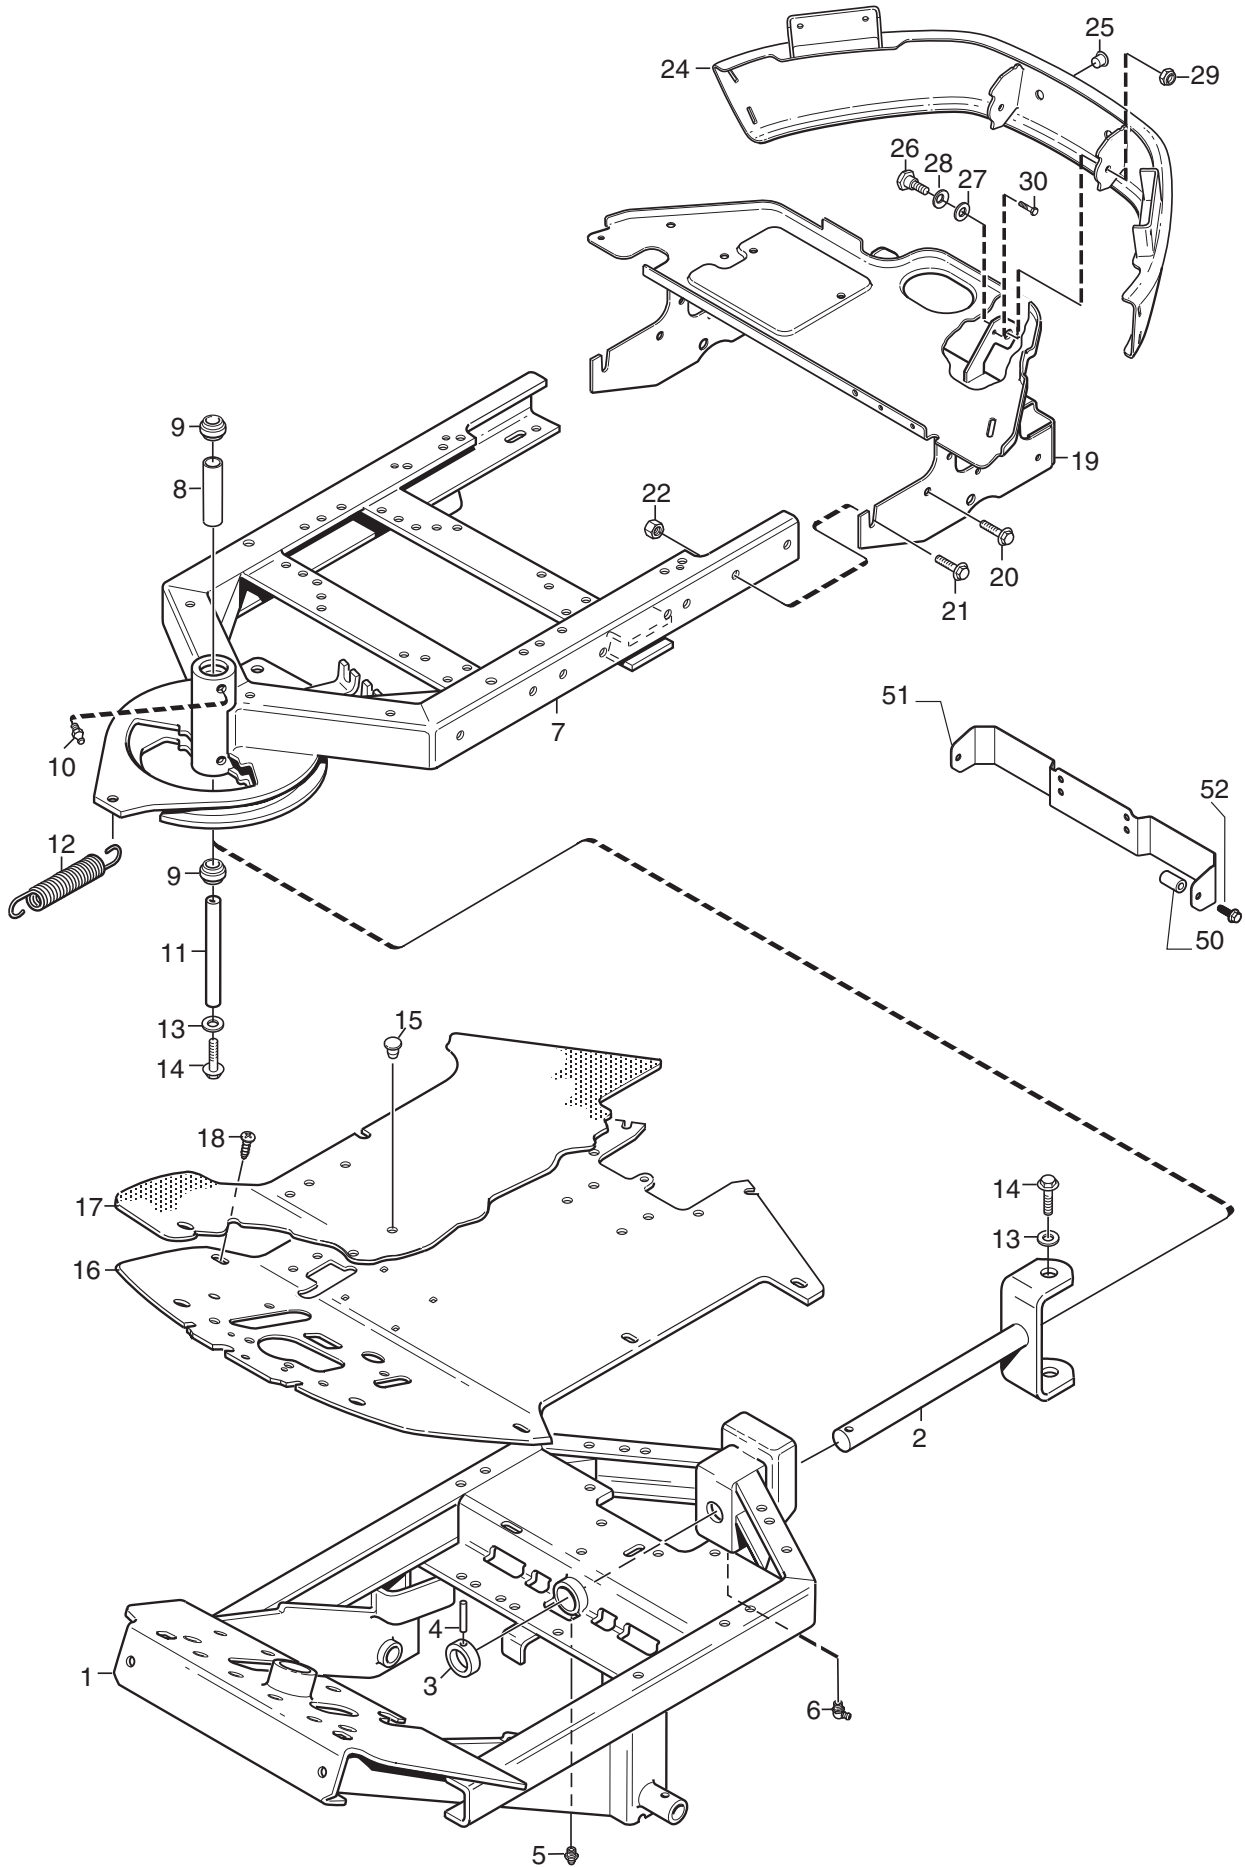

Utgåva Issue 11 - 2015		Ram Frame			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	387800011/0	Ram-Främre Kpl	Frame Front	Incl. 2-3-4-5-6
2	1	1134-3963-02	Midjegaffel Service 5-01 H10	Fork	
3	1	1134-0031-00	Ledaxelstopp	Pivot Shaft Stop	
4	1	9595-0262-00	Spännstift	Locating Pin	
5	1	9501-0500-00	Smörjkopp Kort Rak	Grease Dispenser	Rak/straight
6	1	9501-0504-01	Smörjnippel	Grease Nipple M6 90	90°
12	1	1134-2171-01	Fjäder	Spring	
7	1	1134-6466-02	Ram-Bakre Kpl	Frame-Rear Assy	Incl. 8-9-10
8	1	1134-5705-01	Distans	Spacer	
9	2	9547-0001-00	Ledlager Ge17Es	Bearing	
10	2	9501-0500-00	Smörjkopp Kort Rak	Grease Dispenser	
11	1	1134-5988-01	Centrumaxel	Centre Shaft	
13	2	9699-0035-02	Bricka	Washer	
14	2	9959-1025-16	Skruv	Screw	
15	2	9403-0048-70	Täckpropp lkpt 13-6,5S	Cover Plug	
16	1	1134-6586-01	Durk (5-01)	Floor Plate	
17	1	1134-6372-04	Durkmatta	Floor Mat Hst	
18	2	9893-0616-16	Skruv Relä	Screw Relay	
19	1	1134-5944-01	Tankhylla Kpl. 5-01	Tank Shelf Assy	
20	2	9945-0816-16	Skruv	Screw	
21	2	9959-0820-16	Skruv	Screw	
22	2	112154220/0	Mutter	Nut	
24	1	1134-5676-01	Stötfangare	Rear Bumper	
25	2	1134-4100-01	Täckpropp	Plug	
26	2	1134-0240-00	Skruv	Screw	
27	2	1134-4242-01	Distansbricka	Washer	
28	2	9665-0002-00	Bricka	Washer	
29	2	112155000/0	Mutter	Nut	
30	2	9943-0516-16	Skruv	Screw	
50	1	1134-1565-09	Distans	Spacer	
51	1	387602503/0	Skydd	Protection	
52	2	9945-0825-16	Skruv	Screw	

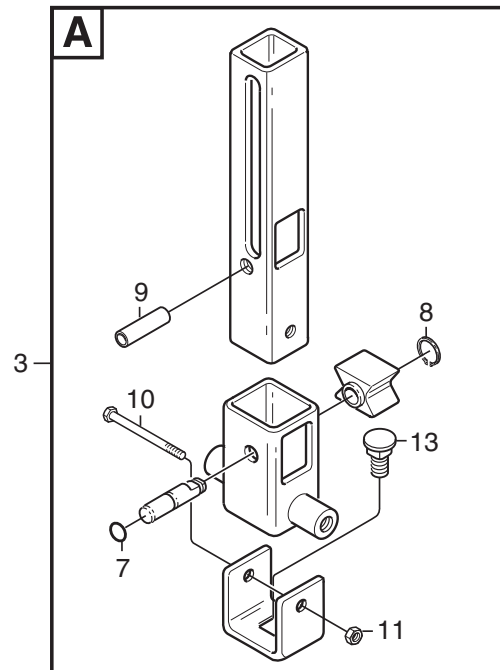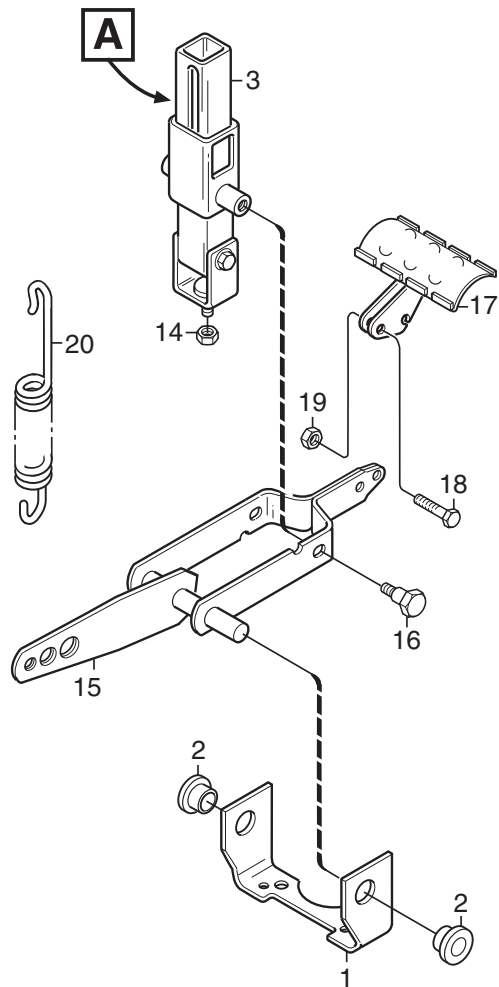


Utgåva Issue 11 - 2015		Pedallyft Pedal lift			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-4117-01	Fäste	Bracket	
2	2	1134-2684-01	Lager	Bearing	
3	1	1134-4945-01	Lyftspärr kpl	Lift Catch Assy	
7	1	9404-0027-01	O-ring	O-ring	
8	1	9650-0039-04	Sparring Sga 8	Lock Ring	
9	1	9595-0276-01	Spiralspännstift 8*24	Locating Pin	
10	1	112689500/0	Skruv	Screw	
11	1	112154510/0	Mutter	Nut	
13	1	9897-0820-16	Skruv	Screw	
14	1	112155000/0	Mutter	Nut	
15	1	112155000/0	Mutter	Nut	
16	2	1134-0240-00	Skruv	Screw	
17	1	1134-4938-01	Lyftpedal	Lift Pedal	
18	2	112791500/0	Skruv	Screw	
19	2	9739-0631-22	Mutter	Nut	
20	1	4231-0013-00	Fjäder	Spring	

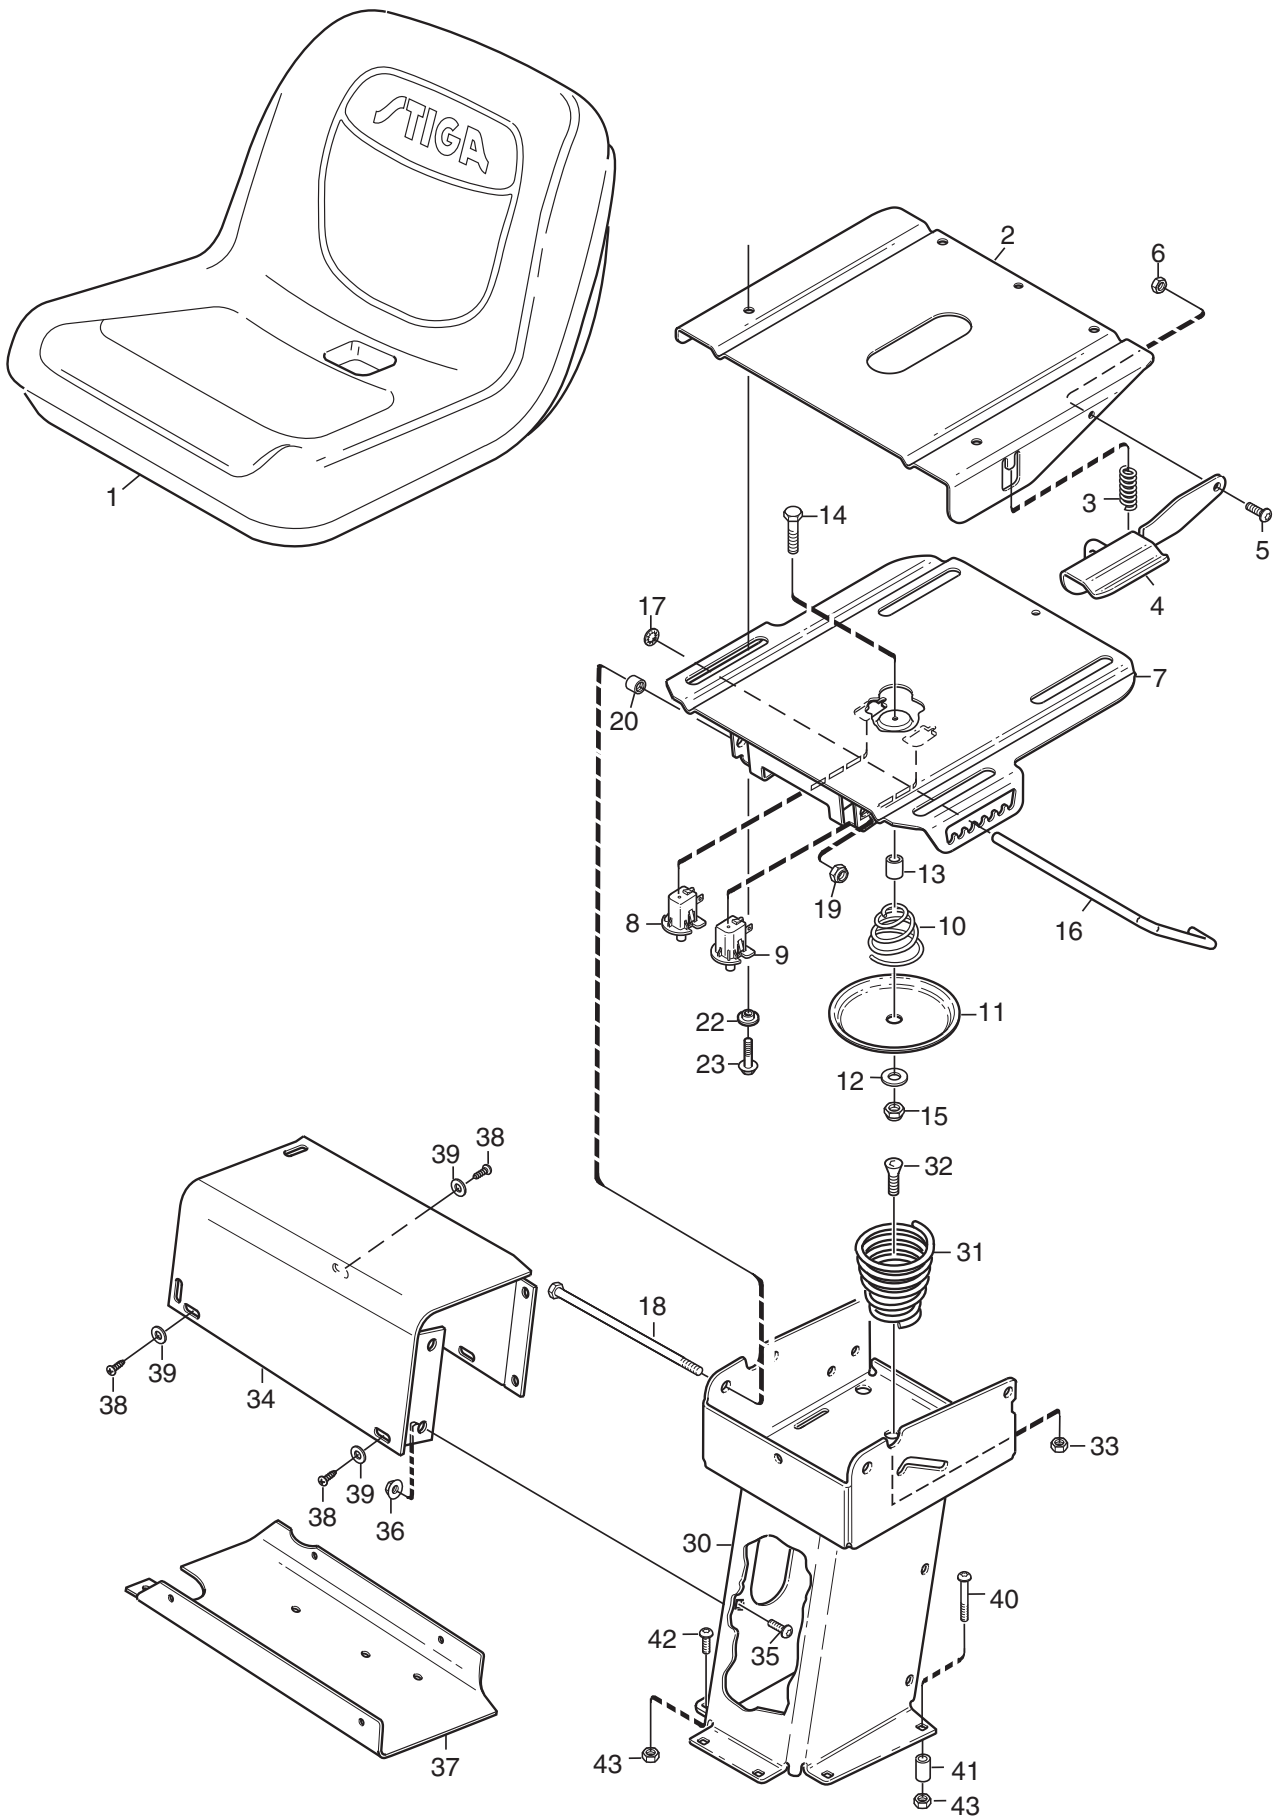


Utgåva Issue 11 - 2015		Seat			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-6444-01	Sits (Xb 150) Stiga	Seat	
2	1	1134-6090-01	Glidplatta-Övre 5-01	Slide Plate-Upper	
3	1	1134-3262-01	Fjäder	Spring	
4	1	1134-6073-01	Handtag Kpl 5-01	Handle Assy	
5	1	9893-0616-16	Skruv Relä	Screw Relay	
6	1	112154510/0	Mutter	Nut	
7	1	1134-6068-01	Glidplatta-Undre Kpl 5-01	Slide Plate-Lower	
8	1	1134-3156-01	Brytare	Switch	
9	1	1134-3156-02	Brytare (gra)	Switch	
10	1	1134-5302-01	Fjäder	Spring	
11	1	1134-5299-01	Tryckplatta	Push Plate	
12	1	9699-0090-02	Bricka Bricka	Washer Washer	
13	1	1134-1565-06	Distans	Spacer	
14	1	112691115/0	Skruv	Screw	
15	1	112155000/0	Mutter	Nut	
16	1	1134-5179-01	Spärr	Catch	
17	1	112604899/0	Starlock P6704 8 Fz	Crown Fastener	
18	1	9997-0818-02	Skruv	Screw	
19	2	112155000/0	Mutter	Nut	
20	2	1134-5626-03	Distans	Spacer	
22	4	1134-6078-01	Bricka	Flange Washer	
23	4	9959-0820-16	Skruv	Screw	
30	1	1134-5698-01	Sitskonsol Kpl 1-00	Seat Bracket Assy	
31	1	1134-4256-01	Fjäder	Spring	
32	1	9924-1235-19	Skruv	Screw	
33	1	112156603/0	Mutter	Nut	
34	1	1134-3990-01	Armsvep Kpl 041-00	Attachment-Side Panel	
35	2	9897-0820-16	Skruv	Screw	
36	2	112154220/0	Mutter	Nut	
37	1	1134-4130-01	Undre Lock (1-00)	Cover Lower	
38	4	9840-8013-16	Skruv	Screw	
39	4	9699-0099-02	Bricka	Washer	
40	2	9897-0880-12	Skruv	Screw	
41	2	1134-1565-08	Distans	Spacer	
42	4	9897-0820-16	Skruv	Screw	
43	6	112155000/0	Mutter	Nut	

Utgåva Issue 11 - 2015		Styrning Steering			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-6374-06	Kedja	Chain	83 links
2	3	1134-6374-02	Kedja	Chain	41 links
3	1	1134-6374-04	Kedja	Chain	45 links
4	1	1134-3550-01	Ändnippel (L110)	End Nipple	L = 110 mm
5	4	1134-3565-01	Skarvnippel	Connection Nipple	
6	10	1134-2824-01	Kedjelas	Chain Lock	
7	1	1134-3550-02	Ändnippel (L90)	End Nipple	L = 90 mm
8	2	9699-0090-02	Bricka Bricka	Washer Washer	
9	2	112155000/0	Mutter	Nut	
10	4	1134-2816-01	Kedjehjul	Sprocket	
11	4	1134-0041-02	Bussning	Bushing	
12	4	9699-0035-02	Bricka	Washer	
13	2	112794900/0	Skruv	Screw	
14	2	9897-1040-12	Skruv	Screw	
15	4	9739-1031-22	Mutter	Nut	
16	3	1134-3547-01	Kedjehjul	Sprocket	
17	2	1134-0041-01	Bussning	Bushing	
18	2	1134-0046-00	Wireklämma	Wire Clamp	
19	2	112794300/0	Skruv	Screw	
20	2	9739-1031-22	Mutter	Nut	
21	1	1137-0066-01	Rattstang Skydd	Steering Column Cover	
22	4	9897-0820-16	Skruv	Screw	
23	4	112154220/0	Mutter	Nut	
24	1	1137-0044-01	Rattrör Nedre Kpl	Steering Column Assy	
25	1	9549-0017-00	Kullager	Ball Bearing	
26	1	9945-0816-16	Skruv	Screw	
27	1	1137-0045-01	Rattstang	Steering Rod	
28	1	1134-4114-01	Bussning	Bushing	
29	1	1134-4118-01	Koppling	Coupling	
30	2	9595-0256-01	Spännstift 6X28 Typ N Iso 8750	Locating Pin	
31	1	9695-0011-00	Bricka	Washer	
42	1	1137-0446-01	Momentförstärkare	Steering Booster	Incl. pos 43
43	1	1139-2106-01	Drev (F Momentförstärkare)	Pinion (Steering Booster)	
44	1	1139-2074-01	Rep.Sats-Momentförstärkare	Seal Kit-Steering Booster	
45	3	9939-0612-16	Skruv	Screw	
47	1	1134-7073-01	Vinkeladapter	Hydraulic Coupling 90	
48	1	1137-0195-02	Hydraulslang	Hydraulic Hose	L = 1740 mm
49	1	1134-6323-01	Banjoskruv 3/8"	Banjo Bolt 3/8	
50	1	1137-0214-03	Hydraulslang	Hydraulic Hose	L = 2050 mm
51	2	1134-4948-02	Bricka	Washer	
52	2	1134-4282-01	Hydraulnippel	Hydraulic Nipple	
53	1	1137-0070-01	Rattrör-Inre	Steering Tube-Inner Assy	
54	1	1134-5177-01	Slid	Slide	
55	1	9710-0631-12	Lasmutter	Nut	
57	1	337394201/0	Vingmutter	Wing Nut	
58	1	1137-0112-01	Bygel	Guide	
59	2	112815200/0	Skruv	Screw	
60	2	9739-0631-22	Mutter	Nut	
61	1	1134-3817-01	Fjäder	Spring	L = 58 mm





Utgåva Issue 11 - 2015		Styrning Steering			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
62	1	1134-3817-02	Fjäder	Spring	L = 33 mm
63	1	337670201/0	Bricka	Washer	
64	2	9404-0028-01	O-Ring 11,89 X 1,98	O-ring	
70	1	1134-6379-02	Styrkedja Fz K/K, L/K Smst	Steering Chain Assy	Incl. pos 1 - 6
71	1	387520107/0	Rattstang	Steering Column	
72	1	112620299/0	Spännstift	Elastic Pin	
73	1	112583500/0	Lasbricka	Grower	
74	1	112793102/0	Skruv	Screw	
75	1	337580550/0	Styrplåt Kpl	Steering Plate	

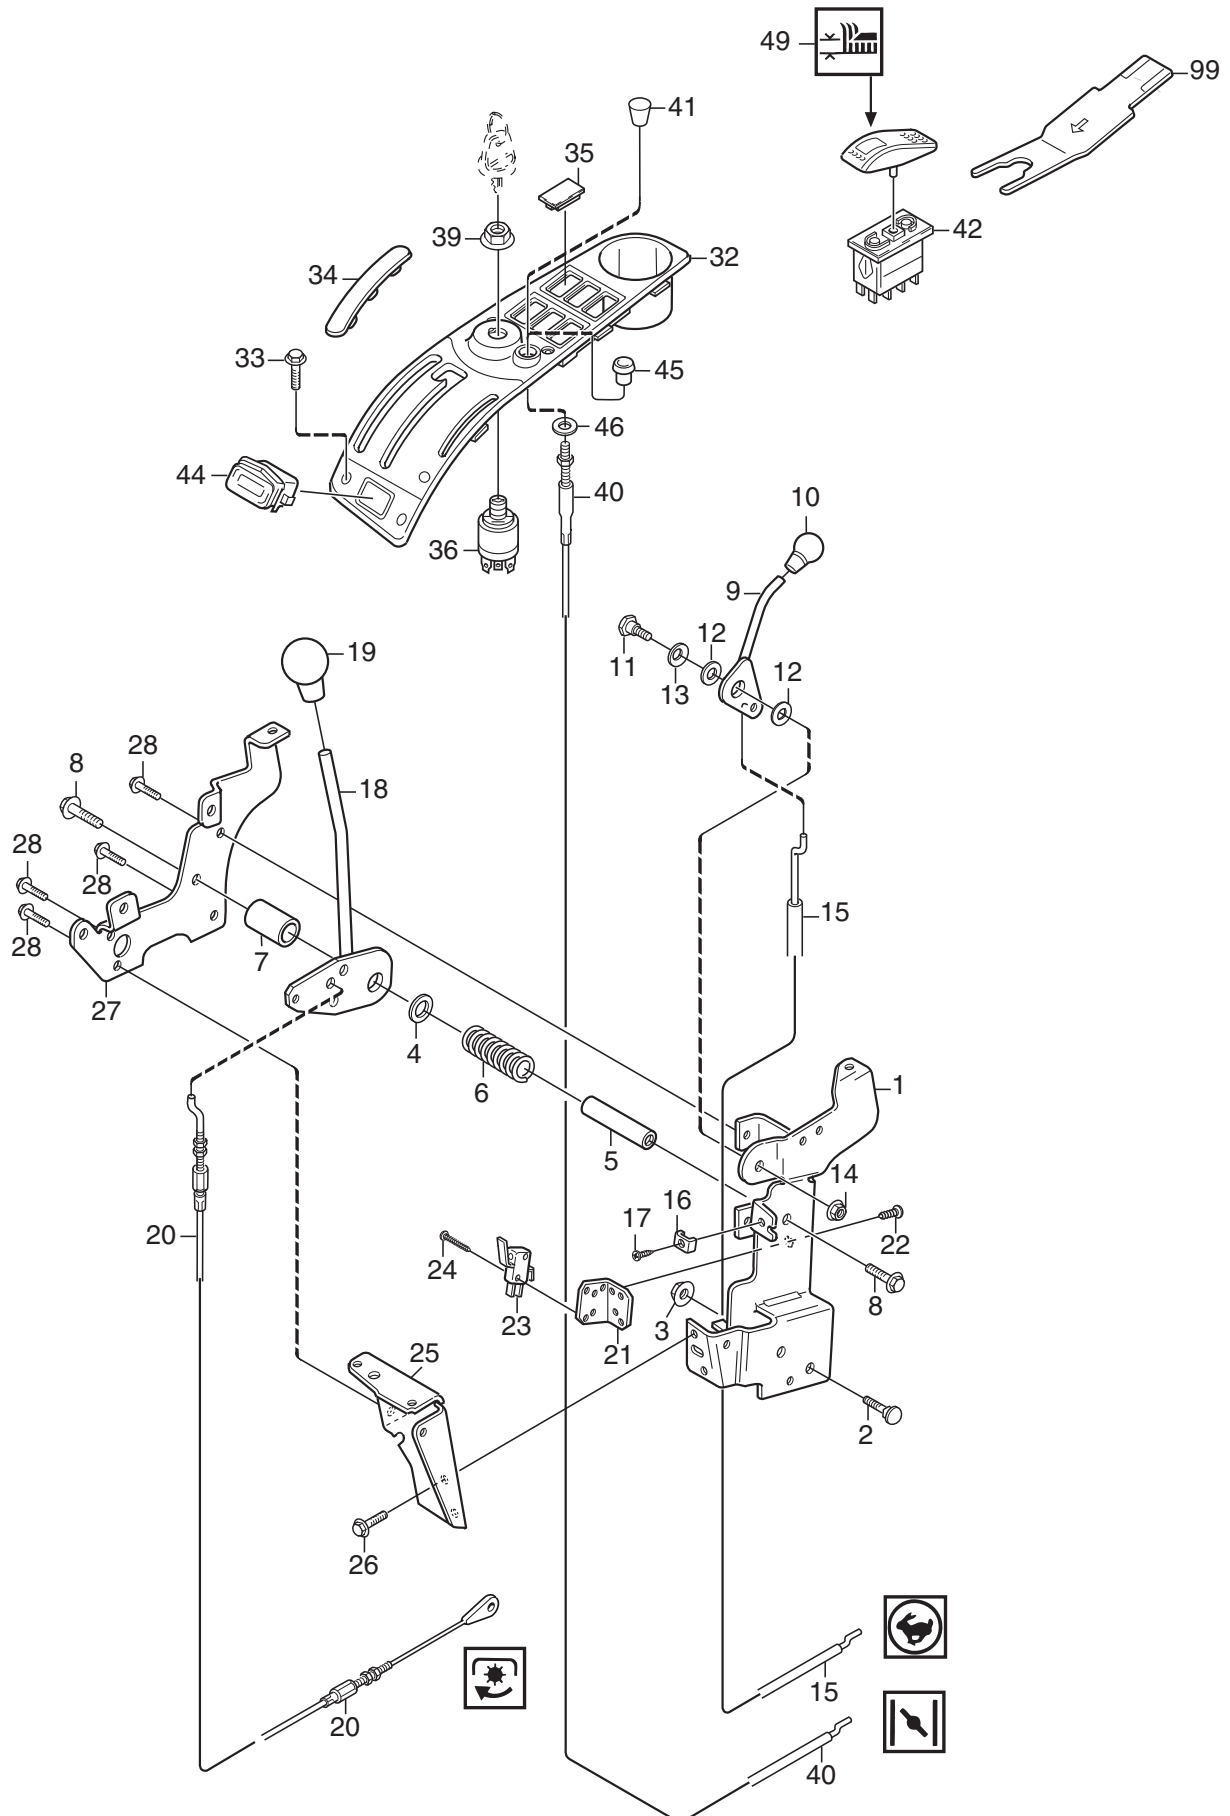


Utgåva Issue 11 - 2015		Handreglage		Hand controls	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-4156-01	Vinkelhallare Kpl 24	Panel Bracket-Inner	
2	2	9897-0820-16	Skruv	Screw	
3	2	112154220/0	Mutter	Nut	
4	1	9695-0011-00	Bricka	Washer	
5	1	1134-4065-01	Reglageaxel	Control Shaft	
6	1	1134-4079-01	Fjäder	Spring	
7	1	1134-4080-03	Reglagehylsa	Control Sleeve	
8	2	9959-0820-16	Skruv	Screw	
9	1	1134-4077-02	Arm	Lever	
10	1	1134-4078-01	Knopp	Knob	
11	1	1134-0240-00	Skruv	Screw	
12	2	1134-4242-01	Distansbricka	Washer	
13	1	9665-0002-00	Bricka	Washer	
14	1	112155000/0	Mutter	Nut	
15	1	1137-0063-03	Gasreglage	Throttle Cable	L1 = 1413 mm
16	1	1137-0115-01	Wireklämma	Wire Clamp	
17	1	9943-0516-16	Skruv	Screw	
18	1	1134-4072-01	Aggregatpak Kpl	Control Lever	
19	1	1134-2551-01	Knopp	Knob	
20	1	1134-3573-03	Kraftuttagwire	Pto Cable	
21	1	1134-5358-01	Brytarfäste	Switch Bracket	
22	2	9852-8013-16	Skruv	Screw	
23	1	9400-0360-01	Mikrobrytare	Microswitch	
24	2	9840-7716-16	Skruv	Screw	L = 16 mm
25	1	1134-6328-01	Frontfäste 5-01	Panel Bracket-Front	
26	2	9893-0616-16	Skruv Relä	Screw Relay	
27	1	1134-6327-01	Frontplat5-01	Front Plate	
28	4	9893-0616-16	Skruv Relä	Screw Relay	
32	1	1134-6096-02	Kassett	Dashboard	Only for models with Vanguard 18
33	4	9946-0525-16	Skruv	Screw	
34	1	1134-4154-01	Täckbricka	Cover	
35	5	1134-4129-01	Täckbricka	Cover	
35	6	1134-4129-01	Täckbricka	Cover	
36	1	1134-4093-01	Tändningslas	Ignition Switch	
39	1	1134-4749-01	Mutter	Nut	
40	1	1137-0062-03	Chokereglage Kpl	Choke Control	Incl. pos.41 - Only for models with Vanguard 18
41	1	1134-4338-01	Reglageknopp	Control Button-Choke	Only for models with Vanguard 18
46	1	9699-0090-02	Bricka Bricka	Washer Washer	Only for models with Vanguard 18
42	1	9400-0282-01	Brytare (Med Diod)	Switch	
44	1	9400-0384-01	Hour Counter	Hour Counter	
49	1	9400-0280-03	Vippa Höjdinst	Switch Cover-Height Adjust	
99	1	9400-0290-01	Verktyg F.Vippa	Tool	Tillbehör/Accessory

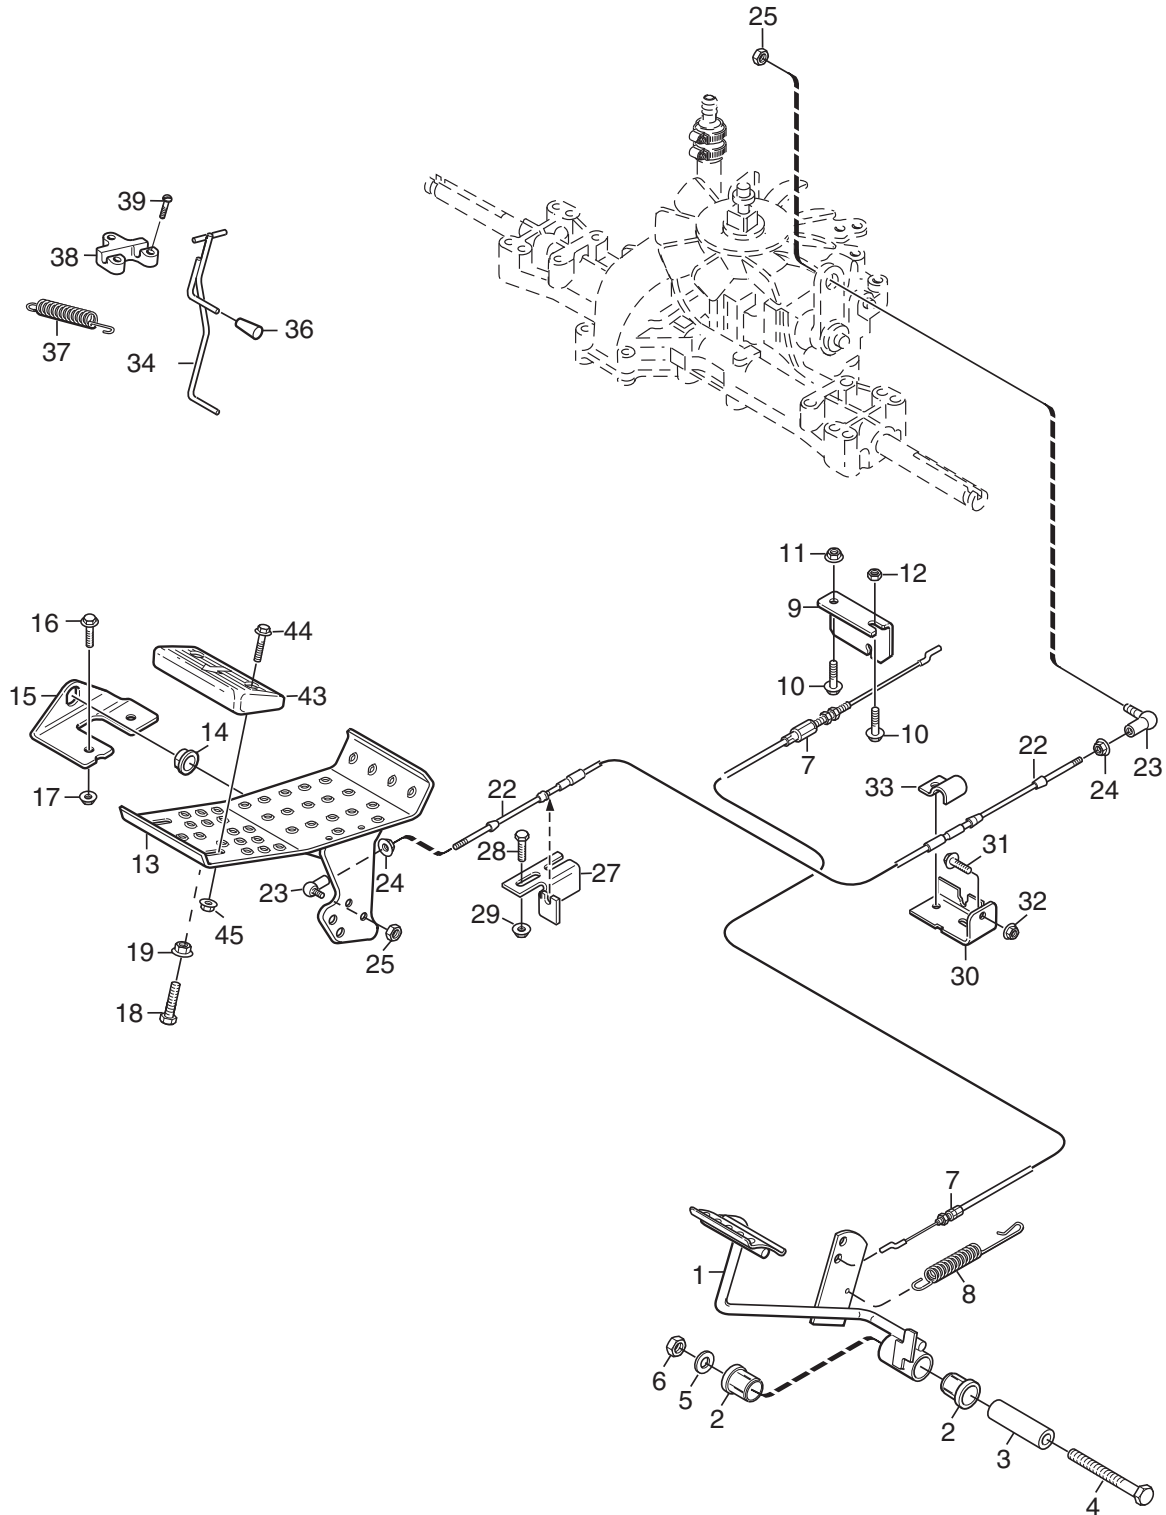


Utgåva Issue 11 - 2015		Fotreglage Foot controls			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-5655-01	Kopplingspedal Kpl	Clutch Pedal	
2	1	1134-9024-01	Lager (4 St)	Bearing	Sats 4 st/kit of 4
3	1	1134-5677-02	Distans	Spacer	
4	1	9997-1070-12	Skruv	Screw	
5	1	9699-0030-02	Bricka	Washer	
6	1	9739-1031-22	Mutter	Nut	
7	1	1134-6005-01	Reglagewire	Control Cable	
8	1	4231-0013-00	Fjäder	Spring	
9	1	1134-6467-01	Wirefäste	Cable Holder	
10	2	9959-0820-16	Skruv	Screw	
11	1	112154220/0	Mutter	Nut	
12	1	112155000/0	Mutter	Nut	
13	1	1134-6353-01	Drivpedal	Drive Pedal	
14	2	1134-6313-01	Lager	Bearing	
15	2	1134-2700-01	Fäste	Bracket	
16	2	9959-0820-16	Skruv	Screw	
17	2	112154220/0	Mutter	Nut	
18	1	9997-0835-16	Skruv	Screw	
19	1	112154220/0	Mutter	Nut	
22	1	1134-2766-05	Reglagevajer	Speed Control Cable	
23	2	9570-0001-00	Vinkellänk As8 Din 71802M5	Elbow Link	
24	2	9739-0531-22	Mutter	Nut	
25	2	112154330/0	Mutter	Nut	
27	1	1134-6317-01	Wirefäste	Wire Bracket	
28	2	9959-0620-16	Skruv	Screw	
29	2	9739-0631-22	Mutter	Nut	
30	1	1134-3395-01	Fäste 24 (5-01)	Attachment	
31	2	9959-0820-16	Skruv	Screw	
32	2	112154220/0	Mutter	Nut	
33	1	1134-2021-01	Växelwirefäste	Clamp	
34	1	1134-5353-01	Bromsstang	Brake Rod	
36	1	1134-2786-01	Knopp	Knob	
37	1	1131-1497-01	Fjäder	Brake Spring	
38	1	1134-4002-01	Fäste	Brake Rod Attachment	
39	3	112728697/0	Skruv	Screw	
43	2	1134-6340-02	Fotstöd (5-01)	Foot Rest	
44	4	9959-0620-16	Skruv	Screw	
45	4	9739-0631-22	Mutter	Nut	

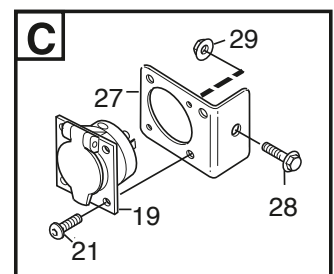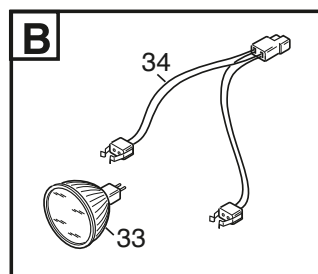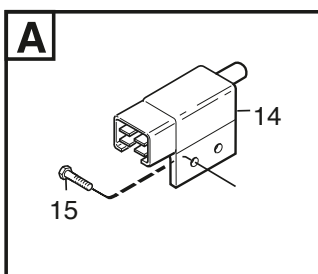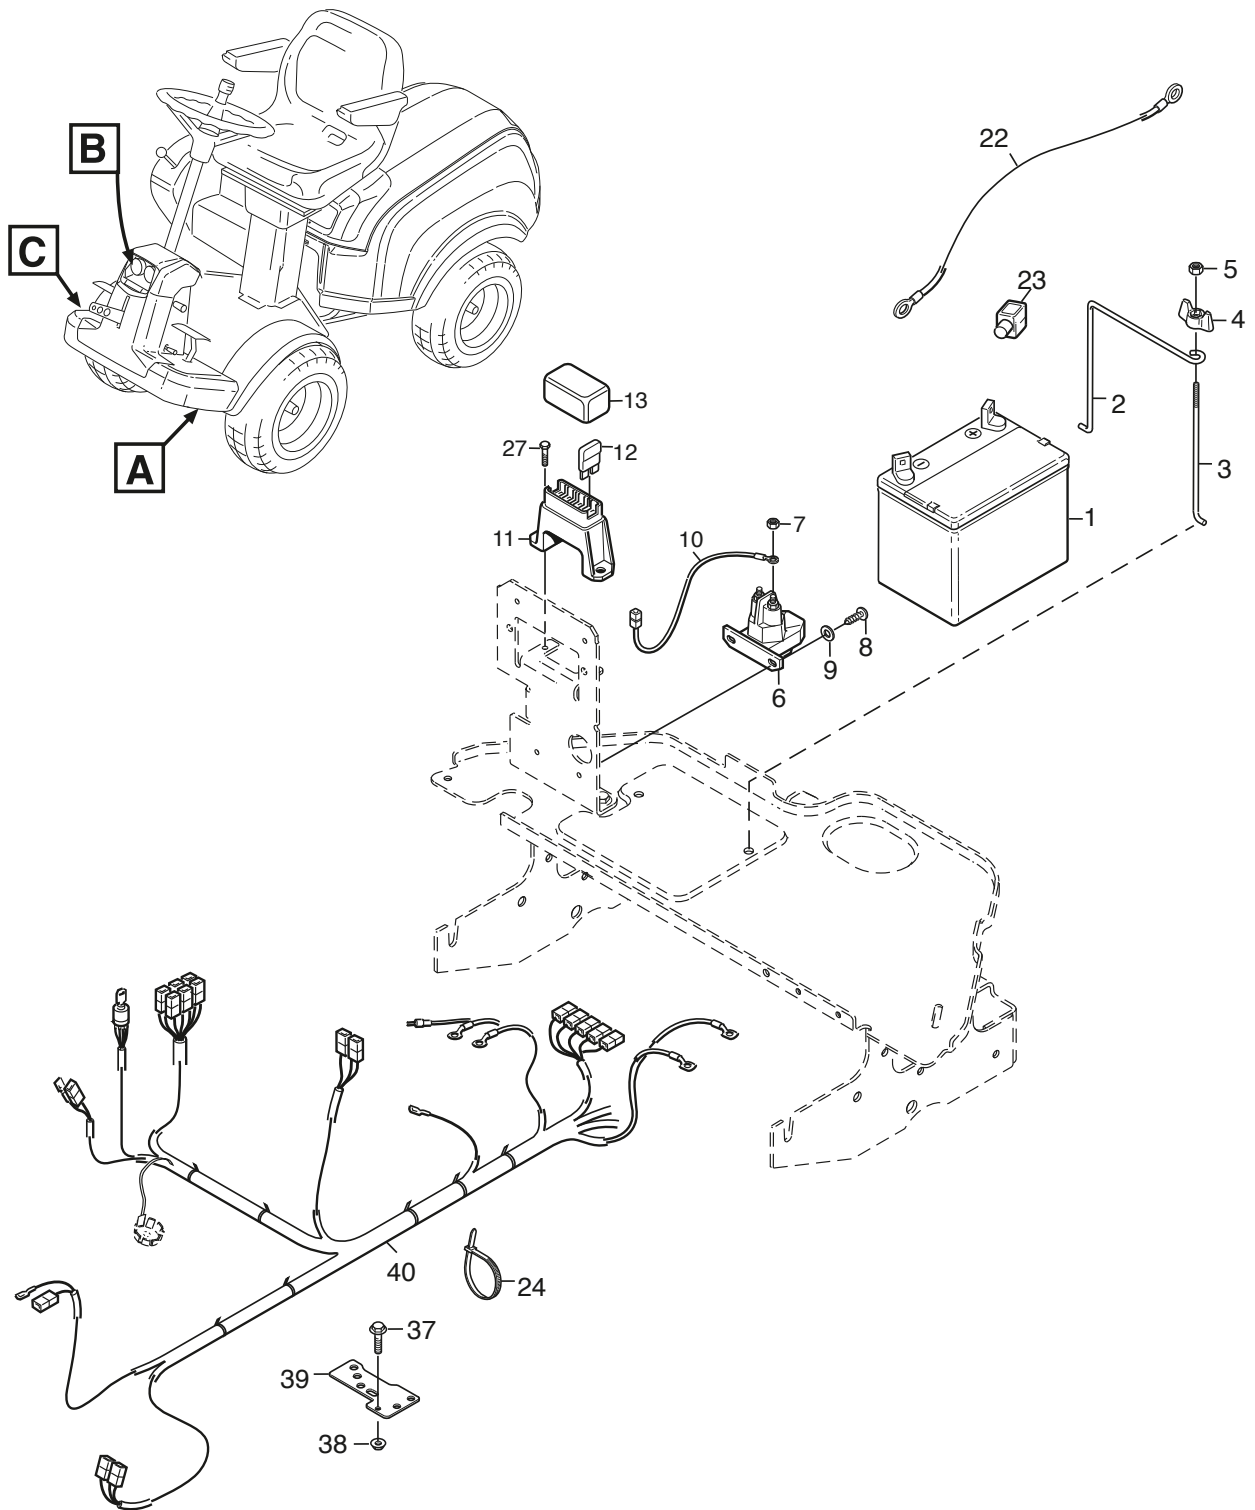


Utgåva Issue 11 - 2015		Elsystem Electrical Parts			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-5751-01	Batteri	Battery	
2	1	1134-5994-01	Batteribyggel	Battery Loop	
3	1	1134-5995-01	Batteribyggel	Battery Loop	
4	1	1134-4481-02	Vingmutter	Wing Nut	
5	1	112154510/0	Mutter	Nut	
6	1	1134-3901-01	Solenoid	Solenoid	Incl. pos 7
7	2	9743-5121-32	Mutter	Nut	
8	2	9852-8013-16	Skruv	Screw	
9	2	9699-0060-02	Bricka	Washer	
10	1	1134-4970-02	Kabel	Cable	
11	1	1134-3491-01	Säkringshallare	Fuse Holder	
12	1	1134-3496-01	Säkring Säkring 10A Röd	Fuse Fuse (10A)	10A
12	1	1134-3496-06	Säkring Vippa Säkring 20 Amp Gul	Fuse Cover-12V Fuse (20A)	20A
12	1	1134-3496-07	Säkring (30A Grön)	Fuse (30A)	30A
13	1	1134-3631-01	Lock (5-01)	Cover-Fuse Holder	
14	1	1134-3399-02	Brytare	Switch	For Petrol models
15	2	9943-0516-16	Skruv	Screw	
19	1	1134-7535-01	Honkontakt	Female Connector	
21	2	112735105/0	Skruv	Screw	
22	1	1134-0234-02	Batterikabel (+)	Battery Cable (+)	For Petrol models
23	1	1134-2310-01	Batteriskydd	Guard Cap (+)	For Petrol models
24	5	133320027/0	Bunband	Cable	
24	2	9579-0018-01	Buntband L390	Cable	L=390
27	1	1137-0075-01	Fäste	Attachment 2010	
28	1	9959-0820-16	Skruv	Screw	
29	1	112154220/0	Mutter	Nut	
33	2	9400-0358-01	Led-Lampa	Led-Lamp	
34	1	1134-7505-01	Kabelhärva	Wiring harness	
37	1	9959-0612-16	Skruv	Screw	Only for models with Vanguard 18
38	1	9739-0631-22	Mutter	Nut	Only for models with Vanguard 18
39	1	1134-6454-01	Jordplat	Ground Plate	Only for models with Vanguard 18
40	1	187040310/0	Kabelhärva	Wiring harness	For Petrol models

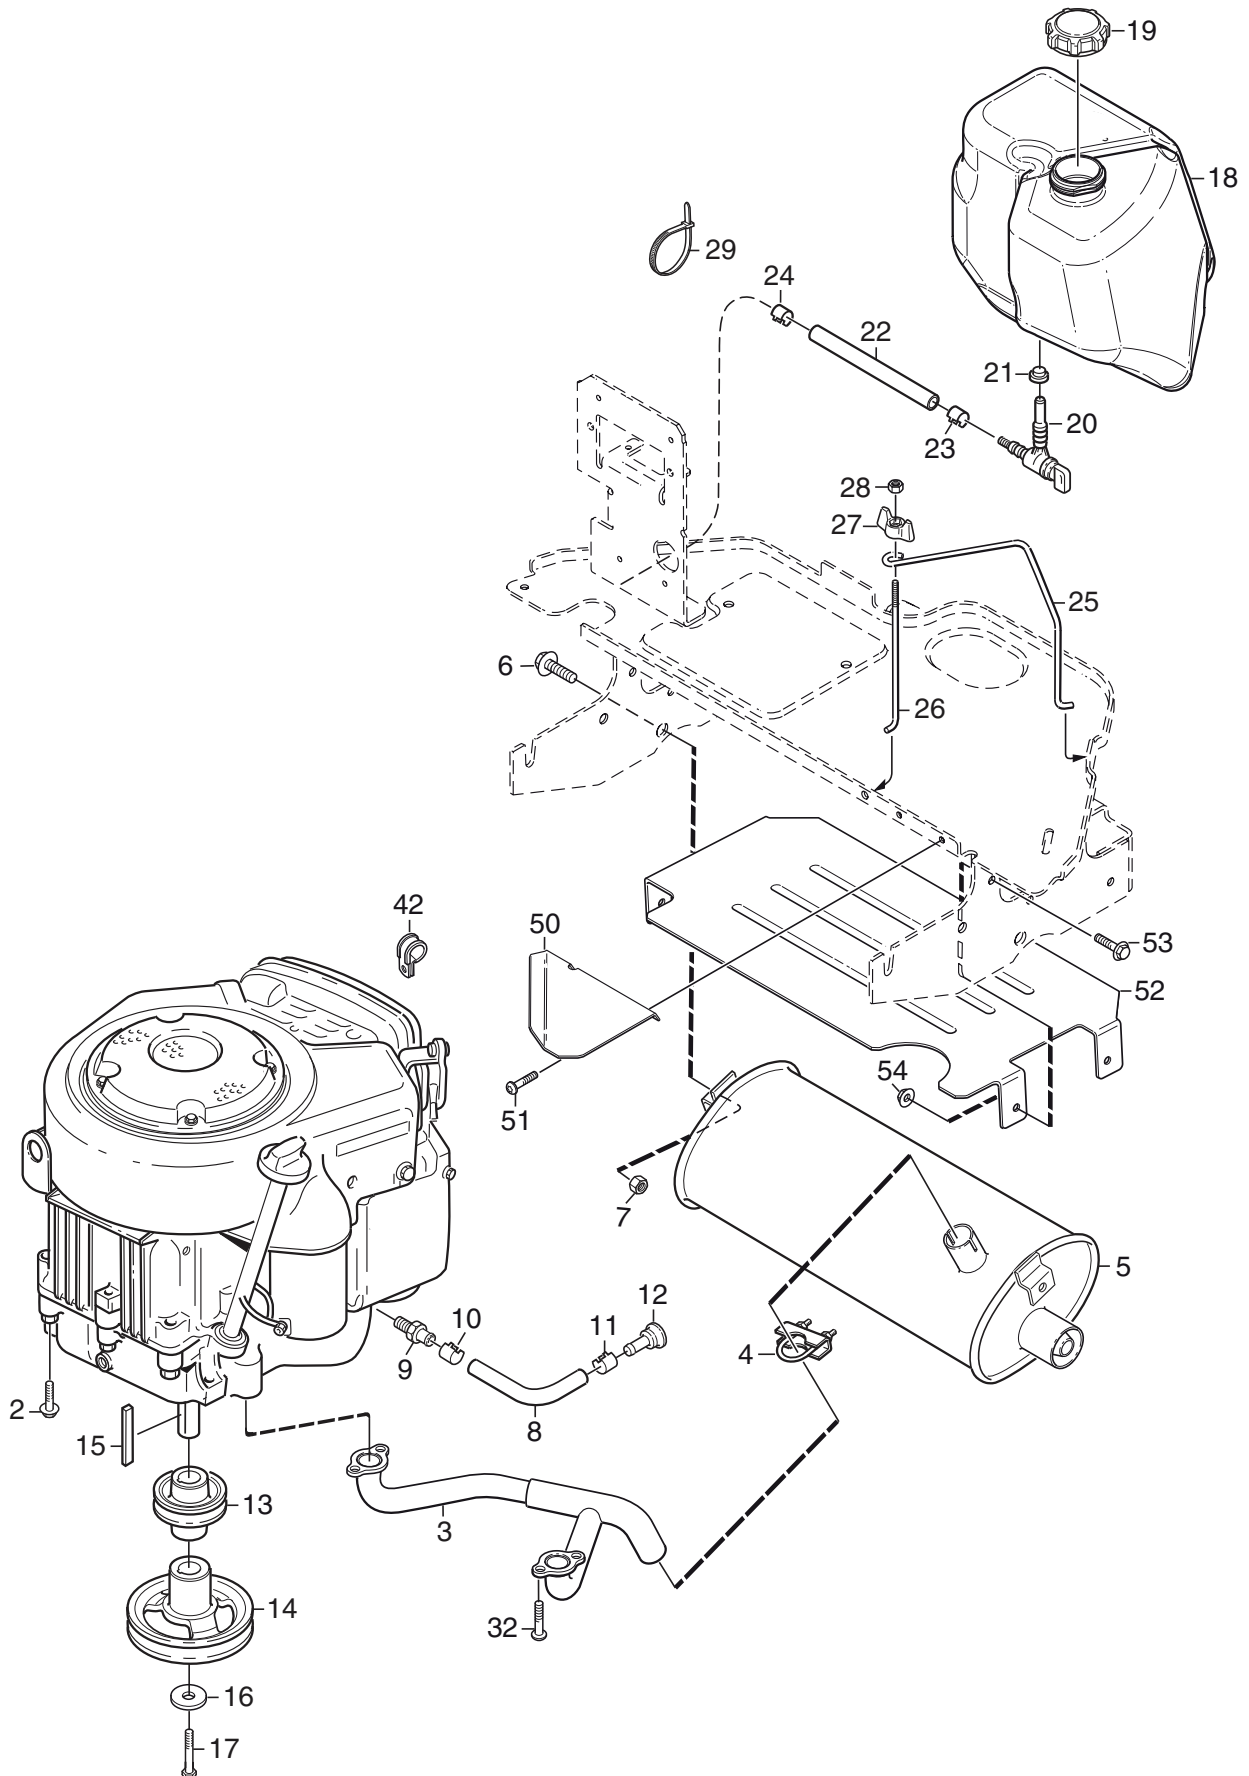


Utgåva Issue 11 - 2015		Motor	Engine		
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
2	4	9955-3725-16	Skruv	Screw	
3	1	1134-6339-01	Grenrör	Exhaust Pipe	
4	1	9578-0011-01	Rörklämma 38	Tube Clamp	
5	1	1134-6024-01	Ljuddämpare Kpl	Muffler Assy	
6	1	9959-0820-16	Skruv	Screw	
7	1	112154220/0	Mutter	Nut	
8	1	1134-5827-04	Oljeavtappning Kpl	Oil Drain Assy	Incl. pos 9 - 12
9	1	1134-5825-01	Nippel	Nipple	
10	1	9578-0023-04	Slangklämma 15*8 (Vit)	Hose Clamp	
11	1	1134-3499-02	Slangklämma	Hose Clamp	
12	1	1134-5826-01	Plugg	Plug	
13	1	1137-0206-01	Motorremskiva	Engine Belt Pulley	
14	1	1137-0208-01	Motorremskiva	Engine Pulley	
15	1	9600-0251-01	Kil	Key	
16	1	1134-5017-02	Bricka	Washer	
17	1	9987-5332-16	Skruv	Screw	
18	1	1134-5938-01	Bränsletank	Fuel Tank	
19	1	1134-5532-01	Tanklock	Fuel Tank Cap	
20	1	1134-3224-01	Bensinkran	Fuel Shut-Off Valve	
21	1	1134-3225-01	Gummibussning	Grommet	
22	1	1134-2975-13	Bensinslang	Fuel Tube	Cutting length 1,1 mt
23	1	9578-0023-02	Slangklämma D12*8 (Svart)	Hose Clamp	
24	1	9578-0023-02	Slangklämma D12*8 (Svart)	Hose Clamp	
25	1	1134-5942-01	Tankbygel	Tank Loop	
26	1	1134-5996-01	Tankbygel	Tank Loop	
27	1	1134-4481-02	Vingmutter	Wing Nut	
28	1	112154510/0	Mutter	Nut	
29	1	133320027/0	Bunband	Cable	
30	1	9852-8013-16	Skruv	Screw	
32	4	1134-4930-01	Skruv	Screw	
42	1	1134-0994-02	Rörklammer	Tube Clamp	
50	1	1134-6234-01	Deflektor	Heat Deflector	
51	2	9943-0516-16	Skruv	Screw	
52	1	1134-6251-01	Deflektor	Heat Deflector	
53	4	9959-0612-16	Skruv	Screw	
54	4	9739-0631-22	Mutter	Nut	

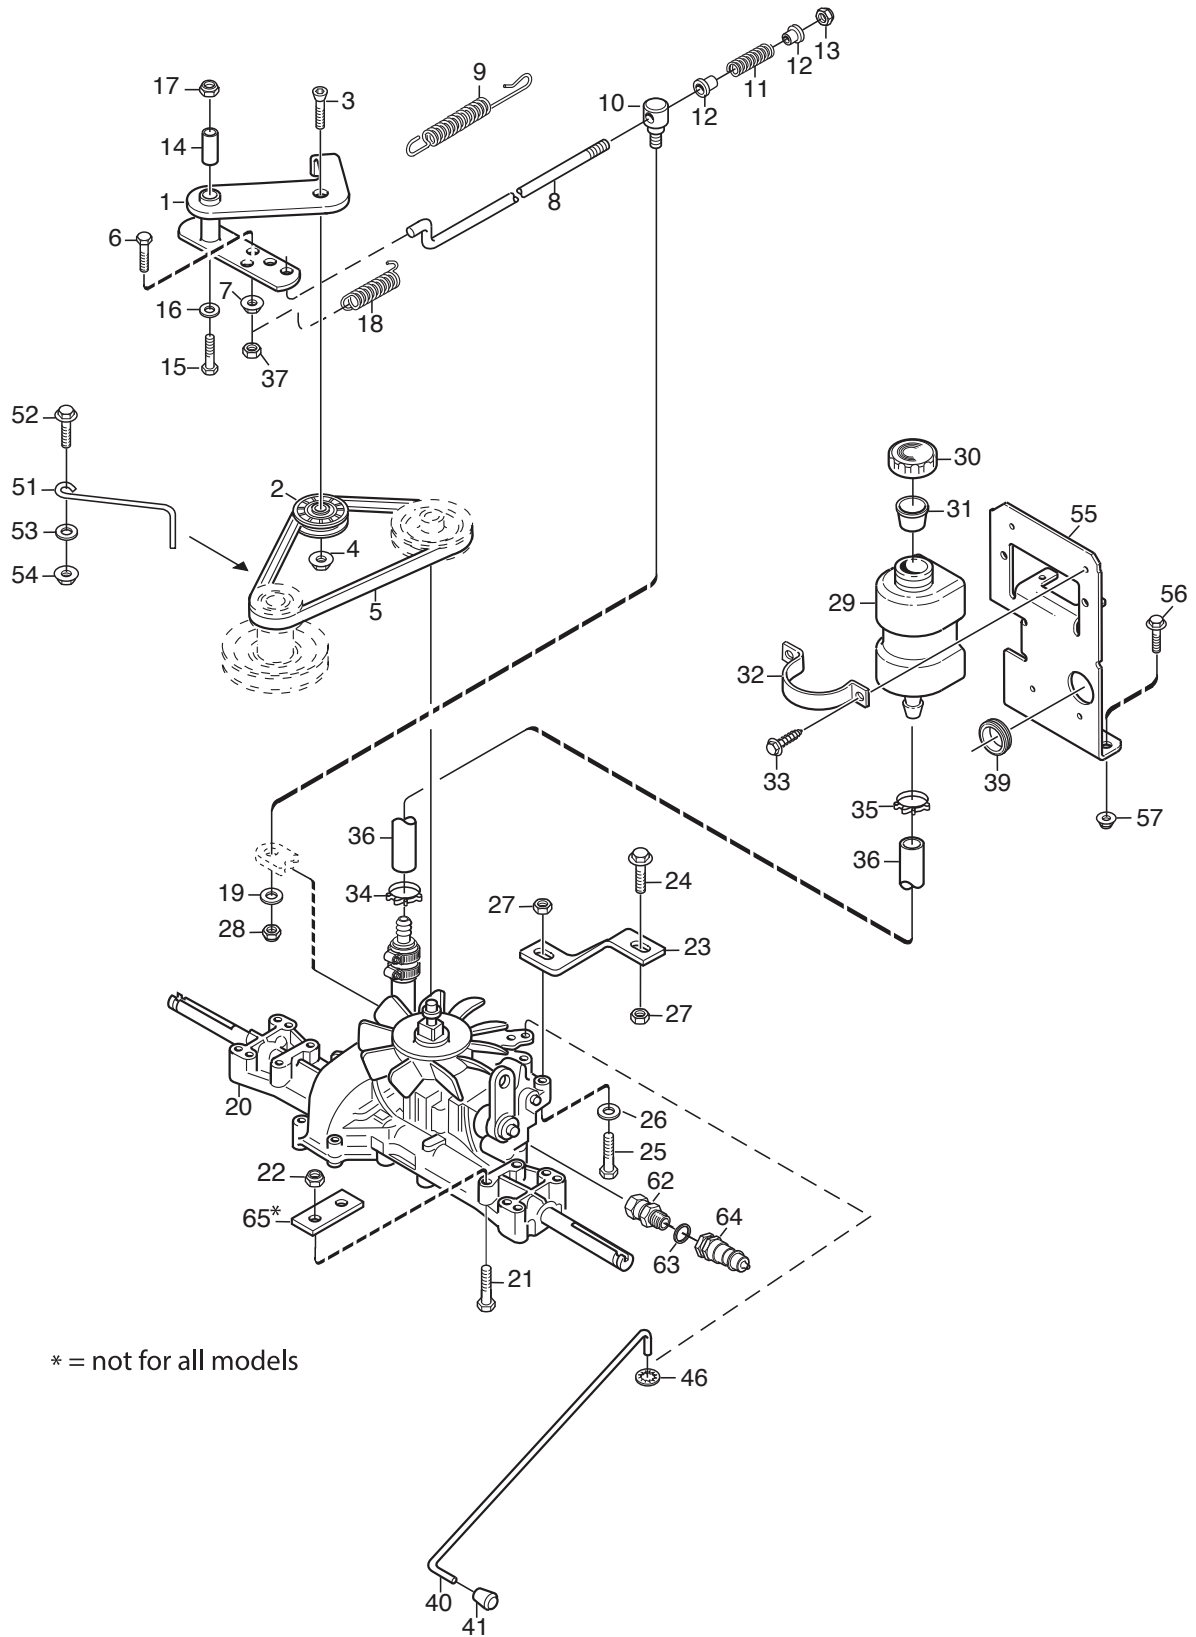


Utgåva Issue 11 - 2015		Transaxel		Transmission	
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-4000-02	Spännarm Kpl 15	Tension Arm	
2	1	1134-3459-01	Spännrulle	Tension Roller	
3	1	9924-1035-16	Skruv	Screw	
4	1	112295200/0	Mutter	Nut	
5	1	1134-9058-01	Kilrem	V-Belt	contain belt 9585-0091-01
6	1	112791500/0	Skruv	Screw	
7	1	9739-0631-22	Mutter	Nut	
37	1	112154510/0	Mutter	Nut	
8	1	1134-3377-02	Reglagestang	Control Rod	
9	1	4231-0013-00	Fjäder	Spring	
10	1	1134-4171-01	Ledtapp	Pivot Pin	
11	1	1134-4183-01	Fjäder	Spring	
12	2	1134-3456-01	Bussning	Bushing	
13	1	112154510/0	Mutter	Nut	
14	1	1134-1565-08	Distans	Spacer	
15	1	112793905/0	Skruv	Screw	
16	1	112523060/0	Bricka	Washer	
17	1	112155000/0	Mutter	Nut	
18	1	1134-6414-01	Fjäder	Spring	
19	1	9699-0060-02	Bricka	Washer	
20	1	1137-0123-01	Transaxel K46Ci	Transaxle K46Ci	Kanzaki K57V
21	4	9960-0860-12	Skruv	Screw	L = 60 mm
22	4	112155000/0	Mutter	Nut	
23	1	1134-3913-01	Reaktionsstag 5-01 F24	Strut	
24	1	9959-0825-16	Skruv	Screw	
25	1	112691200/0	Skruv	Screw	
26	1	9699-0090-02	Bricka Bricka	Washer Washer	
27	2	112155000/0	Mutter	Nut	
28	1	112154510/0	Mutter	Nut	
29	1	1134-2765-02	Oljetank	Oil Tank	
30	1	1134-2777-02	Tanklock	Filler Cap	
31	1	1134-3734-01	Plugg (Service)	Vent Plug	
32	1	1134-2778-01	Fästband5-01	Band	
33	2	9852-8013-16	Skruv	Screw	
35	1	9578-0023-04	Slangklämma 15*8 (Vit)	Hose Clamp	15 x 8
35	1	9578-0036-01	Slangklämma	Hose Clamp	
36	1	1134-2779-09	Slang	Tube	L = 290 mm
39	1	1134-3203-01	Kabelgenomföring	Grommet	
40	1	1134-4015-01	Dragstang	Pull Rod	
41	1	1134-4014-01	Plastknopp	Knob	
46	1	112604896/0	Starlock P6493 6	Crown Fastener	
51	1	1134-3289-02	Remstyrning	Belt Guide	
52	1	9959-0820-16	Skruv	Screw	
53	1	112523060/0	Bricka	Washer	
54	1	112154220/0	Mutter	Nut	
55	1	1134-5941-01	Tankkonsol 5-01	Tank Bracket	
56	2	9959-0820-16	Skruv	Screw	
57	2	112154220/0	Mutter	Nut	

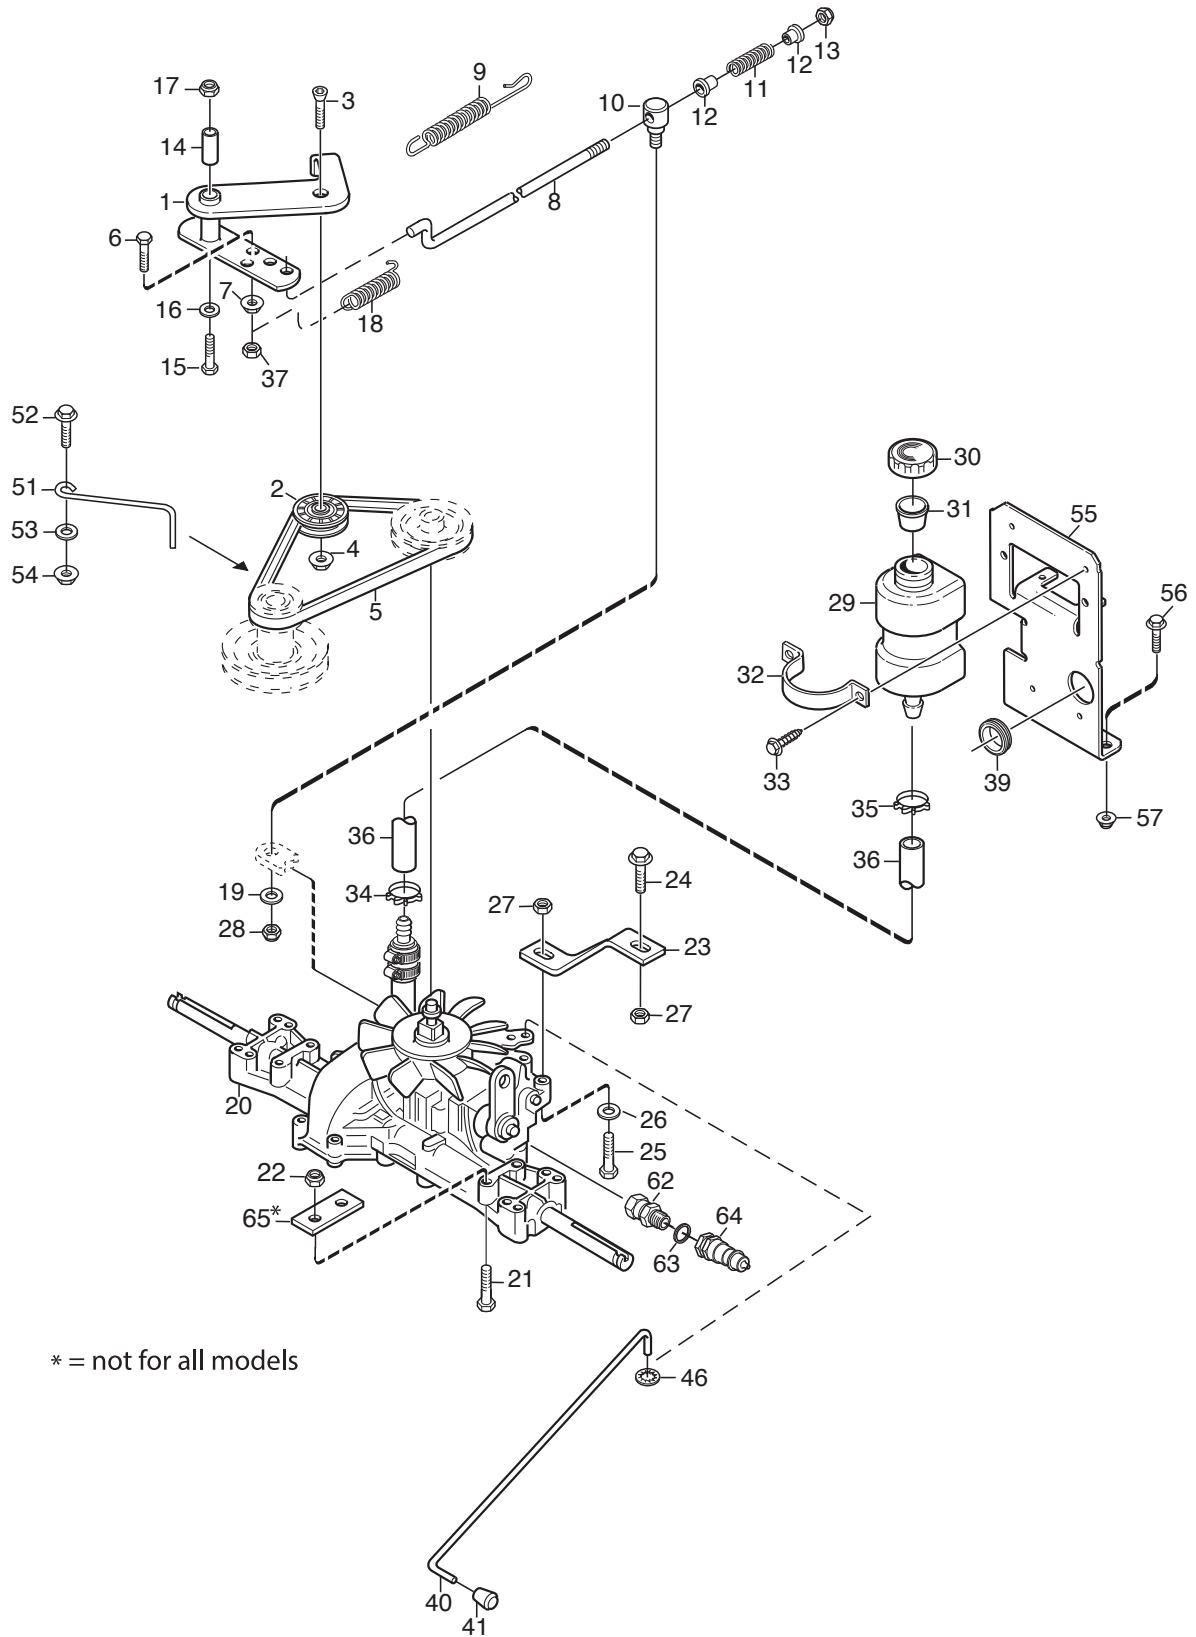


Utgåva Issue 11 - 2015		Transaxel Transmission			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
62	1	1134-7245-01	Adapter-Rak Stb R1/4"-R3/8"	Hydraulic Coupling-Straight	
63	1	1134-4948-01	Bricka	Washer	
64	1	1134-6042-01	Snabbkoppling-Hane 1/4"	Quick Coupling-Male	
64	2	1134-3376-01	Distansplåt	Spacer Plate	Only for models with Vanguard 18

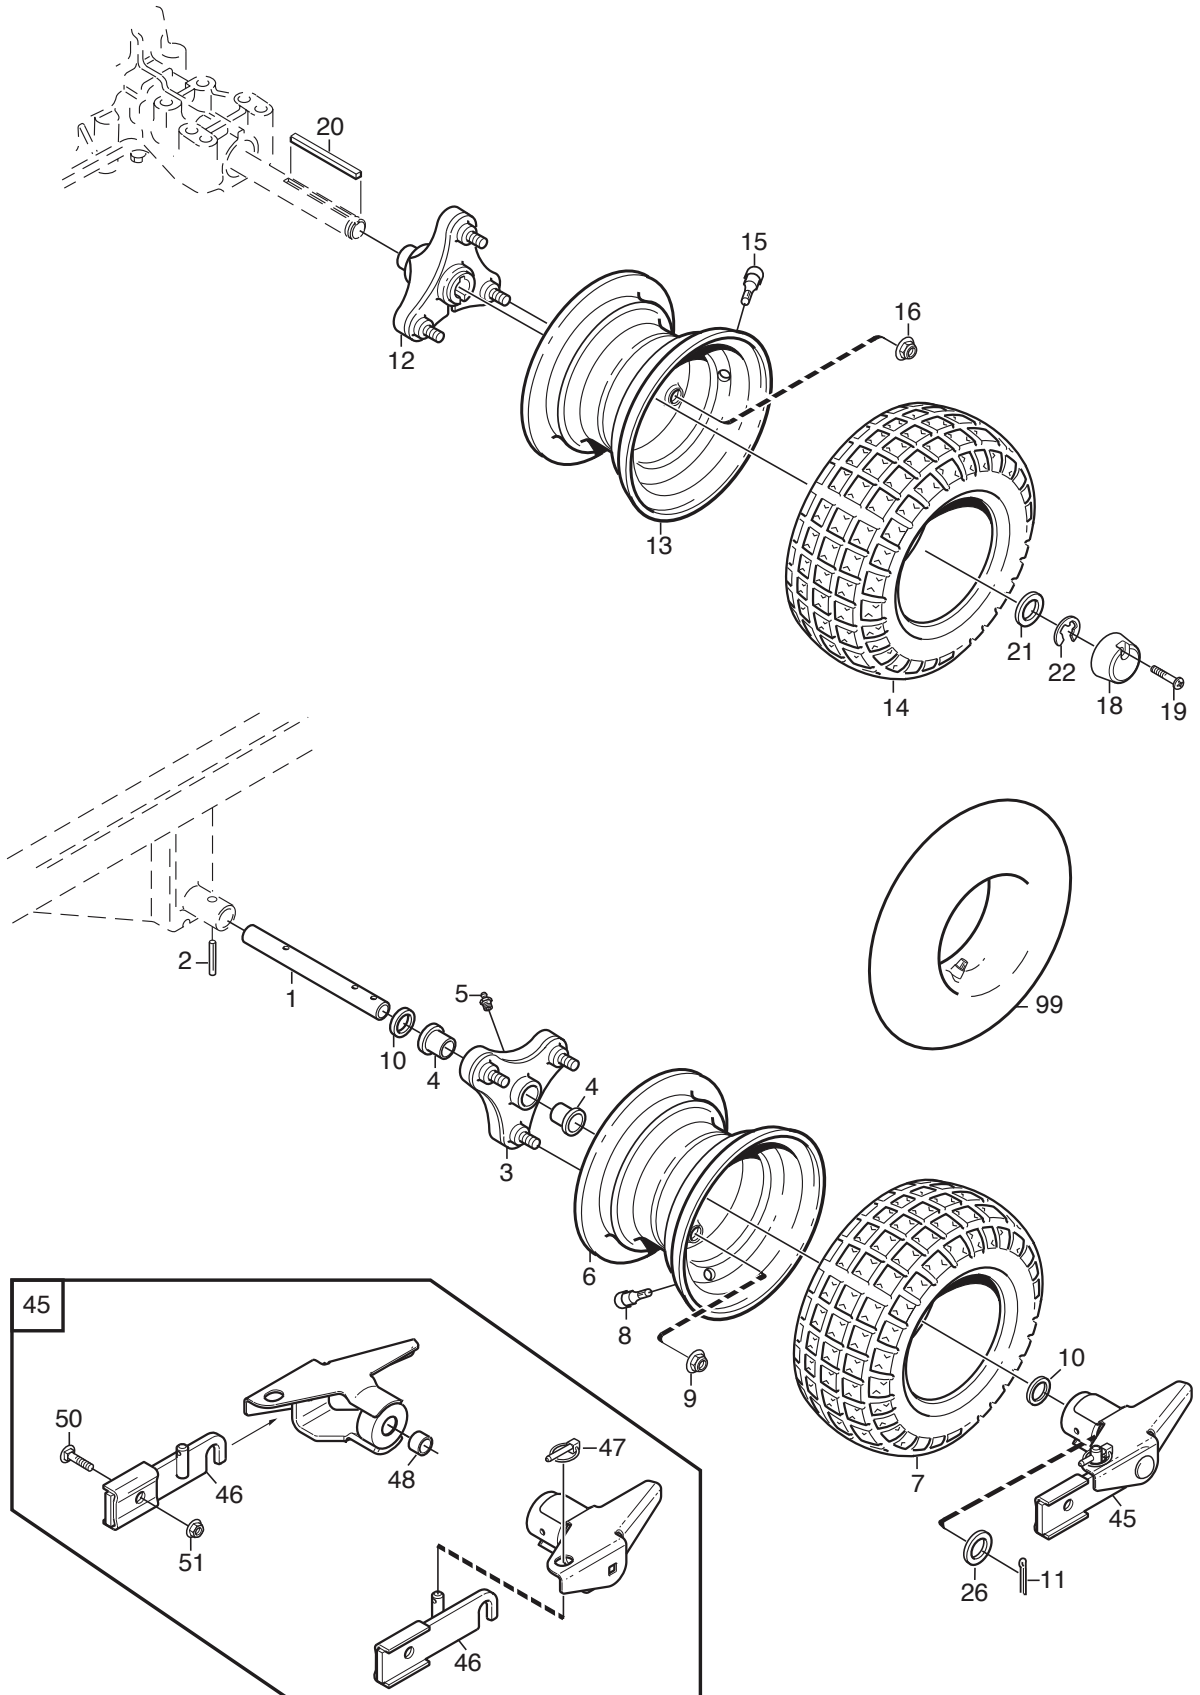


Utgåva Issue 11 - 2015		Hjul Wheels			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	2	1134-0075-00	Framaxeltapp	Front Axle	
2	2	9595-0258-00	Spännstift	Locating Pin	
3	2	1134-4844-05	Hjulnav Kpl	Wheel Hub Assy	Incl. pos. 4-5
5	2	112379511/0	Smörjnippel	Grease Dispenser	
4	1	1134-9026-01	Bussning	Bearing	Sats 4 st/kit of 4
6	2	187000454/0	Fälg	Rim	
7	2	9545-0116-00	Däck	Tyre	16 x 7.50 - 8
8	2	9545-0500-00	Ventil	Valve Assy.	
9	6	9731-1031-22	Mutter	Nut	
10	4	1134-0341-01	Bricka	Washer	
11	2	9599-0080-02	SaxSprint Sp 4*28	Cotter Pin	
12	2	1134-4844-02	Hjulnav Kpl	Wheel Hub Assy	
13	2	187000454/0	Fälg	Rim	
13	2	187000454/0	Fälg	Rim	
14	2	9545-0116-00	Däck	Tyre	16 x 7.50 - 8
15	2	9545-0500-00	Ventil	Valve Assy.	
16	6	9731-1031-22	Mutter	Nut	
18	2	1134-4796-01	Navkapsel	Hub Cap	
19	2	9947-0540-19	Skruv	Screw	
20	2	1134-2471-01	Kil	Key	
21	2	1134-0341-01	Bricka	Washer	
22	2	9653-0001-04	Sparryttare Rs	Lock Ring	
26	2	1134-0341-01	Bricka	Washer	
45	1	13-0992-61	Rac Snabbfäste 2Wd Park	Rac Quick Connection 2Wd	Incl. pos 9-10-46-47-48-49-50-51
46	1	1134-7465-01	Sats-Fästen (Vä+Hö Inkl Skruv)	Attachment Kit	Incl. pos 50-51
47	2	1137-0077-01	Lassprint	Locking Pin	
48	2	9548-0026-01	Glidlager 20E7X26-20	Bearing	
50	2	9898-1035-16	Skruv	Screw	
51	2	9739-1031-22	Mutter	Nut	
99	4	9545-0203-00	Innerslang	Inner Tube	Reservdel/spare part

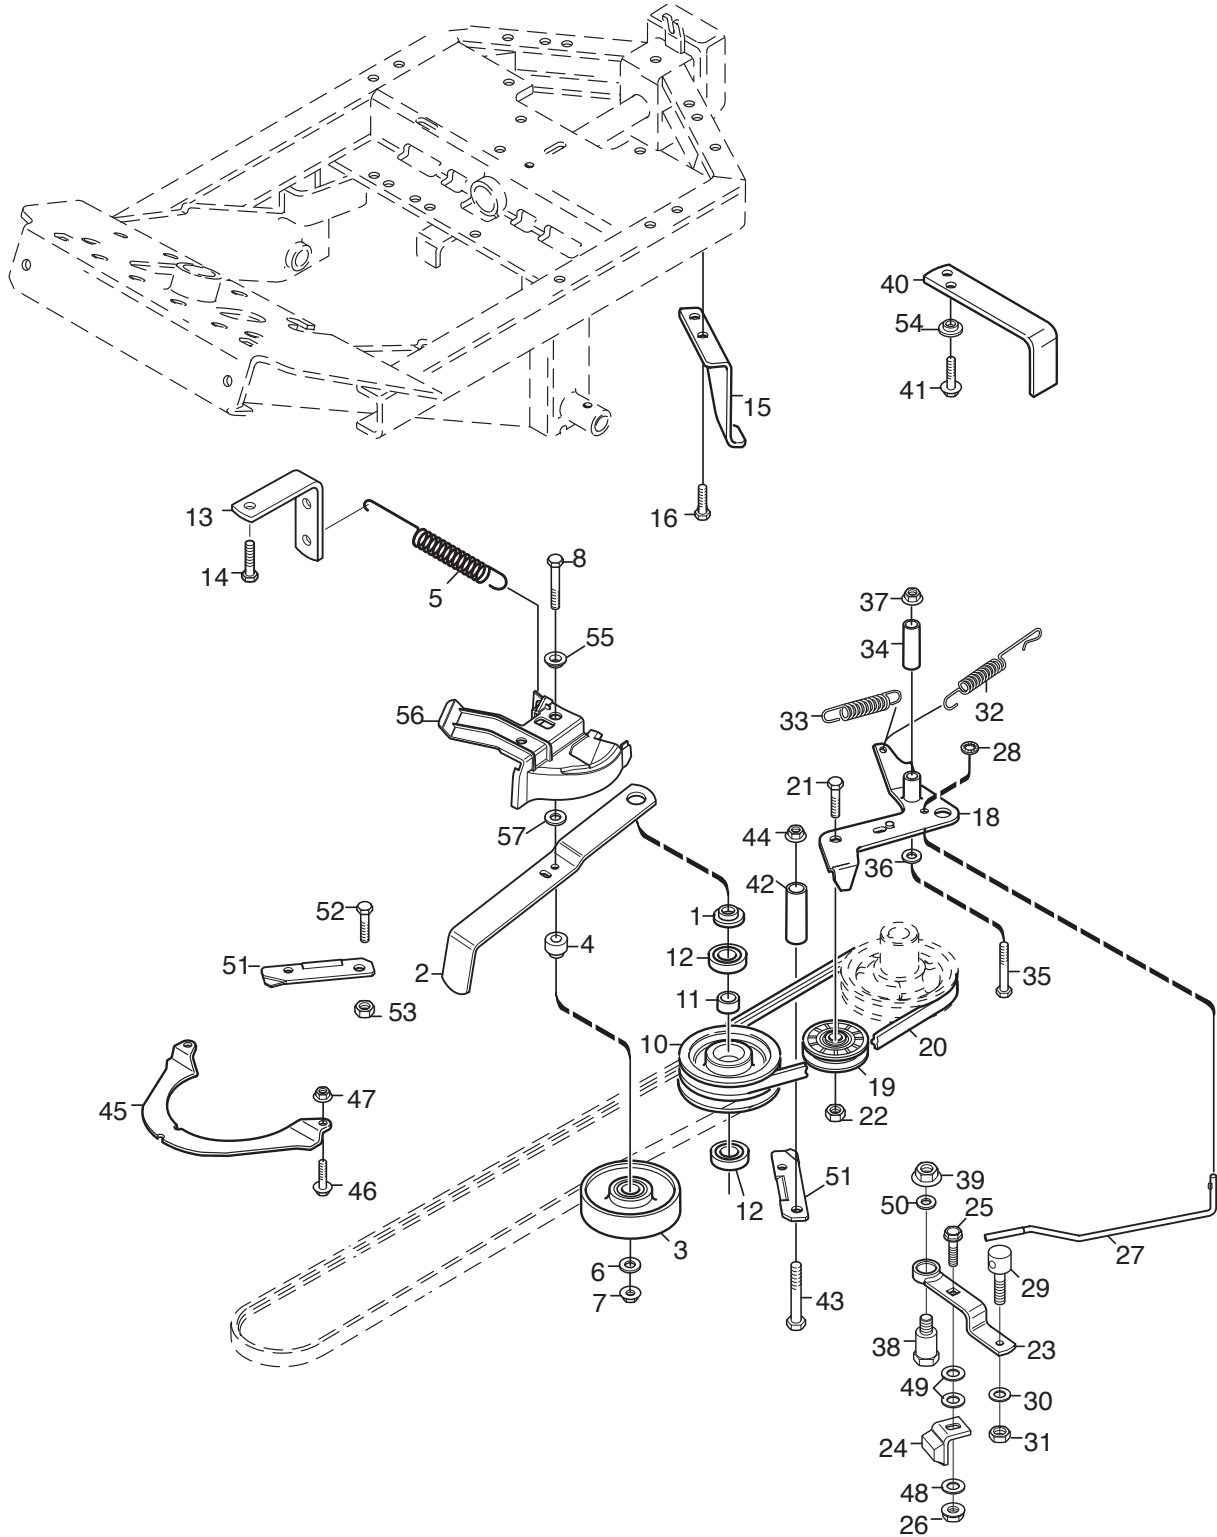


Utgåva Issue 11 - 2015		Kraftuttag Power Take-Off			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1134-5548-01	Distans	Spacer	
2	1	1137-1124-01	Spännhjulsarm	Tension Wheel Arm	
3	1	1137-0128-01	Spännhjul Kpl	Tension Roller Assy	
4	1	1134-1888-04	Distans	Spacer	
5	1	1134-5111-01	Fjäder	Spring	
6	1	112523060/0	Bricka	Washer	
7	1	112154220/0	Mutter	Nut	
8	1	112691900/0	Skruv	Screw	
10	1	1137-0209-01	Centrumremskiva Smst	Centre Belt Pulley	
11	1	1134-0051-09	Distans	Spacer	
12	2	9549-0019-00	Kullager	Ball Bearing	
13	1	1134-5112-01	Fjäder	Spring	
14	2	9945-0816-16	Skruv	Screw	
15	1	1134-5110-02	Hake	Hook	
16	2	9893-0616-16	Skruv Relä	Screw Relay	
18	1	1134-2018-02	Spännarm Kpl 5-01 24	Tension Arm	
19	1	1134-9027-01	Spännrulle (Svart)	Tension Roller (Black)	
20	1	1134-9173-01	Kilrem	V-Belt	contain belt 9585-0129-01
21	1	112794300/0	Skruv	Screw	
22	1	112295200/0	Mutter	Nut	
23	1	387318251/0	Bromsarm Kpl	Brake Arm	
24	1	1134-4164-03	Bromsklots	Brake Pad	
25	1	112818700/0	Skruv	Screw	
26	1	112155000/0	Mutter	Nut	
27	1	137033100/0	Bromsstang	Brake Rod	
28	1	9675-0008-02	Starlockbricka	Starlock	
29	1	1134-4170-01	Nippel	Nippel	
30	1	112521330/0	Bricka	Washer	
31	1	112154510/0	Mutter	Nut	
32	1	4231-0013-00	Fjäder	Spring	
33	1	1135-3307-01	Fjäder	Spring	
34	1	1134-1565-10	Distans	Spacer	
35	1	112691800/0	Skruv	Screw	
36	1	112523060/0	Bricka	Washer	
37	1	112154220/0	Mutter	Nut	
38	1	1134-4163-02	Ansattsskruv	Shoulder Bolt	
39	1	9739-1031-22	Mutter	Nut	
40	1	1134-3958-01	Remstyrning	Belt Guide	
41	2	9893-0616-16	Skruv Relä	Screw Relay	
42	1	1134-0041-03	Bussning	Bushing	
43	1	112794950/0	Skruv	Screw	
44	1	9739-1031-22	Mutter	Nut	
45	1	1134-3654-01	Fingerskydd 5-01 24	Guard	
46	2	9959-0612-16	Skruv	Screw	
47	2	9739-0631-22	Mutter	Nut	
48	1	9699-0090-02	Bricka Bricka	Washer Washer	
49	2	112521360/0	Bricka	Washer	
50	1	337670201/0	Bricka	Washer	

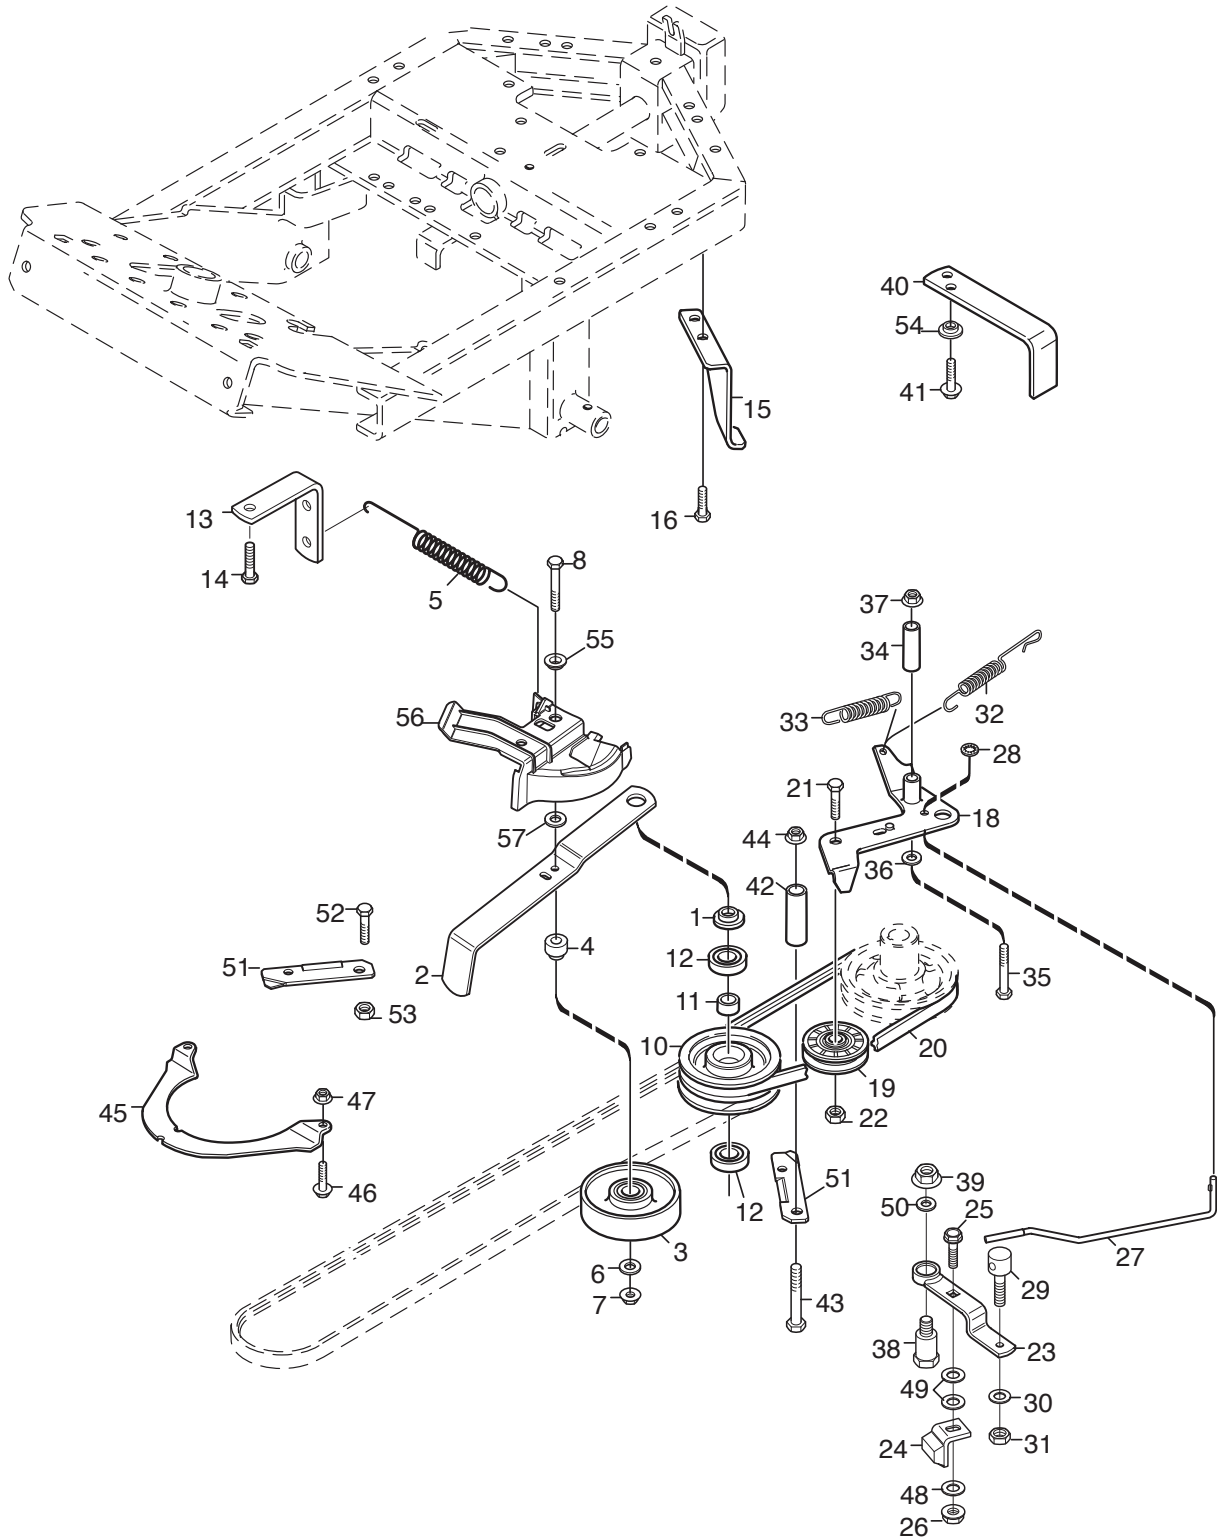

Utgåva Issue 11 - 2015		Kraftuttag Power Take-Off			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
51	2	337546547/0	Plat	Plate	
52	1	112793102/0	Skruv	Screw	
53	1	112293201/0	Mutter	Nut	
54	2	325160039/0	Distans	Spacer	
55	1	122041980/0	Bussning	Bushing	
56	1	337600000/0	Skydd	Protection	
57	1	112523060/0	Bricka	Washer	


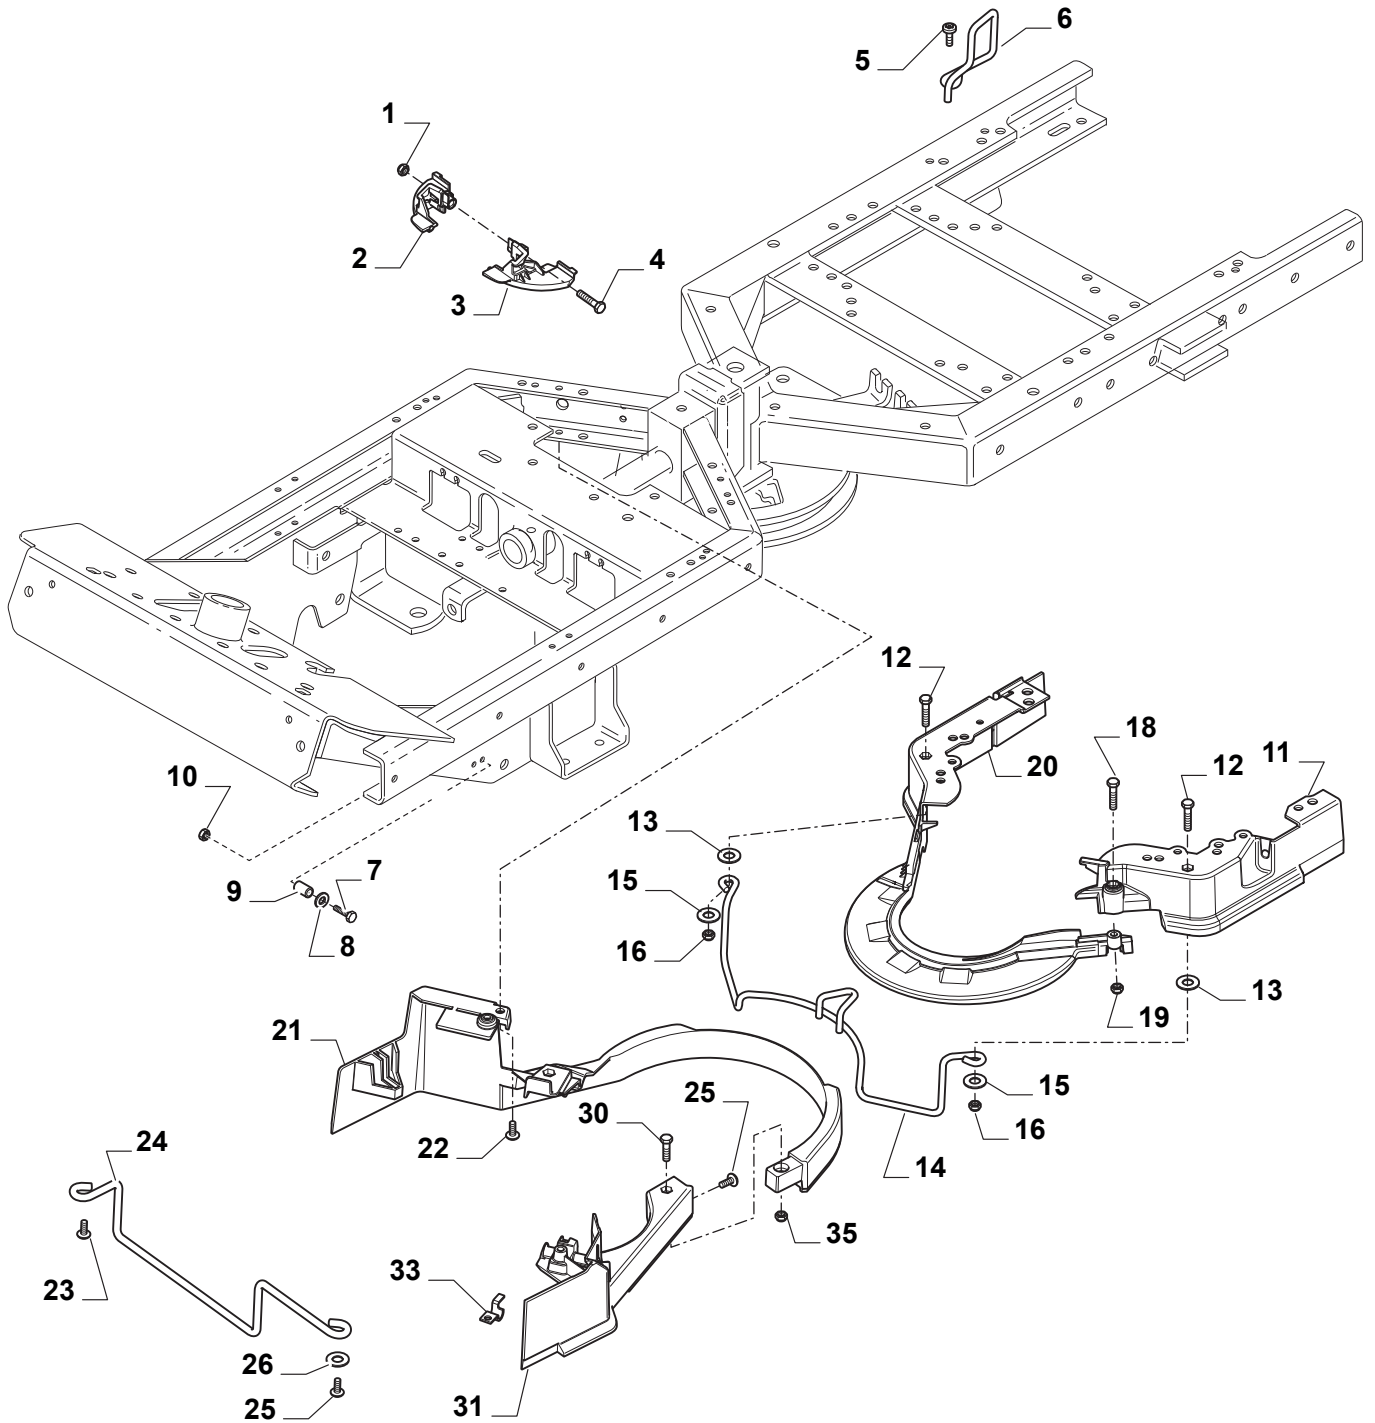


Utgåva Issue 11 - 2015		Remskydd Protection, Belt			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	112154510/0	Mutter	Nut	
2	1	337600010/0	Skydd	Protection	
3	1	337600011/0	Skydd	Protection	
4	1	112792099/0	Skruv	Screw	
5	1	9893-0616-16	Skruv Relä	Screw Relay	
6	1	337600015/0	Remskydd	Belt Cover	
7	2	112735669/0	Skruv	Screw	
8	2	112523050/0	Bricka	Washer	
9	2	1134-1565-14	Distans	Spacer	
10	2	112154510/0	Mutter	Nut	
11	1	337060001/1	Remskydd	Belt Cover	
12	2	112792099/0	Skruv	Screw	
13	2	112524010/0	Bricka	Washer	
14	1	337785100/0	Fäste	Support	
15	2	112521330/0	Bricka	Washer	
16	2	112154510/0	Mutter	Nut	
18	1	112791500/0	Skruv	Screw	
19	1	112154510/0	Mutter	Nut	
20	1	337060000/1	Remskydd	Belt Cover	
21	1	337060002/0	Remskydd	Belt Cover	
22	1	9893-0616-16	Skruv Relä	Screw Relay	
23	1	9945-0816-16	Skruv	Screw	
24	1	137294100/0	Remstyrning	Belt Guide	
25	2	9893-0616-16	Skruv Relä	Screw Relay	
26	1	112523050/0	Bricka	Washer	
30	1	112791500/0	Skruv	Screw	
31	1	337060003/0	Remskydd	Belt Cover	
33	1	322545159/0	Plat	Plate	
35	1	112154510/0	Mutter	Nut	

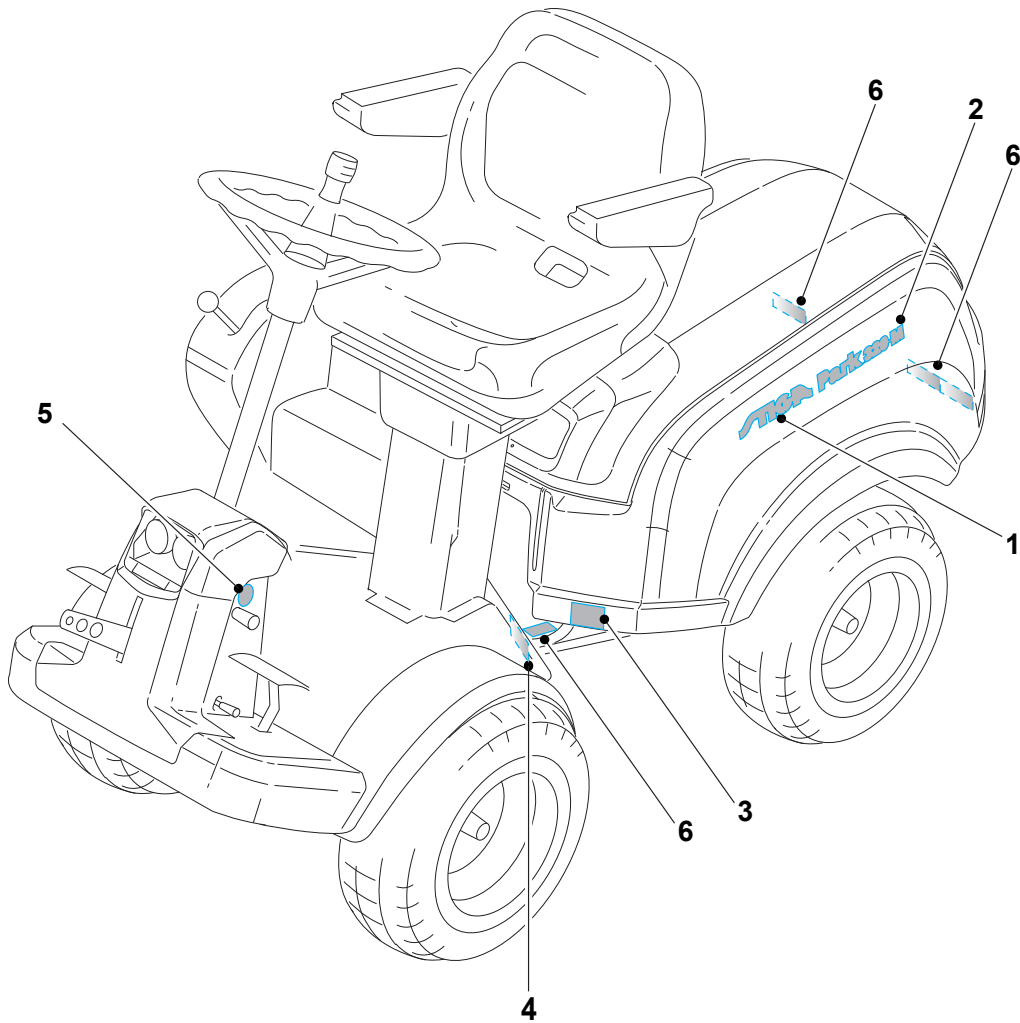

STIGA 1

Park 720 PW 2

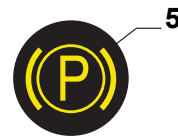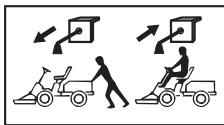

Utgåva Issue 11 - 2015		Dekaler Labels			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	3	114367494/2	Dekal STIGA logo	Label STIGA logo	
2	2	114368474/0	Dekal Park 720 PW	Label Park 720 PW	Park 720 PW
3	1	9402-3650-02	Dekal "Bypass" Park (Svart Tryck) I Dekal	Label	
5	1	114358460/0	Dekal	Label	
6	1	114368429/0	Dekal	Label	


137-0126-01 1— 1
 139-1470-01 1— 1
 139-1728-01 1— 1
 139-1301-01 1— 1
 139-1336-01 1— 1

Reservdelskatalog
 Parts Catalogue



Reservdelskatalog
 Parts Catalogue

PARK 720 PW

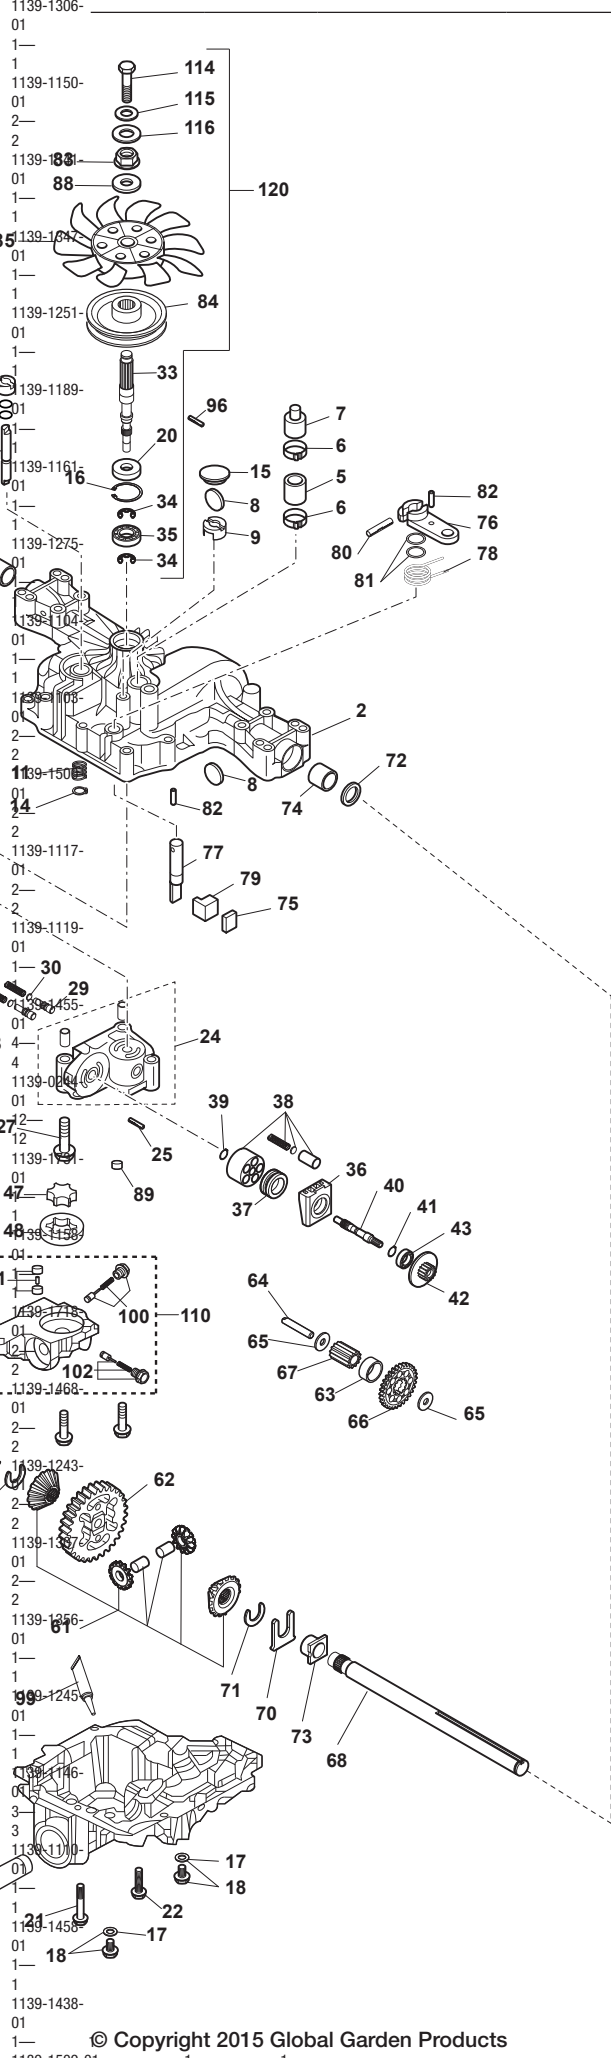


Utgåva
 Issue
 11 - 2015

Transmission

Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning
1	1	1137-0126-01	Transaxel K57V
1	1	139-1470-01	Hus-Övre
1	1	139-1728-01	Hus-Nedre
1	1	139-1301-01	Rör
2	2	139-1336-01	Slangklämma
1	1	139-1306-01	Adapter
2	2	139-1150-01	Magnet
1	1	139-1341-01	Magnethallare
1	1	139-1347-01	Fjäder
1	1	139-1251-01	Axel
1	1	139-1189-01	Arm
1	1	139-1161-01	Lasring
1	1	139-1275-01	Plugg
1	1	139-1104-01	Lasring
2	2	139-1103-01	Bricka
2	2	139-1500-01	Dräneringsbult-Sats
2	2	139-1117-01	O-Ring
1	1	139-1119-01	Tätning
4	4	139-1455-01	Skruv
12	12	139-0244-01	Skruv
1	1	139-1731-01	Centrumhus
1	1	139-1158-01	Stift
2	2	139-1718-01	Bult
2	2	139-1468-01	Ventil
2	2	139-1243-01	Fjäder
2	2	139-1307-01	Filter
1	1	139-1356-01	Cylinderblock Kpl
1	1	139-1245-01	Fjäder
3	3	139-1146-01	Lasring
1	1	139-1110-01	Kullager
1	1	139-1458-01	Hus
1	1	139-1438-01	Lager
1	1	139-1509-01	Cylinderblock Kpl
1	1	139-1160-01	Bricka
1	1	139-1353-01	Motoraxel
1	1	139-1021-01	Lasring
1	1	139-1272-01	Motordrev
1	1	139-1453-01	Lager
2	2	139-1066-01	Tryckplatta
1	1	139-1597-01	Stänkplatta
1	1	139-1508-01	Lager
1	1	139-1729-01	Innerrotor
1	1	139-1151-01	Yttre rotor
1	1	139-1354-01	Regleraxel
1	1	139-1410-01	Vridcentrum
1	1	139-1312-01	Vridfjäder
1	1	139-1409-01	Reglerarm
1	1	139-1325-01	Reglerarm
1	1	139-1596-01	Ryckplatta

Utgåva Issue	Transmission		Transmission			
11 - 2015						
Pos. Fig.	Antal Q.ty	Anmärkning Notes	Ring Part No	Benämning	Description	Anmärkning Notes
1	1		1139-1102-01	Bricka	Washer	
1	1		1139-1355-01	LasSprint	Cotter Pin	
1	1		1139-1329-01	Stift	Pin	
1	1		1139-1285-01	Stift	Pin	
2	2		1139-1115-01	O-Ring	O-Ring	
1	1		1139-1127-01	Mutter	Nut	
1	1		1139-1404-01	Differentialdrev Kpl	Diff.Gear Kit	
1	1		1139-1258-01	Slutdrev	Final Gear	
1	1		1139-1255-01	Hylsa	Collar	
1	1		1139-1256-01	röduktionsaxel	Reduction Shaft	
2	2		1139-1398-01	Bricka	Washer	
1	1		1139-1267-01	Reduktionsdrev	Reduction Gear	
1	1		1139-1361-01	Slutdrev	Final Pinion Gear	
1	1		1139-1344-01	Hjulaxel Vä	Axle Shaft-L	
1	1		1139-1345-01	Hjulaxel Hö	Axle Shaft-R	
2	2		1139-1078-01	Bricka	Thrust Washer	
2	2		1139-1163-01	Lasring	Ring	
2	2		1139-1080-01	Tätning	Seal 19*32*8	
2	2		1139-1164-01	Bussning	Bushing	
2	2		1139-1414-01	Bussning	Bushing	
1	1		1139-1260-01	Bromssko	Brake Shoe	
1	1		1139-1261-01	Bromsarm	Brake Arm	
1	1		1139-1320-01	Bromsaxel	Brake Shaft	
1	1		1139-1411-01	Returfjäder	Return Spring	
1	1		1139-1264-01	Tryckplatta	Brake Actuator	
1	1		1139-1282-01	Stift	Pin	
2	2		1139-1114-01	O-Ring	O-Ring	
2	2		1139-1281-01	Stift	Pin	
2	2		1139-1248-01	Krage	Spline Collar	
1	1		1139-1469-01	Remskiva	Pulley	
1	1		1134-4190-01	Fläkt	Fan	
1	1		1139-1276-01	Bricka	Collar	
4	4		1139-1166-01	Stift	Pin	
1	1		1139-1280-01	Stift	Pin	
1	1		1139-1303-01	Tätning	Seal Ring	
1	1		1139-1534-01	O-Ring	O-Ring	
1	1		1139-1510-01	Lock	Cap Kit	Inkl. pos 92
1	1		1139-1186-01	Filter	Filter	
1	1		1139-1279-01	Stift	Pin	
1	1		1139-1148-01	Stift	Pin	
1	1		1139-1443-01	Tätning	Sealant (Tube)	
1	1		1139-1462-01	Ventil	Valve	
1	1		1139-1234-01	Ventil	Check Cmp	
1	1		1139-1463-01	Ventil	Valve	
3	3		1139-0239-01	Packning	Packing	
2	2		1139-1168-01	Packning	Packing	
1	1		1139-1460-01	Nippel	Piping	
2	2		1139-1464-01	Anslutning	Connector	
1	1		1139-1730-01	Pumphus	Pump Case	Inkl. pos 100 - 102

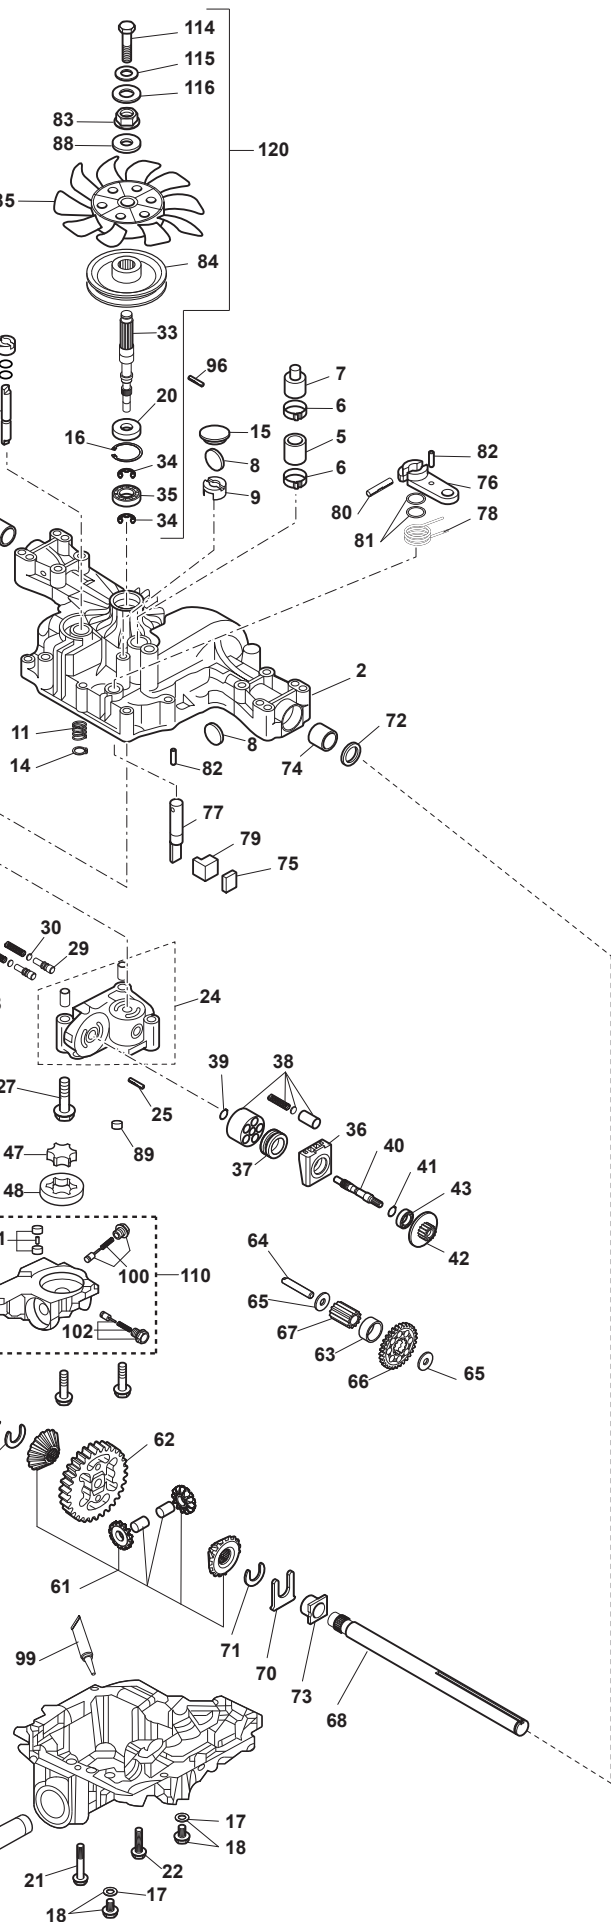

Utgåva Issue 11 - 2015		Transmission			
Pos. Fig.	Antal Q.ty	Art nr Part No	Benämning	Description	Anmärkning Notes
1	1	1139-1473-01	Bult	Bolt	
1	1	1139-1471-01	Bult	Bolt	
1	1	1139-1719-01	Bult	Bolt	
1	1	1139-1720-01	Bricka	Washer	
1	1	1139-1721-01	Bricka	Washer	
1	1	1139-1725-01	Pumpaxel Kpl	Pump Shaft Kit	Inkl. pos 33,114-116

code	pos.	q.ty	page											
1134-7535-01	19	1	p. 23	1139-1251-01	1	1	p. 40	9400-0358-01	33	2	p. 23			
1134-9024-01	2	1	p. 21	1139-1255-01	1	1	p. 41	9400-0360-01	23	1	p. 19			
1134-9026-01	4	1	p. 31	1139-1256-01	1	1	p. 41	9400-0384-01	44	1	p. 19			
1134-9027-01	19	1	p. 33	1139-1258-01	1	1	p. 41	9402-3650-02	3	1	p. 39			
1134-9028-01	3	1	p. 7	1139-1260-01	1	1	p. 41	9403-0048-70	15	2	p. 9			
1134-9058-01	5	1	p. 27	1139-1261-01	1	1	p. 41	9404-0027-01	7	1	p. 11			
1134-9173-01	20	1	p. 33	1139-1264-01	1	1	p. 41	9404-0028-01	64	2	p. 17			
1135-3307-01	33	1	p. 33	1139-1267-01	1	1	p. 41	9501-0500-00	5	1	p. 9			
1137-0020-02	30	3	p. 7	1139-1275-01	1	1	p. 40	9501-0500-00	10	2	p. 9			
1137-0044-01	24	1	p. 15	1139-1276-01	1	1	p. 41	9501-0504-01	6	1	p. 9			
1137-0045-01	27	1	p. 15	1139-1279-01	1	1	p. 41	9545-0116-00	7	2	p. 31			
1137-0048-01	1	1	p. 5	1139-1280-01	1	1	p. 41	9545-0116-00	14	2	p. 31			
1137-0048-02	2	1	p. 5	1139-1281-01	2	2	p. 41	9545-0203-00	99	4	p. 31			
1137-0049-01	10	1	p. 5	1139-1282-01	1	1	p. 41	9545-0500-00	8	2	p. 31			
1137-0050-01	40	1	p. 5	1139-1285-01	1	1	p. 41	9545-0500-00	15	2	p. 31			
1137-0051-01	42	1	p. 5	1139-1301-01	1	1	p. 40	9547-0001-00	9	2	p. 9			
1137-0052-01	44	1	p. 5	1139-1303-01	1	1	p. 41	9548-0026-01	48	2	p. 31			
1137-0053-01	45	1	p. 5	1139-1306-01	1	1	p. 40	9549-0017-00	25	1	p. 15			
1137-0054-01	47	1	p. 5	1139-1307-01	2	2	p. 40	9549-0019-00	12	2	p. 33			
1137-0062-03	40	1	p. 19	1139-1320-01	1	1	p. 41	9570-0001-00	23	2	p. 21			
1137-0063-03	15	1	p. 19	1139-1329-01	1	1	p. 41	9578-0011-01	4	1	p. 25			
1137-0066-01	21	1	p. 15	1139-1336-01	2	2	p. 40	9578-0023-02	23	1	p. 25			
1137-0070-01	53	1	p. 15	1139-1341-01	1	1	p. 40	9578-0023-02	24	1	p. 25			
1137-0075-01	27	1	p. 23	1139-1344-01	1	1	p. 41	9578-0023-04	10	1	p. 25			
1137-0077-01	47	2	p. 31	1139-1345-01	1	1	p. 41	9578-0023-04	35	1	p. 27			
1137-0088-01	7	2	p. 5	1139-1347-01	1	1	p. 40	9578-0036-01	35	1	p. 27			
1137-0112-01	58	1	p. 15	1139-1355-01	1	1	p. 41	9579-0018-01	24	2	p. 23			
1137-0115-01	16	1	p. 19	1139-1356-01	1	1	p. 40	9595-0256-01	30	2	p. 15			
1137-0123-01	20	1	p. 27	1139-1361-01	1	1	p. 41	9595-0258-00	2	2	p. 31			
1137-0126-01	1	1	p. 40	1139-1398-01	2	2	p. 41	9595-0262-00	1	2	p. 3			
1137-0128-01	3	1	p. 33	1139-1404-01	1	1	p. 41	9595-0262-00	4	1	p. 9			
1137-0195-02	48	1	p. 15	1139-1411-01	1	1	p. 41	9595-0276-01	9	1	p. 11			
1137-0206-01	13	1	p. 25	1139-1414-01	2	2	p. 41	9599-0080-02	11	2	p. 31			
1137-0208-01	14	1	p. 25	1139-1438-01	1	1	p. 40	9600-0251-01	15	1	p. 25			
1137-0209-01	10	1	p. 33	1139-1443-01	1	1	p. 41	9632-0513-00	4	1	p. 7			
1137-0214-03	50	1	p. 15	1139-1455-01	4	4	p. 40	9650-0039-04	8	1	p. 11			
1137-0446-01	42	1	p. 15	1139-1458-01	1	1	p. 40	9653-0001-04	22	2	p. 31			
1137-1124-01	2	1	p. 33	1139-1460-01	1	1	p. 41	9665-0002-00	13	1	p. 19			
1139-0239-01	3	3	p. 41	1139-1462-01	1	1	p. 41	9665-0002-00	28	2	p. 9			
1139-0244-01	12	12	p. 40	1139-1463-01	1	1	p. 41	9675-0008-02	28	1	p. 33			
1139-1078-01	2	2	p. 41	1139-1464-01	2	2	p. 41	9695-0011-00	4	1	p. 19			
1139-1080-01	2	2	p. 41	1139-1468-01	2	2	p. 40	9695-0011-00	31	1	p. 15			
1139-1102-01	1	1	p. 41	1139-1469-01	1	1	p. 41	9699-0030-02	5	1	p. 21			
1139-1103-01	2	2	p. 40	1139-1470-01	1	1	p. 40	9699-0035-02	12	4	p. 15			
1139-1104-01	1	1	p. 40	1139-1471-01	1	1	p. 43	9699-0035-02	13	2	p. 9			
1139-1110-01	1	1	p. 40	1139-1473-01	1	1	p. 43	9699-0060-02	5	2	p. 5			
1139-1114-01	2	2	p. 41	1139-1500-01	2	2	p. 40	9699-0060-02	9	2	p. 23			
1139-1115-01	2	2	p. 41	1139-1509-01	1	1	p. 40	9699-0060-02	19	1	p. 27			
1139-1117-01	2	2	p. 40	1139-1510-01	1	1	p. 41	9699-0060-02	22	4	p. 7			
1139-1119-01	1	1	p. 40	1139-1534-01	1	1	p. 41	9699-0090-02	8	2	p. 15			
1139-1127-01	1	1	p. 41	1139-1718-01	2	2	p. 40	9699-0090-02	12	1	p. 13			
1139-1146-01	3	3	p. 40	1139-1719-01	1	1	p. 43	9699-0090-02	26	1	p. 27			
1139-1148-01	1	1	p. 41	1139-1720-01	1	1	p. 43	9699-0090-02	46	1	p. 19			
1139-1150-01	2	2	p. 40	1139-1721-01	1	1	p. 43	9699-0090-02	48	1	p. 33			
1139-1158-01	1	1	p. 40	1139-1725-01	1	1	p. 43	9699-0099-02	16	2	p. 5			
1139-1161-01	1	1	p. 40	1139-1728-01	1	1	p. 40	9699-0099-02	39	4	p. 13			
1139-1163-01	2	2	p. 41	1139-1730-01	1	1	p. 41	9699-0103-02	2	1	p. 3			
1139-1164-01	2	2	p. 41	1139-1731-01	1	1	p. 40	9699-0114-02	3	1	p. 3			
1139-1166-01	4	4	p. 41	1139-2074-01	44	1	p. 15	9699-0120-02	5	1	p. 7			
1139-1168-01	2	2	p. 41	1139-2106-01	43	1	p. 15	9710-0631-12	55	1	p. 15			
1139-1186-01	1	1	p. 41	4231-0013-00	8	1	p. 21	9731-1031-22	9	6	p. 31			
1139-1189-01	1	1	p. 40	4231-0013-00	9	1	p. 27	9731-1031-22	16	6	p. 31			
1139-1234-01	1	1	p. 41	4231-0013-00	20	1	p. 11	9739-0531-22	24	2	p. 21			
1139-1243-01	2	2	p. 40	4231-0013-00	32	1	p. 33	9739-0631-22	7	1	p. 27			
1139-1245-01	1	1	p. 40	9400-0280-03	49	1	p. 19	9739-0631-22	19	2	p. 11			
1139-1248-01	2	2	p. 41	9400-0282-01	42	1	p. 19	9739-0631-22	29	2	p. 21			
				9400-0290-01	99	1	p. 19	9739-0631-22	38	1	p. 23			

code	pos.	q.ty	page
337060002/0	21	1	p. 37
337060003/0	31	1	p. 37
337394201/0	57	1	p. 15
337546547/0	51	2	p. 35
337580550/0	75	1	p. 17
337600000/0	56	1	p. 35
337600010/0	2	1	p. 37
337600011/0	3	1	p. 37
337600015/0	6	1	p. 37
337670201/0	50	1	p. 33
337670201/0	63	1	p. 17
337785100/0	14	1	p. 37
387318251/0	23	1	p. 33
387520107/0	71	1	p. 17
387602503/0	51	1	p. 9
387800011/0	1	1	p. 9