



Genuine Spare Parts




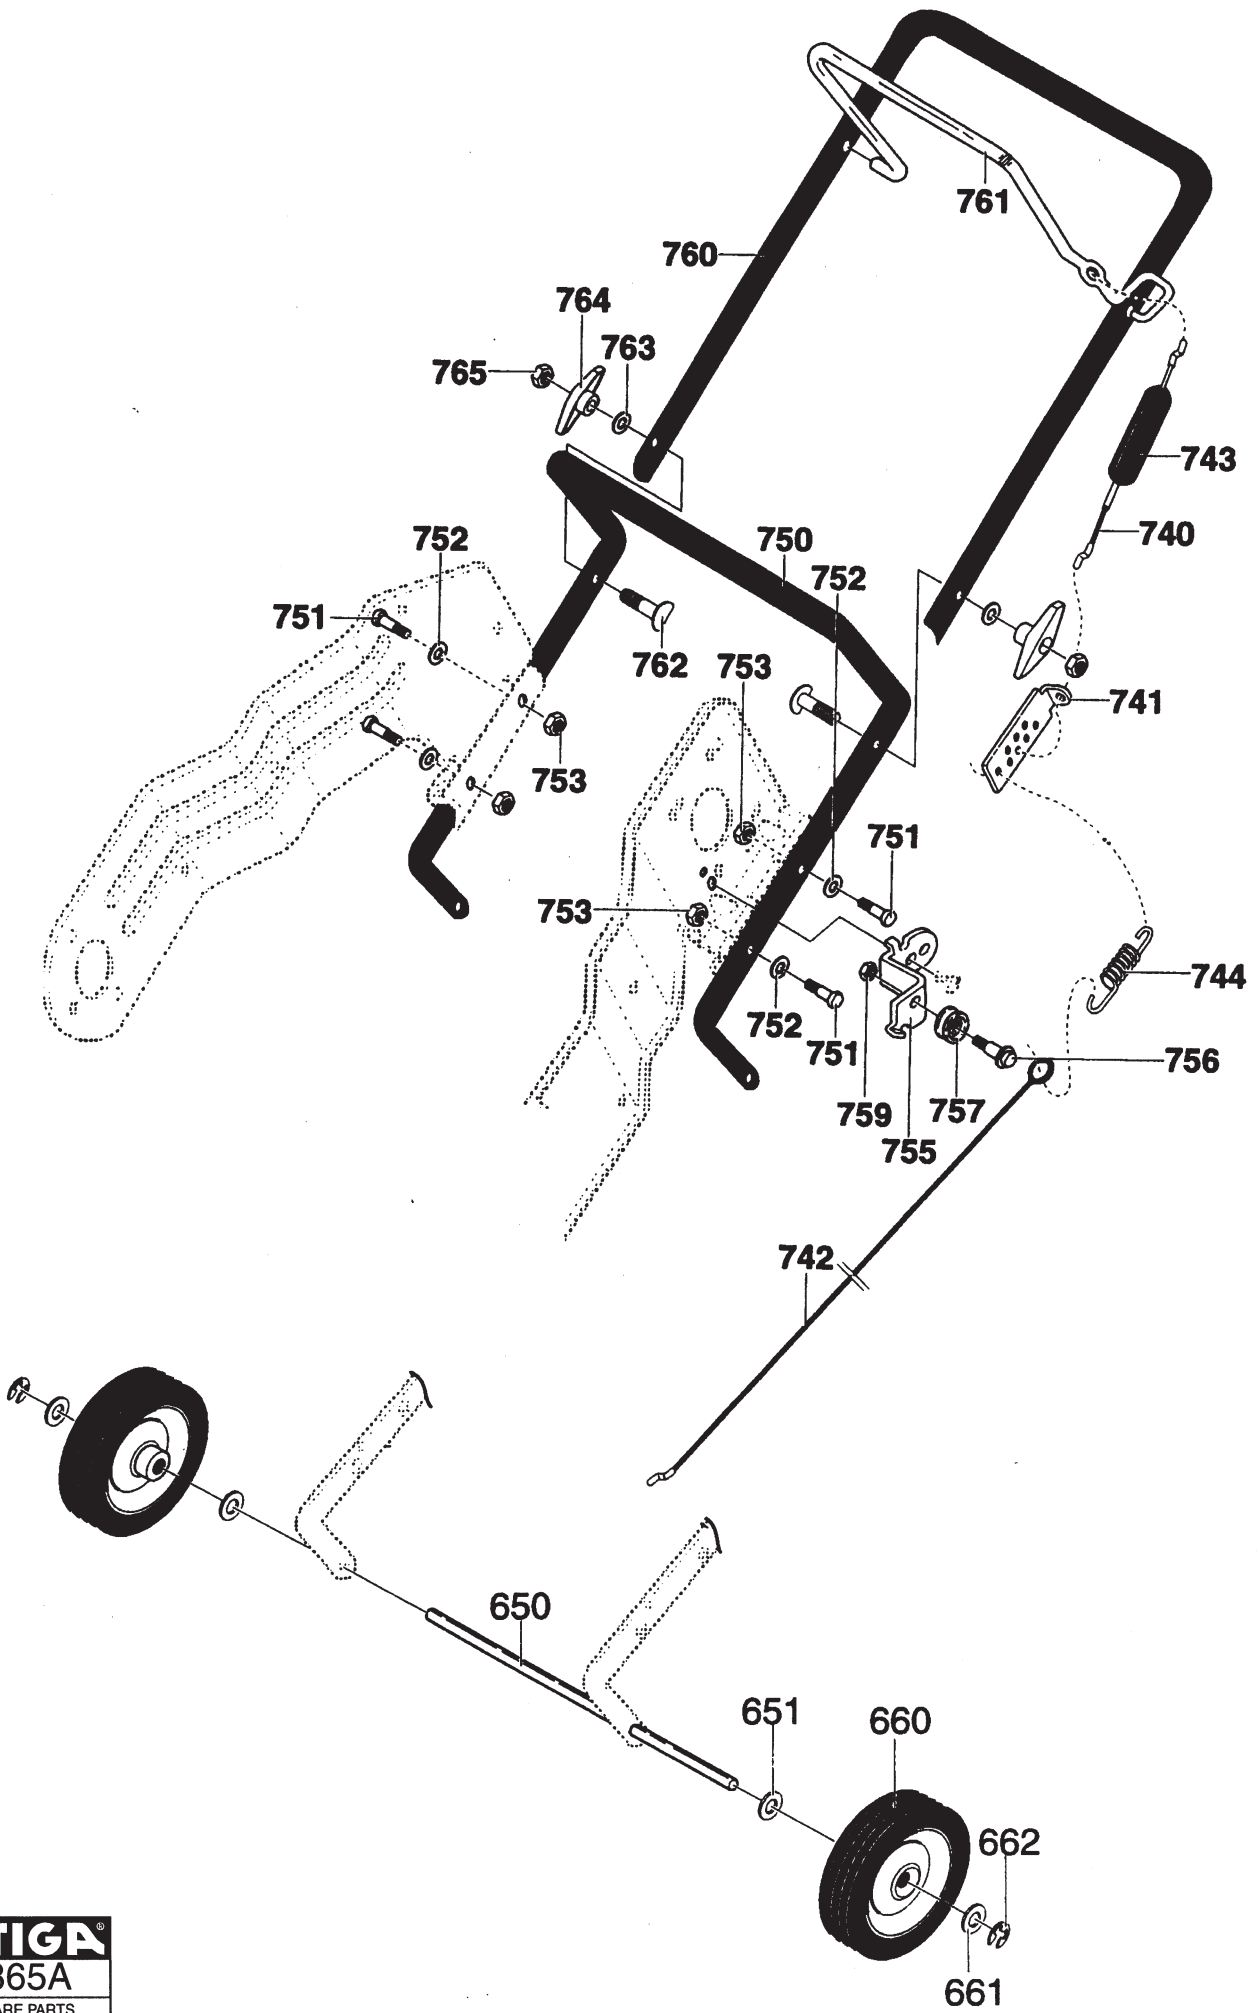



Utgåva Issue 2004-14		Bildnr Picture No 865A		SNOW STAR STYRE STÖDHJUL		SNOW STAR HANDLE SUPPORT WHEELS		Sida Page 6	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2820								
X 650	1				1812-1980-01	Hjulaxel.....	Wheel axle.....		
651	2				9699-0030-02	Planbricka.....	Flat washer.....		
660	2				1812-1455-01	Hjul.....	Wheel.....		
661	2				9699-0030-02	Planbricka.....	Flat washer.....		
662	2				1133-1021-01	Låsring.....	Retaining ring.....		
740	1				1812-1457-01	Reglagewire- övre.....	Control cable- upper.....		
741	1				1133-0977-01	Wirefäste.....	Cable adjust bracket.....		
742	1				1812-1456-01	Reglagewire- nedre.....	Control cable- lower.....		
743	1				1133-0968-01	Wirehylsa.....	Clutch spring boot.....		
744	1				1812-1670-01	Fjäder.....	Spring.....		
750	1				1133-0984-01	Styre underdel.....	Lower handle.....		
751	4				9988-3532-12	Skruv.....	Screw.....		
752	4				9699-0028-02	Planbricka.....	Flat washer.....		
753	4				1812-0812-01	Låsmutter.....	Locking nut.....		
755	1				1812-1515-01	Fäste.....	Bracket.....		
756	1				1133-0262-01	Ansatsbult.....	Shoulder bolt.....		
757	1				1133-0059-01	Linhjul.....	Pulley.....		
759	1				1812-0812-01	Låsmutter.....	Locking nut.....		
760	1				1133-1009-01	Styre överdel.....	Upper handle.....		
761	1				1133-0972-01	Inkopplingshandtag.....	Control bail.....		
762	2				1133-1017-01	Skruv.....	Bolt.....		
763	2				1133-0933-01	Kupad bricka.....	Formed washer.....		
764	2				1133-0932-01	Låsratt.....	T- knob.....		
765	2				9795-3631-02	Mutter.....	Nut.....		
X 998	1				8218-2203-08	Bruksanvisning.....	Owner's manual.....		Ej ill/not ill.

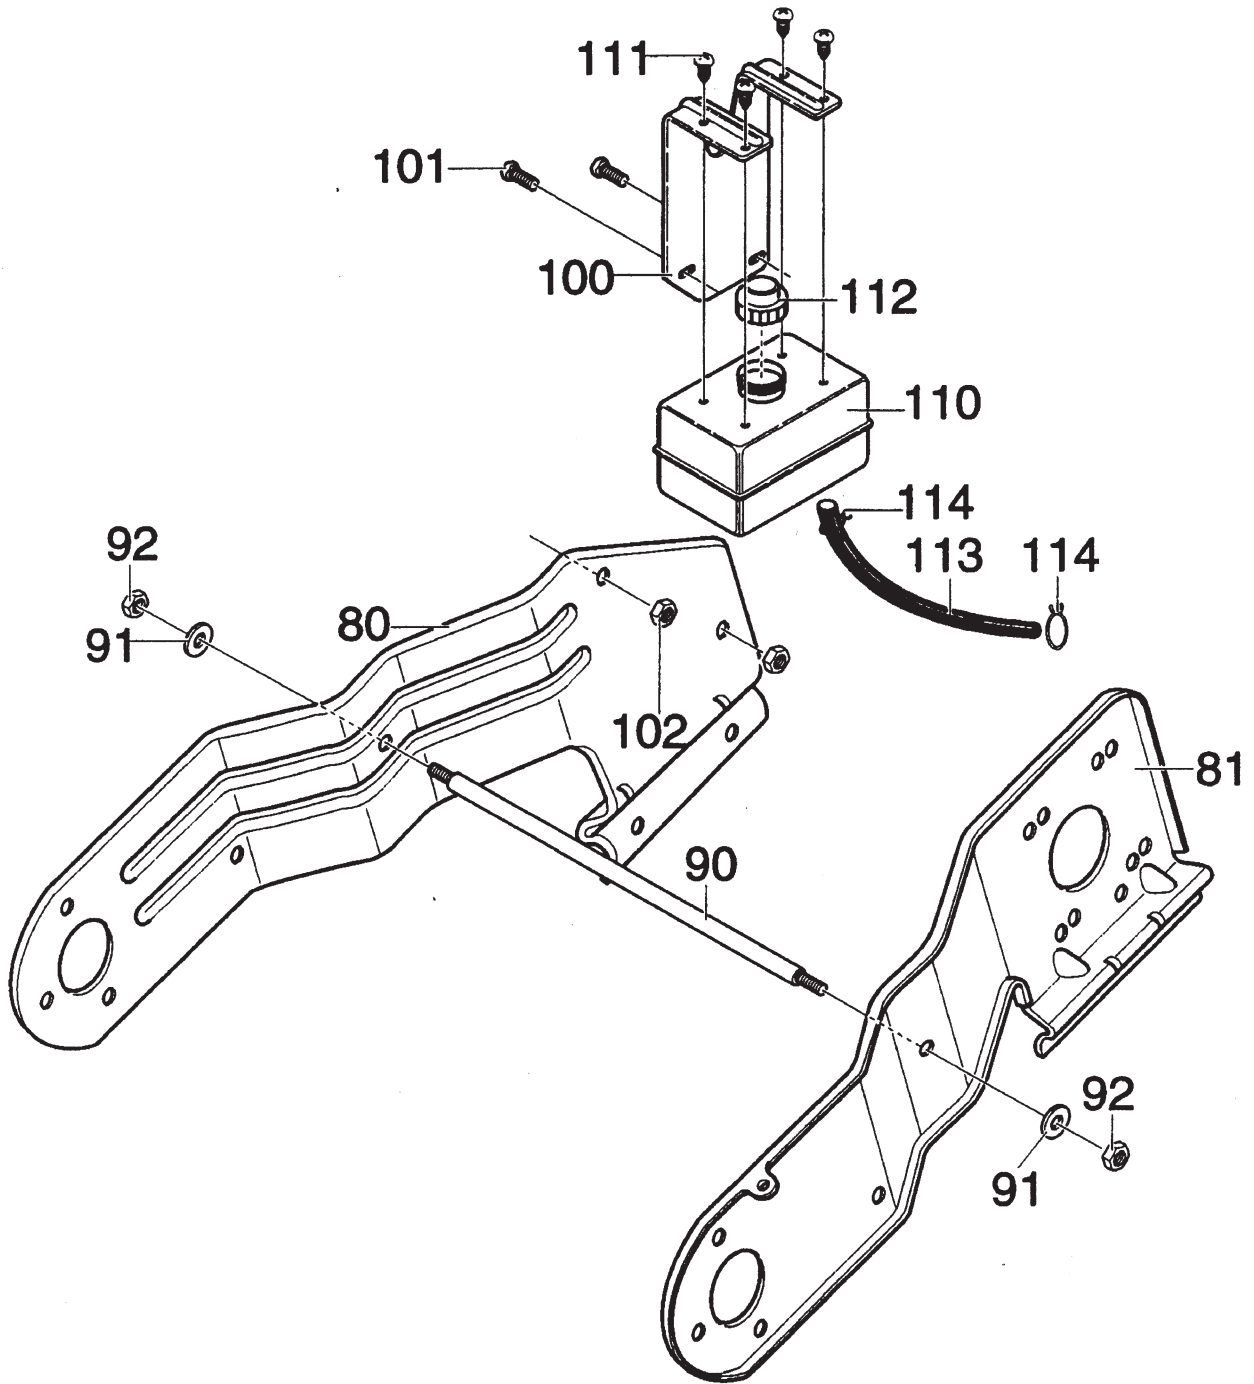


Utgåva Issue 2004-14		Bildnr Picture No 1093		SNOW STAR RAM BRÄNSLETANK		SNOW STAR FRAME FUEL TANK		Sida Page 8
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2820							
80	1			1812-1438-01	Ramhalva- hö.....	Side frame- R.H.....		Volym 0.95 lit.
81	1			1812-1437-01	Ramhalva- vä	Side frame- L.H.		
90	1			1812-1431-01	Stödstag	Support rod.....		
91	2			9683-0035-02	Låsbricka	Lock washer		
92	2			9795-3731-02	Mutter.....	Nut		
100	1			1133-0941-01	Tankfäste	Fuel tank bracket		
101	2			9988-3519-16	Skruv	Screw		
102	2			1812-0812-01	Låsmutter	Locking nut		
110	1			1133-0954-01	Bränsletank.....	Fuel tank		
111	4			1133-0939-01	Skruv	Screw		
112	1			1812-1554-01	Tanklock	Gas tank cap		
113	1			1133-0992-01	Bränsleslang	Fuel line tubing.....		
114	2			1812-1487-01	Slangklämma.....	Fuel line clamp		

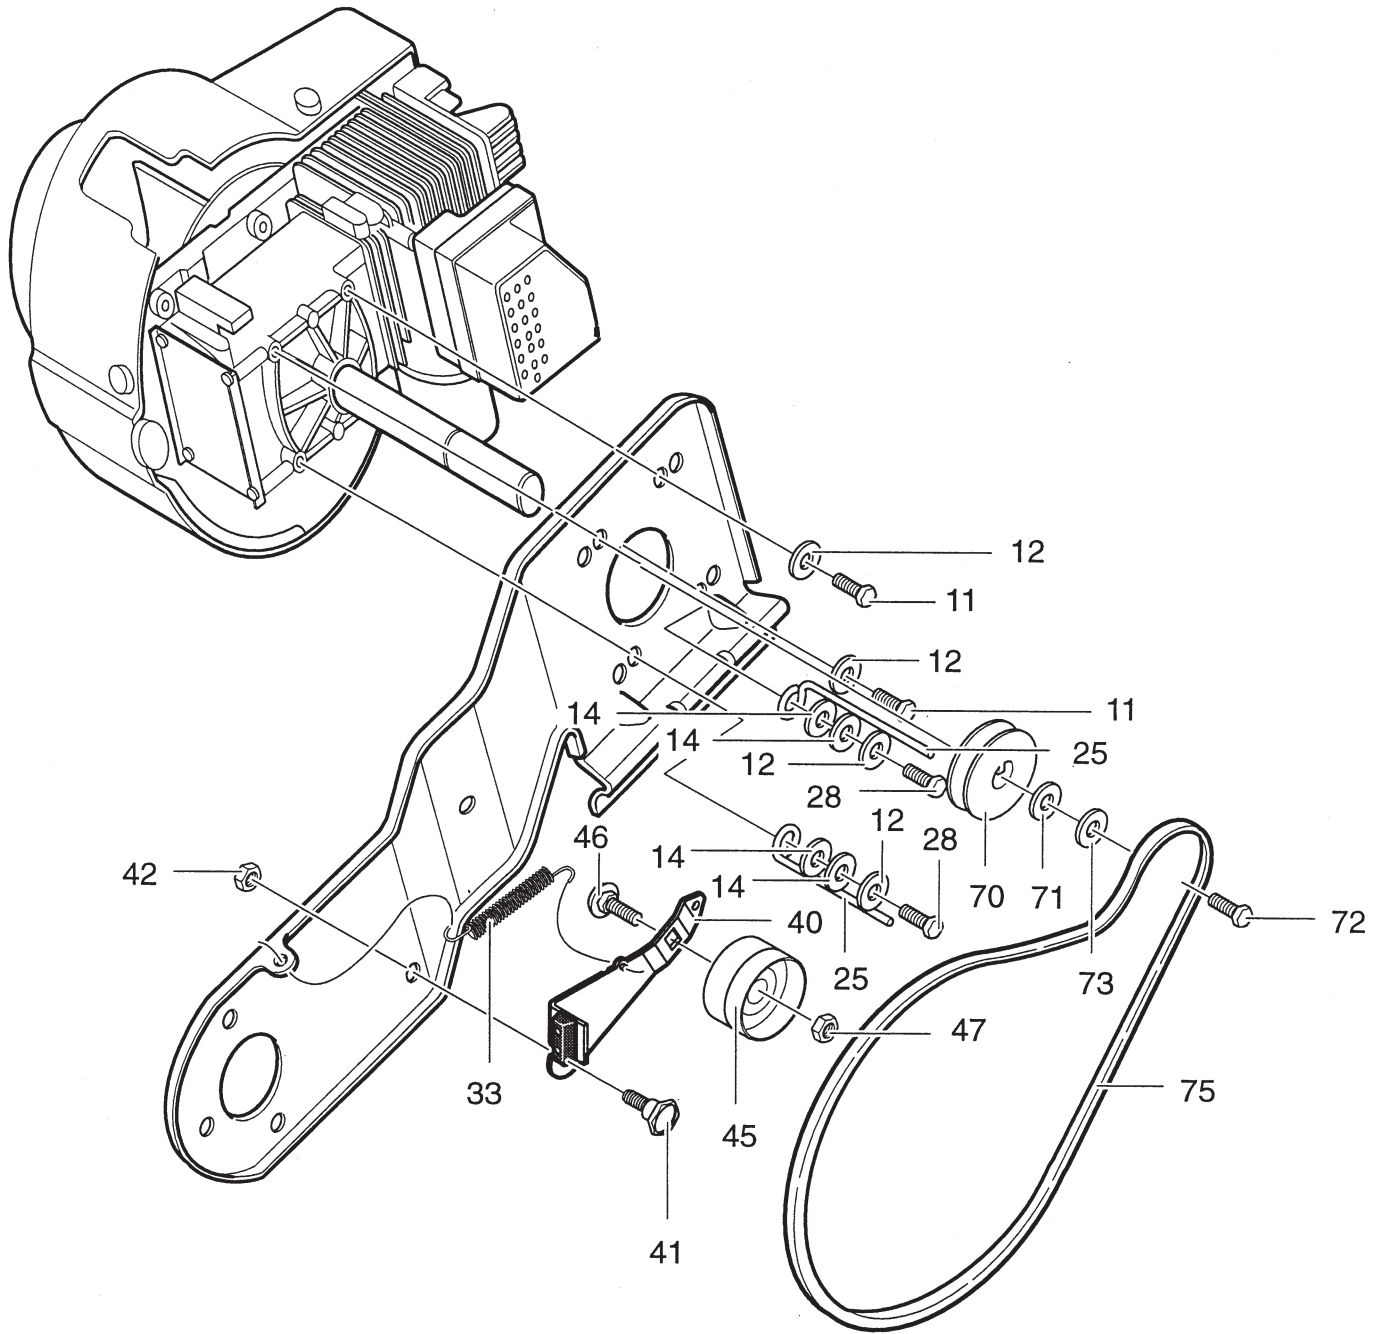



Utgåva Issue 2004-14		Bildnr Picture No 954A		SNOW STAR REMTRANSMISSION MOTOR	SNOW STAR BELT TRANSMISSION ENGINE	Sida Page 10		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2820							
11	2			9988-3619-16	Skruv	Screw		
12	4			9683-0030-02	Låsbricka	Lock washer		
14	4			9699-0029-02	Planbricka	Flat washer		
25	2			1133-0976-01	Remstyrning	Belt guide		
28	2			9988-3625-16	Skruv	Screw		
33	1			1812-1671-01	Fjäder	Spring		
40	1			1812-1604-01	Spännarm	Idler arm		
41	1			1812-1829-01	Ansatsbult	Shoulder bolt		
42	1			1812-0811-01	Låsmutter	Locking nut		
45	1			1133-0936-01	Spännrulle	Idler pulley		
46	1			1133-0084-01	Vagnsbult	Carriage bolt		
47	1			9743-3721-32	Mutter	Nut		
70	1			1812-1399-01	Motorremskiva	Engine pulley		
71	1			9699-0062-02	Planbricka	Flat washer		
72	1			9987-5119-16	Skruv	Screw		
73	1			9683-0030-02	Låsbricka	Lock washer		
75	1			1812-9025-01	Drivrem	Drive belt		

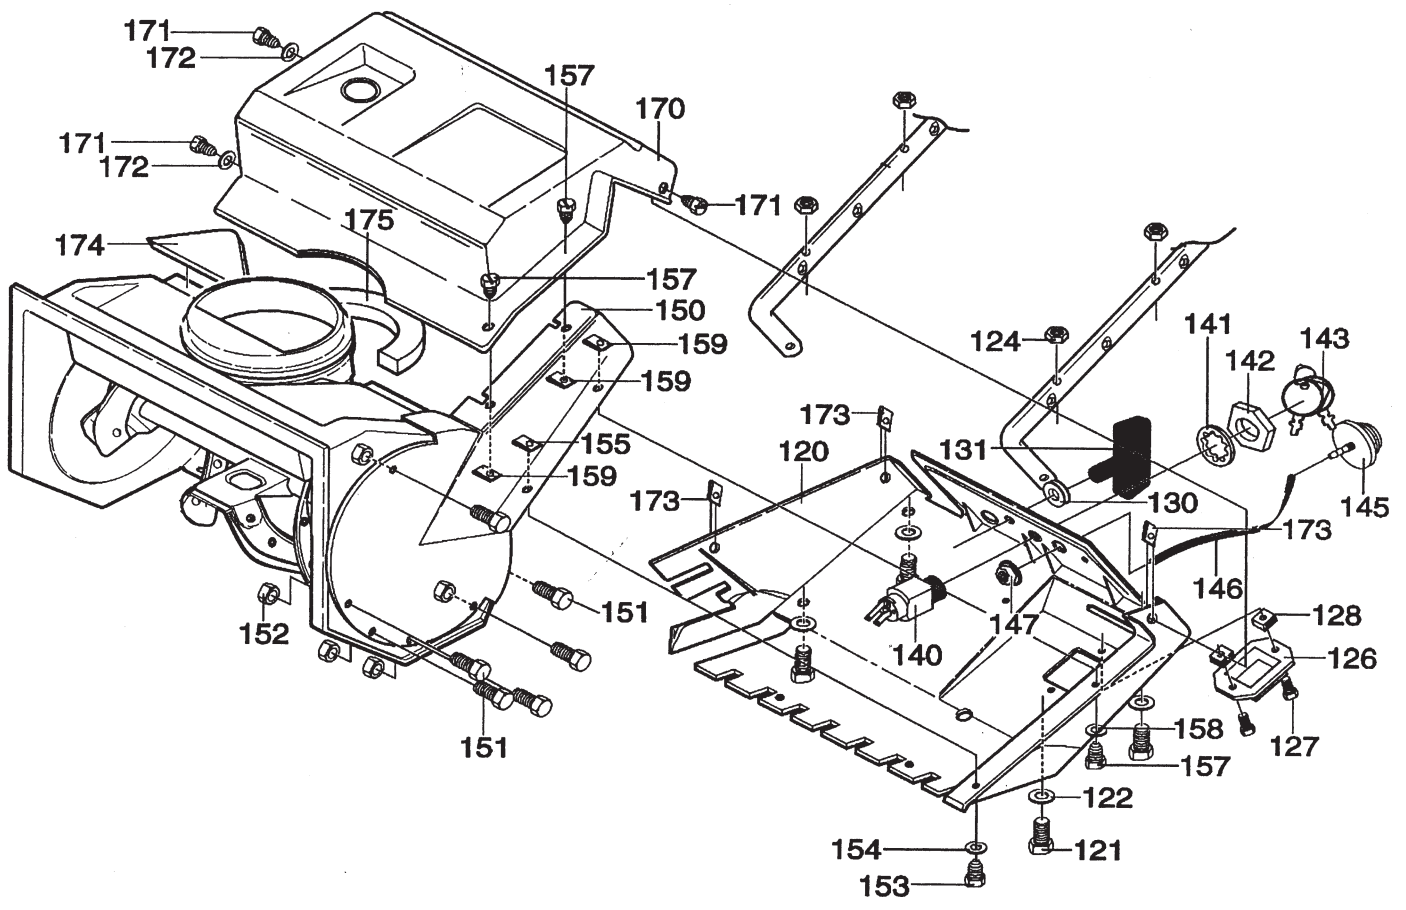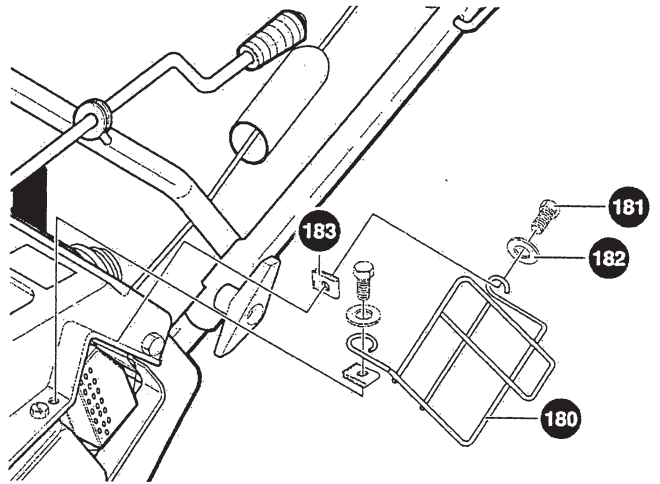


Utgåva Issue		Bildnr Picture No		SNOW STAR KÅPOR		SNOW STAR COVERS		Sida Page	
2004-14		868B						12	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2820								
120	1			1812-1384-01	Kåpa-nedre	Cover- bottom			
121	4			9988-3532-12	Skruv	Screw			
122	4			9699-0028-02	Planbricka.....	Flat washer.....			
124	4			1812-0812-01	Låsmutter	Locking nut.....			
126	1			1812-1396-01	Förgasarlok	Carburettor cover.....			
127	2			1133-0955-01	Skruv	Screw			
128	2			1133-1026-01	Snabbmutter.....	Speed nut.....			
130	1			1133-0962-01	Linhylsa	Grommet & rope guide			
131	1			1133-0995-01	Starthandtag	Starter grip.....			
140	1			1133-0956-01	Tändningslås	Ignition switch			
141	1			1134-2853-01	Bricka	Washer.....			
142	1			1134-2852-01	Mutter.....	Nut.....			
143	1			1134-2848-01	Tändningsnyckel.....	Ignition key			
145	1			1133-0949-01	Primernippel.....	Primer.....			
146	1			1133-0930-01	Primerslang	Primer hose			
147	1			9795-3531-02	Mutter.....	Nut.....			
150	1			1133-0957-01	Remskydd	Belt cover.....			
151	6			1812-0959-01	Bult.....	Bolt.....			
152	6			1812-0630-01	Mutter.....	Nut.....			
153	1			9988-3516-16	Skruv	Screw			
154	1			9699-0028-02	Planbricka.....	Flat washer.....			
155	1			1133-0942-01	Mutter.....	Nut.....			
157	3			1133-0955-01	Skruv	Screw			
158	1			9699-0028-02	Planbricka.....	Flat washer.....			
159	3			1133-1026-01	Snabbmutter.....	Speed nut.....			
170	1			1812-1557-01	Motorkåpa- övre	Cover- top			
171	3			1133-0955-01	Skruv	Screw			
172	2			9699-0028-02	Planbricka.....	Flat washer.....			
173	3			1133-1026-01	Snabbmutter.....	Speed nut.....			
174	1			1133-0952-01	Tätning	Housing seal strip			
175	1			1133-0953-01	Tätning	Chute seal strip			
180	1			1133-0961-01	Ljuddämparskydd.....	Muffler guard			
181	2			9988-3516-16	Skruv	Screw			
182	2			9699-0028-02	Planbricka.....	Flat washer.....			
183	2			1133-0942-01	Mutter.....	Nut.....			

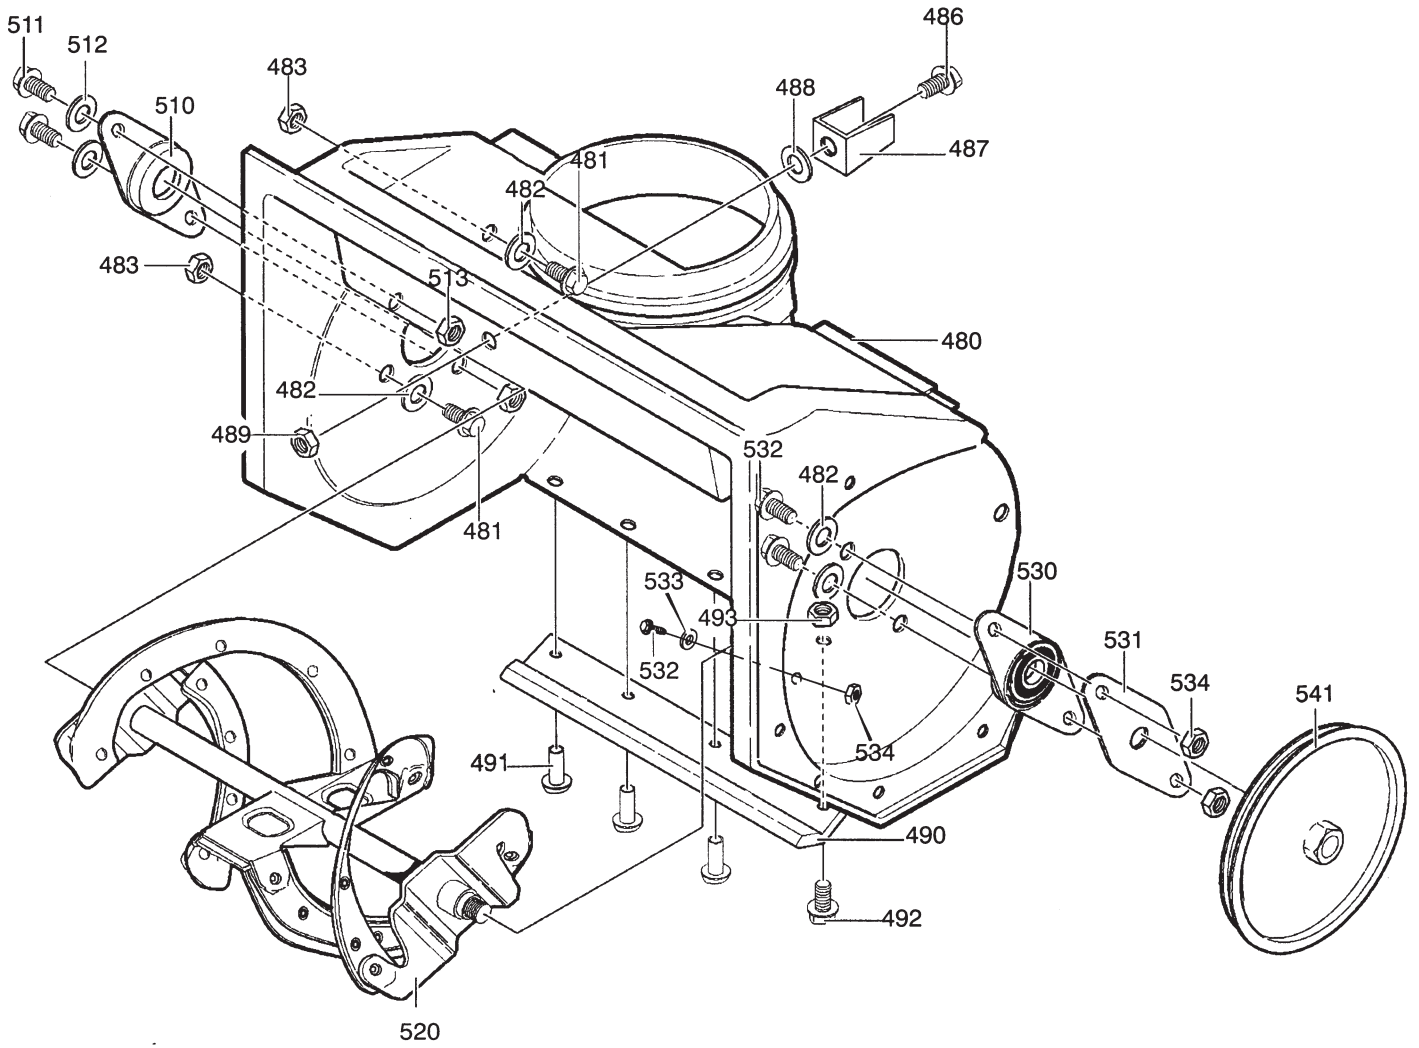

Utgåva Issue		Bildnr Picture No		SNOW STAR SNÖSKRUV		SNOW STAR AUGER		Sida Page	
2004- 14		866D						14	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2820								
480	1				1133-0994-01	Snöskruvhus	Auger housing		
481	4				9988-3519-16	Skruv	Screw		
482	4				9699-0028-02	Planbricka	Flat washer		
483	4				1812-0812-01	Låsmutter	Locking nut		
486	1				9988-3516-16	Skruv	Screw		
487	1				1133-0993-01	Vridstopp	Stop bracket		
488	1				1812-1556-01	Bricka	Washer		
489	1				9743-3521-32	Mutter	Nut		
490	1				1133-0999-01	Skrapskär	Scraper blade		
491	3				1133-1022-01	Nit	Rivet		
492	1				9988-3519-16	Skruv	Screw		
493	1				1812-1758-01	Mutter	Nut		
510	1				1133-1019-01	Flänslager	Flange bearing		
511	2				9988-3525-16	Skruv	Screw		
512	2				9699-0028-02	Planbricka	Flat washer		
513	2				1812-1758-01	Mutter	Nut		
X 520	1				1812-1981-01	Snöskruv kpl.	Auger assy		
530	1				1133-0947-01	Lager m.hållare	Bearing & plate		
531	1				1133-1000-01	Lagerhållare	Retainer plate		
532	2				9988-3516-16	Skruv	Screw		
533	1				9699-0028-02	Planbricka	Flat washer		
534	2				1812-0812-01	Låsmutter	Locking nut		
541	1				1812-1400-01	Remskiva	Pulley		

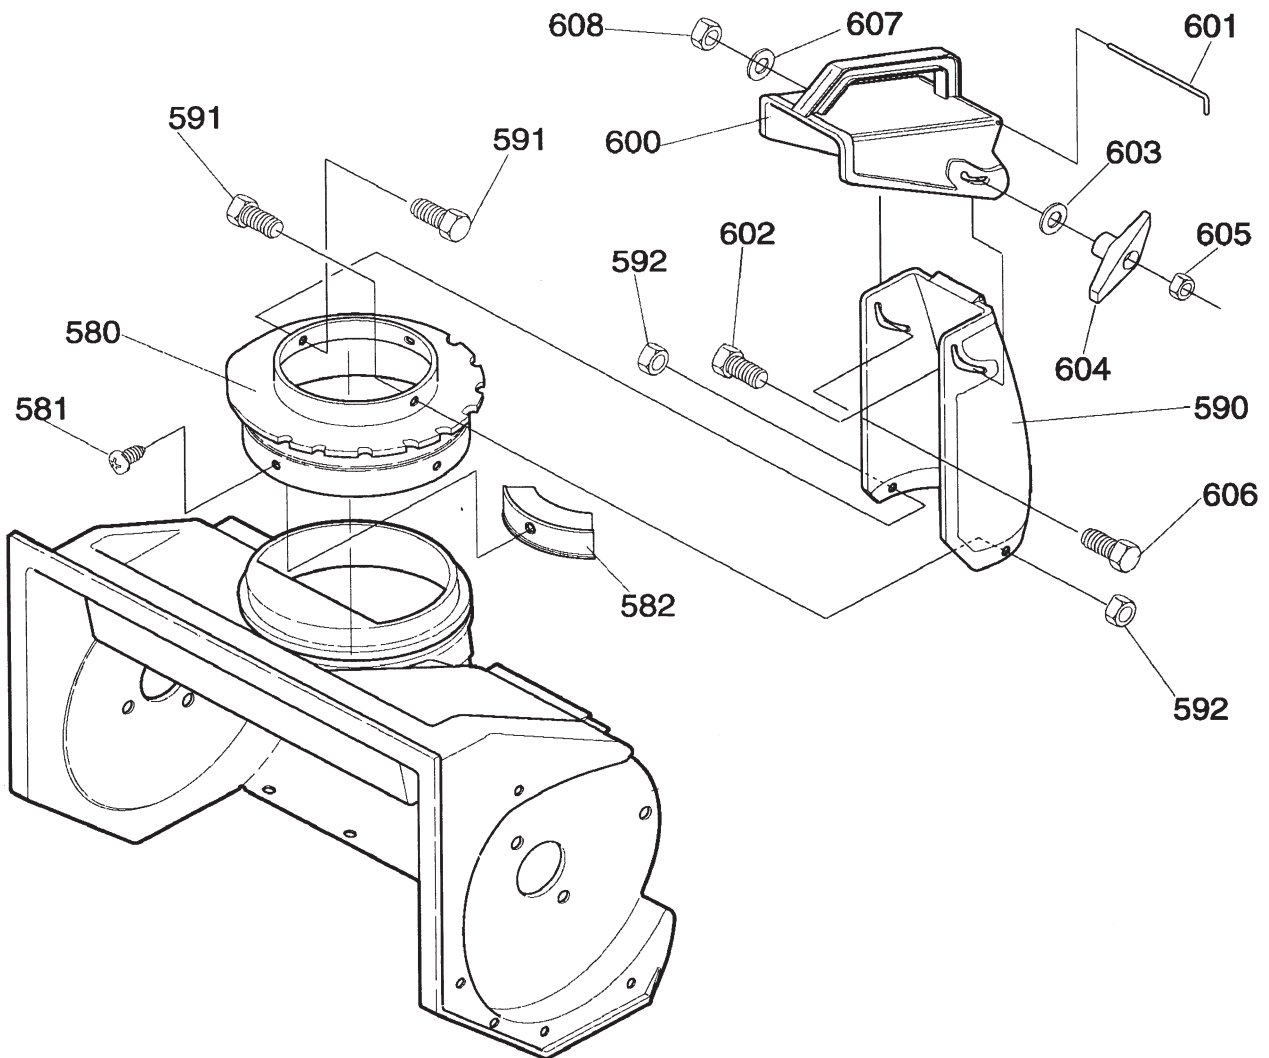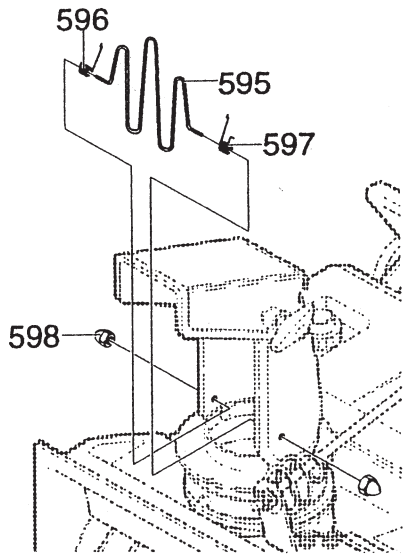

Utgåva Issue		Bildnr Picture No		SNOW STAR UTKAST SKYDD		SNOW STAR DISCHARGE CHUTE CHUTE GUARD		Sida Page	
2004-14		1764						16	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2820								
580	1				1133-0987-01	Utkastring	Chute ring		
581	4				1133-1014-01	Skruv	Screw		
582	4				1133-1018-01	Utkastledplåt	Chute guide		
590	1				1133-1004-01	Utkaströr	Lower chute		
591	2				9899-3516-16	Skruv	Screw		
592	2				1812-1758-01	Mutter	Nut		
595	1				1133-0970-01	Utkastskydd	Wire chute guide		
596	1				1133-0944-01	Fjäder	Torsion chute spring		
597	1				1133-0945-01	Fjäder	Torsion chute spring		
598	2				1133-0937-01	Hattlåsning	Acorn nut		
600	1				1133-0967-01	Utkastskärm	Upper chute		
601	1				1133-0969-01	Gångjärnsaxel	Hinge wire		
602	1				9899-3632-12	Skruv	Screw		
603	1				9699-0029-02	Planbricka	Flat washer		
604	1				1133-0932-01	Låsraff	T-knob		
605	1				9795-3631-02	Mutter	Nut		
606	1				1133-1023-01	Skruv	Screw		
607	1				9699-0029-02	Planbricka	Flat washer		
608	1				1812-0811-01	Låsmutter	Locking nut		

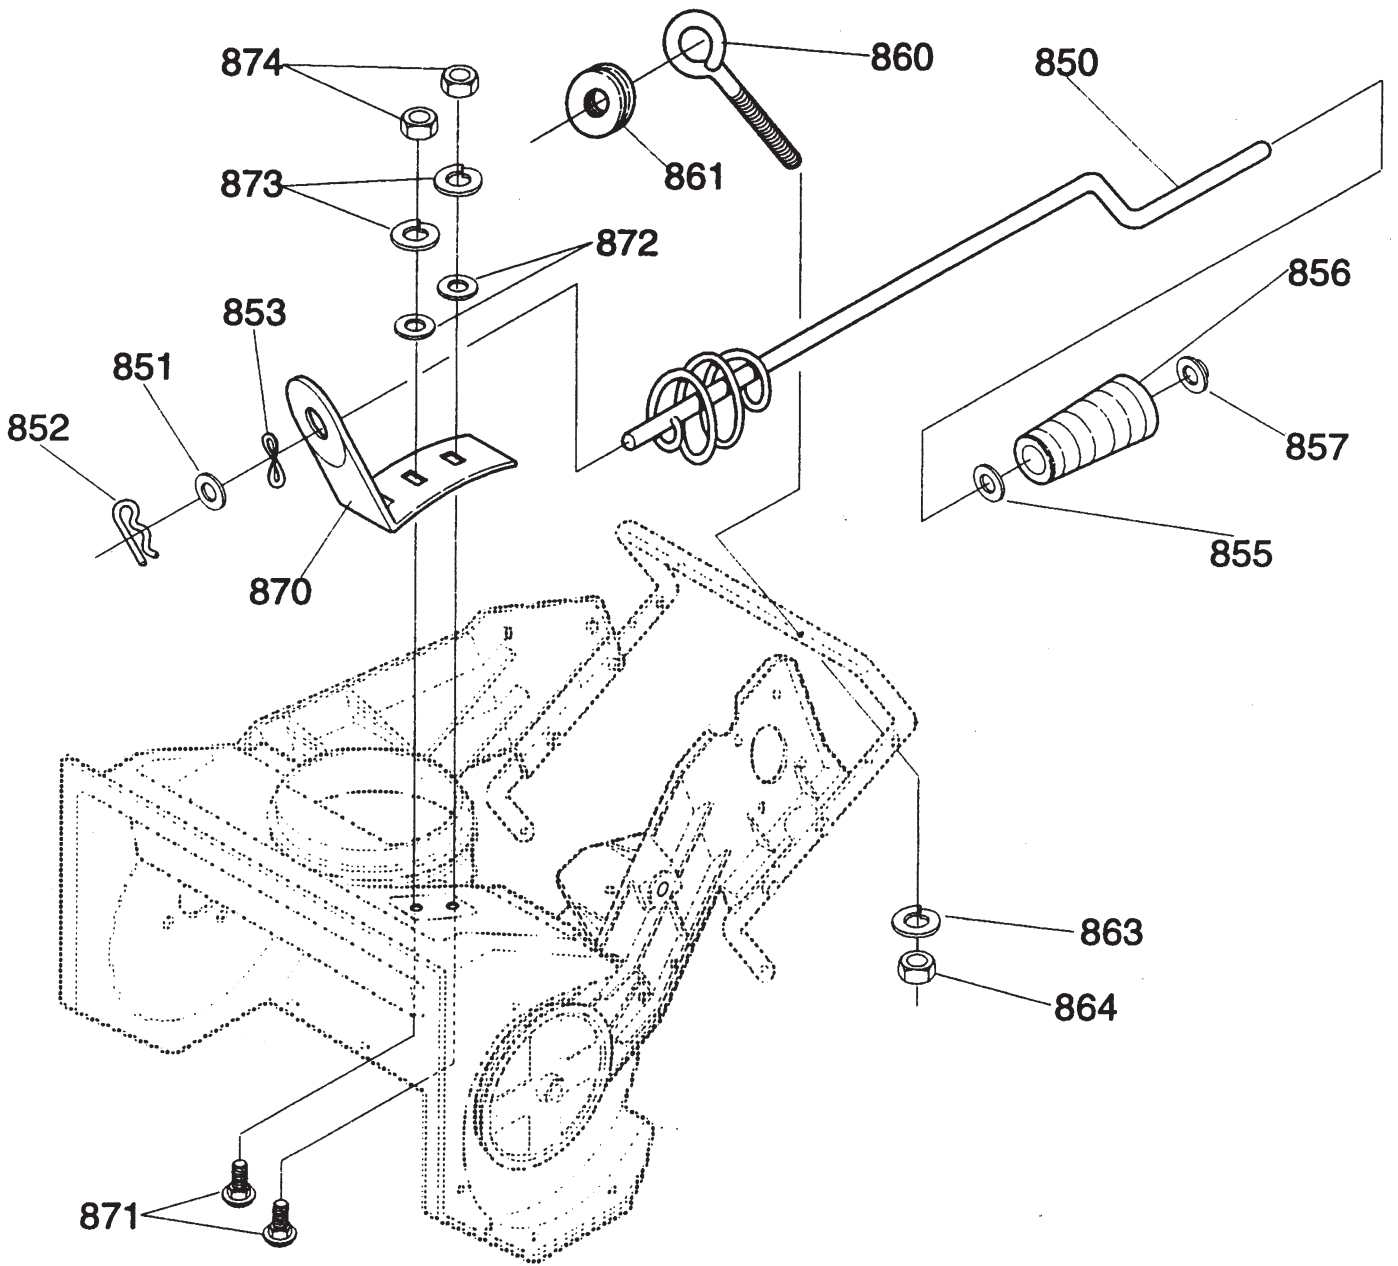

Utgåva Issue		Bildnr Picture No		SNOW STAR INSTÄLLNINGSVEV	SNOW STAR CHUTE ROD	Sida Page			
2004-14		1092				18			
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2820								
850	1			1133-0989-01	Inställningsvev.....	Upper chute rod.....			
851	1			9699-0035-02	Planbricka.....	Flat washer.....			
852	1			9599-0054-02	Saxpinne.....	Cotter pin.....			
853	1			1133-0973-01	Kupad fjäderbricka.....	Curved spring washer.....			
855	1			9699-0035-02	Planbricka.....	Flat washer.....			
856	1			1133-0959-01	Handtag.....	Knob.....			
857	1			1812-0396-01	Låsning.....	Retainer.....			
860	1			1812-1553-01	Öglebult.....	Eye bolt.....			
861	1			1812-0203-01	Hylsa.....	Grommet.....			
863	1			9683-0035-02	Låsbricka.....	Lock washer.....			
864	1			9743-3721-32	Mutter.....	Nut.....			
870	1			1812-1493-01	Vevfäste.....	Chute rotation brkt.....			
871	2			9899-3622-16	Skruv.....	Screw.....			
872	2			9699-0029-02	Planbricka.....	Flat washer.....			
873	2			9683-0030-02	Låsbricka.....	Lock washer.....			
874	2			9795-3631-02	Mutter.....	Nut.....			